



bravo400

**BRAVO 400 SERIES COMPUTERS
WITH INTEGRATED GPS GUIDE**


CE

**4674X501
4674X701
4674X511
4674X711
4674X721
46742DX1**

Software rel. 1.2X

INSTALLATION, USE AND MAINTENANCE

 = Generic danger

 = Warning

 = Only for version with nozzle holder control

This manual is an integral part of the equipment to which it refers and must accompany the equipment in case of sale or change of ownership. Keep it for any future reference; ARAG reserves the right to modify product specifications and instructions at any moment and without notice.


•	Symbol legend	2
1	Risks and protections before assembly	7
2	Bravo DSB	7
3	Intended use.....	7
4	Precautions	7
5	Contents of the package	7
6	Position on the machine	8
6.1	Recommended system layout.....	8
6.2	Monitor and control unit location.....	11
6.3	Mounting the bracket	12
6.4	Securing the control unit (RCU).....	12
6.5	Control unit location	12
6.6	Location of oil-hydraulic and pneumatic assemblies.....	12
6.7	Locating the GPS receiver.....	13
7	Connecting the computer to the agricultural equipment	15
7.1	General precautions for cable position	15
7.2	Power supply connection	15
8	Harness connection to control unit, pneumatic assembly and other available functions	16
8.1	Connecting the switches panel.....	16
8.2	Connecting the remote control unit (RCU).....	16
8.3	Connecting the control unit valves	16
8.4	Connecting the hydraulic valves	17
8.5	Connecting the sensors	18
8.6	Connecting the cameras.....	18
8.7	SD memory card.....	19
9	Programming.....	20
9.1	Pre-programming tests and checks	20
9.2	Switching on	20
9.3	Switching off.....	21
9.4	Using the programming keys	21
10	ADVANCED PROGRAMMING - Machine settings.....	22
10.1	Boom settings	23
10.1.1	Nozzle number	23
10.1.2	Output 1 ÷ 13.....	23
10.2	Valves	24
10.2.1	Boom sections.....	24
10.2.2	Auto switch-off.....	24
10.2.3	Pressure regulator	24
10.2.4	Main valve	25
10.2.5	Selejet.....	25
10.2.6	Section activation time.....	25
10.3	GPS receiver	26
10.3.1	Position.....	26
10.3.2	Distance.....	26
10.3.3	Antenna height	26
10.3.4	DGPS.....	26
10.4	Flowmeter	27
10.4.1	Type	27
10.4.2	Rate alarms.....	27
10.4.3	Constant	27
10.5	Pressure sensor	28
10.5.1	Pressure sensor.....	28
10.5.2	Maximum pressure.....	28
10.6	Tank	29
10.6.1	Capacity	29
10.6.2	Minimum level alarm.....	29
10.7	Filling flowmeter	30
10.7.1	Type	30
10.7.2	Constant	30
10.8	Rev counter.....	31
10.8.1	Rev counter	31
10.8.2	Constant	31
10.8.3	Speed alarms	31
10.9	Pump Protector	32
10.10	Maximum speed alarm	32
10.11	Options	33
10.11.1	Language	33
10.11.2	Timezone	33

11 USER PROGRAMMING - User menu	34
11.1 How does the SELEJET system work	35
11.2 Treatment settings.....	36
11.2.1 Status.....	36
11.2.2 Target rate.....	36
11.2.3 Nozzle.....	36
11.3 Nozzles settings	37
11.3.1 Flowrate - Pressure.....	37
11.3.2 Minimum pressure - Maximum pressure.....	37
11.4 Working limits	38
11.4.1 Minimum spraying speed	38
11.4.2 Minimum regulation pressure	38
11.4.3 Sections overlapping limit	39
11.4.4 Boundary sct. management.....	39
11.4.5 Intentional overlap	40
11.5 Alarms	41
11.5.1 Steer radius	41
11.5.2 Nozzle wear check	41
11.5.3 HDOP level.....	42
11.5.4 Nozzle pressure alarm.....	42
11.6 User preferences	43
11.6.1 'Guidance' screen	43
11.6.2 'Spraying' screen	43
11.6.3 Led bar	44
11.6.4 Acoustic alarm.....	44
11.6.5 Keypad tone	44
11.6.6 Camera 1 / Camera 2	45
11.6.7 User key.....	45
11.7 Memories management	46
11.7.1 Internal memory	46
Copy files to SD card.....	46
Move picture to SD card.....	47
Delete internal memory files	48
11.7.2 SD card	49
Copy files to internal memory	49
Delete SD card files.....	50
Prepare SD card.....	51
Date logger.....	51
11.7.3 Load / Save settings	52
Load settings from SD card.....	52
Save settings to SD card.....	52
11.8 Speed	53
11.8.1 Source	53
Wheel constant.....	53
Constant calculation	53
11.9 Test	54
11.9.1 Display test	54
11.9.2 Keyboard and input test	54
11.9.3 Signals test	55
11.9.4 Software versions	55
11.9.5 Signals simulation	55
12 Use	56
12.1 Computer controls	56
12.2 Using keys	56
12.3 Operating switches for control unit valves.....	57
12.4 Operating switches for hydraulic valves	57
12.5 Display	58
12.6 Spraying boom.....	60
12.7 Spray rate regulation.....	62
12.8 Importing and using a prescription map	62
12.9 Spraying a field	63

13 Work functions	64
13.1 Functions List: PAGE 1	65
13.1.1 F1 Job type	65
13.1.2 F1 Job type	66
13.1.3 F2 Pause	67
13.1.4 F3 Mode	68
13.1.5 F4 Return.....	69
13.1.6 F5 P.O.I.....	70
13.1.7 F6 Align	71
13.1.8 F7 Area.....	72
13.1.9 FB Tank	73
13.2 Functions list: PAGE 2.....	74
13.2.1 F1 Job resume	74
13.2.2 F2 Mark AB.....	76
13.2.3 F3 2D-3D.....	77
13.2.4 F4 Auto/Man.....	78
13.2.5 F6 Day / Night	78
13.2.6 F7 GPS.....	79
13.2.7 FB Pressure	79
13.3 Functions list: PAGE 3.....	80
13.3.1 F1 New job.....	80
13.3.2 F2 Waypt.....	82
13.3.3 F7 Erase.....	83
13.3.4 FB User.....	84
14 Maintenance / diagnostics / repairs	85
14.1 Alarm display	85
14.2 Pump failure alarm.....	85
14.3 Error messages	86
14.3 Troubleshooting	88
14.4 Cleaning rules.....	88
15 Technical data	89
15.1 Displayed data and relevant units of measurement	89
16 End-of-life disposal	93
17 Guarantee terms	93

1 RISKS AND PROTECTIONS BEFORE ASSEMBLY

All installation work must be done with battery disconnected, using suitable tools and any individual protection equipment deemed necessary.

 Use **ONLY** clean water for treatment tests and simulations: using chemicals during simulated treatment runs can seriously injure persons in the vicinity.

2 BRAVO DSB

ARAG has designed and manufactured a diagnostics system for Bravo series computers and the systems to which they may be connected. BRAVO DSB (code 467003) provides reliable diagnostics of computer, control unit or the whole system so as to enable the resolution of any potential problems experienced with the BRAVO DSB system.


3 INTENDED USE

The device you have purchased is a computer which, when connected to a valve or suitable control unit, makes it possible to control all phases of treatment in agricultural applications directly from the cabin of the agricultural machine in which it is installed. BRAVO 400 is a satellite navigator which can be used for agricultural purposes thanks to its GPS receiver.

 BRAVO 400 is not a road navigator and should only be used on agricultural land.

This device is designed to work on agricultural machinery for crop spraying applications. The machine is designed and built in compliance with EN ISO 14982 standard (Electromagnetic compatibility - Forestry and farming machines), harmonized with 2004/108/EC Directive.

4 PRECAUTIONS

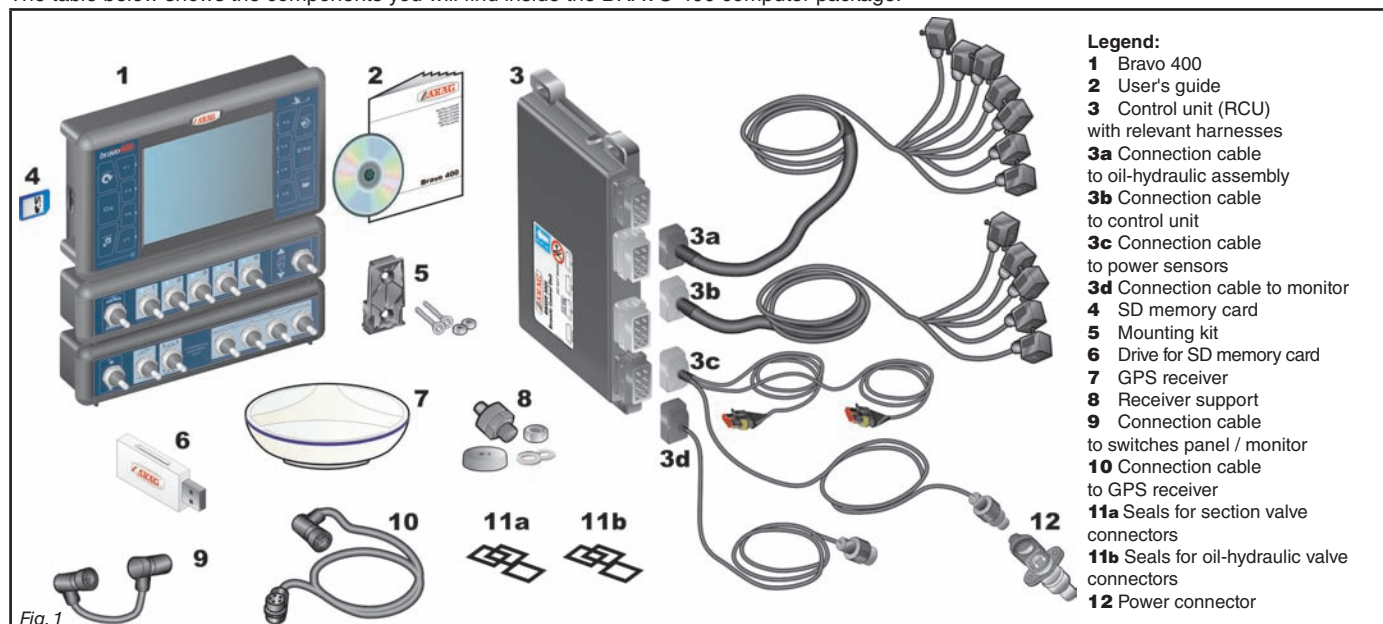
-  • Do not aim water jets at the equipment.
- Do not use solvents or fuel to clean the case outer surface.
- Do not clean equipment with direct water jets.
- Comply with the specified power voltage (12 Vdc).
- If doing arc-welding, disconnect the connectors from BRAVO 400 and disconnect its power cables.
- Only use ARAG genuine spare parts and accessories.
- Bravo 400 can control the hydraulic valves that open and close the job boom.

The computer does not feature emergency stop devices: the manufacturer must provide all necessary safety devices for the hydraulic boom control.

Any time the hydraulic boom section is opened or closed the computer emits an acoustic signal and the display shows the relevant indication. The manufacturer should also provide acoustic and optical warnings in the vicinity of the boom.



5 CONTENTS OF THE PACKAGE

The table below shows the components you will find inside the BRAVO 400 computer package:



6 POSITION ON THE MACHINE

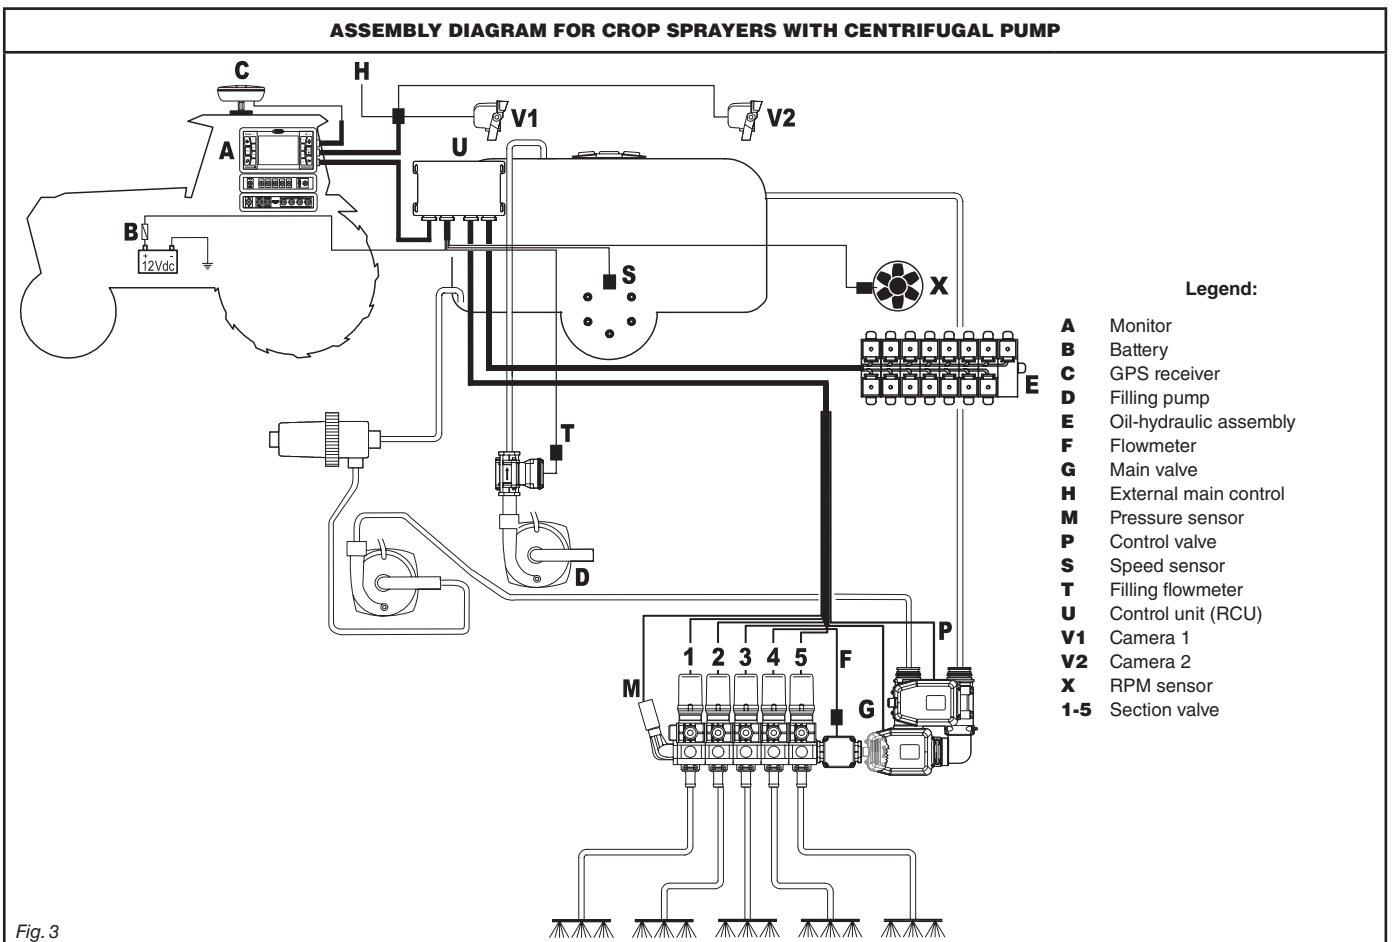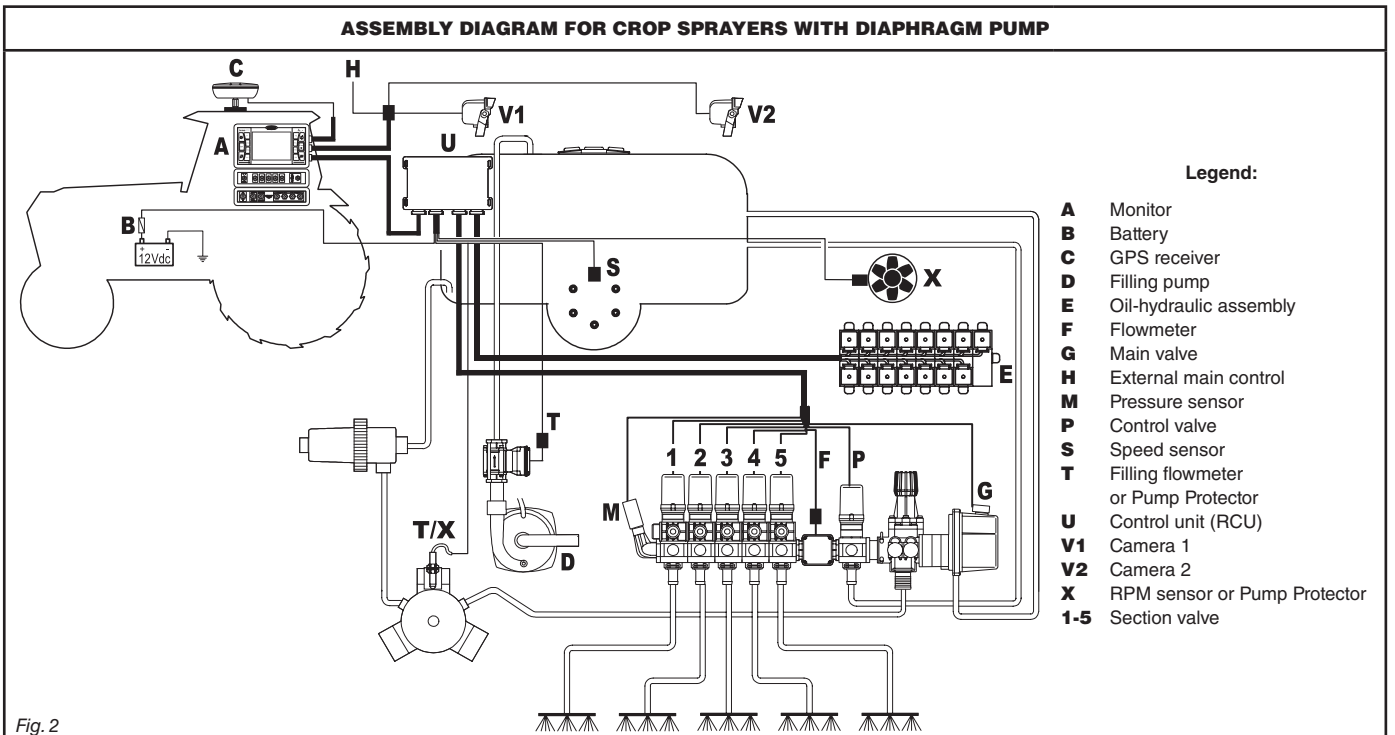6.1 Recommended system layout



ASSEMBLY DIAGRAM FOR CROP SPRAYERS WITH DIAPHRAGM PUMP - WITH NOZZLE HOLDER CONTROL **seleJET**

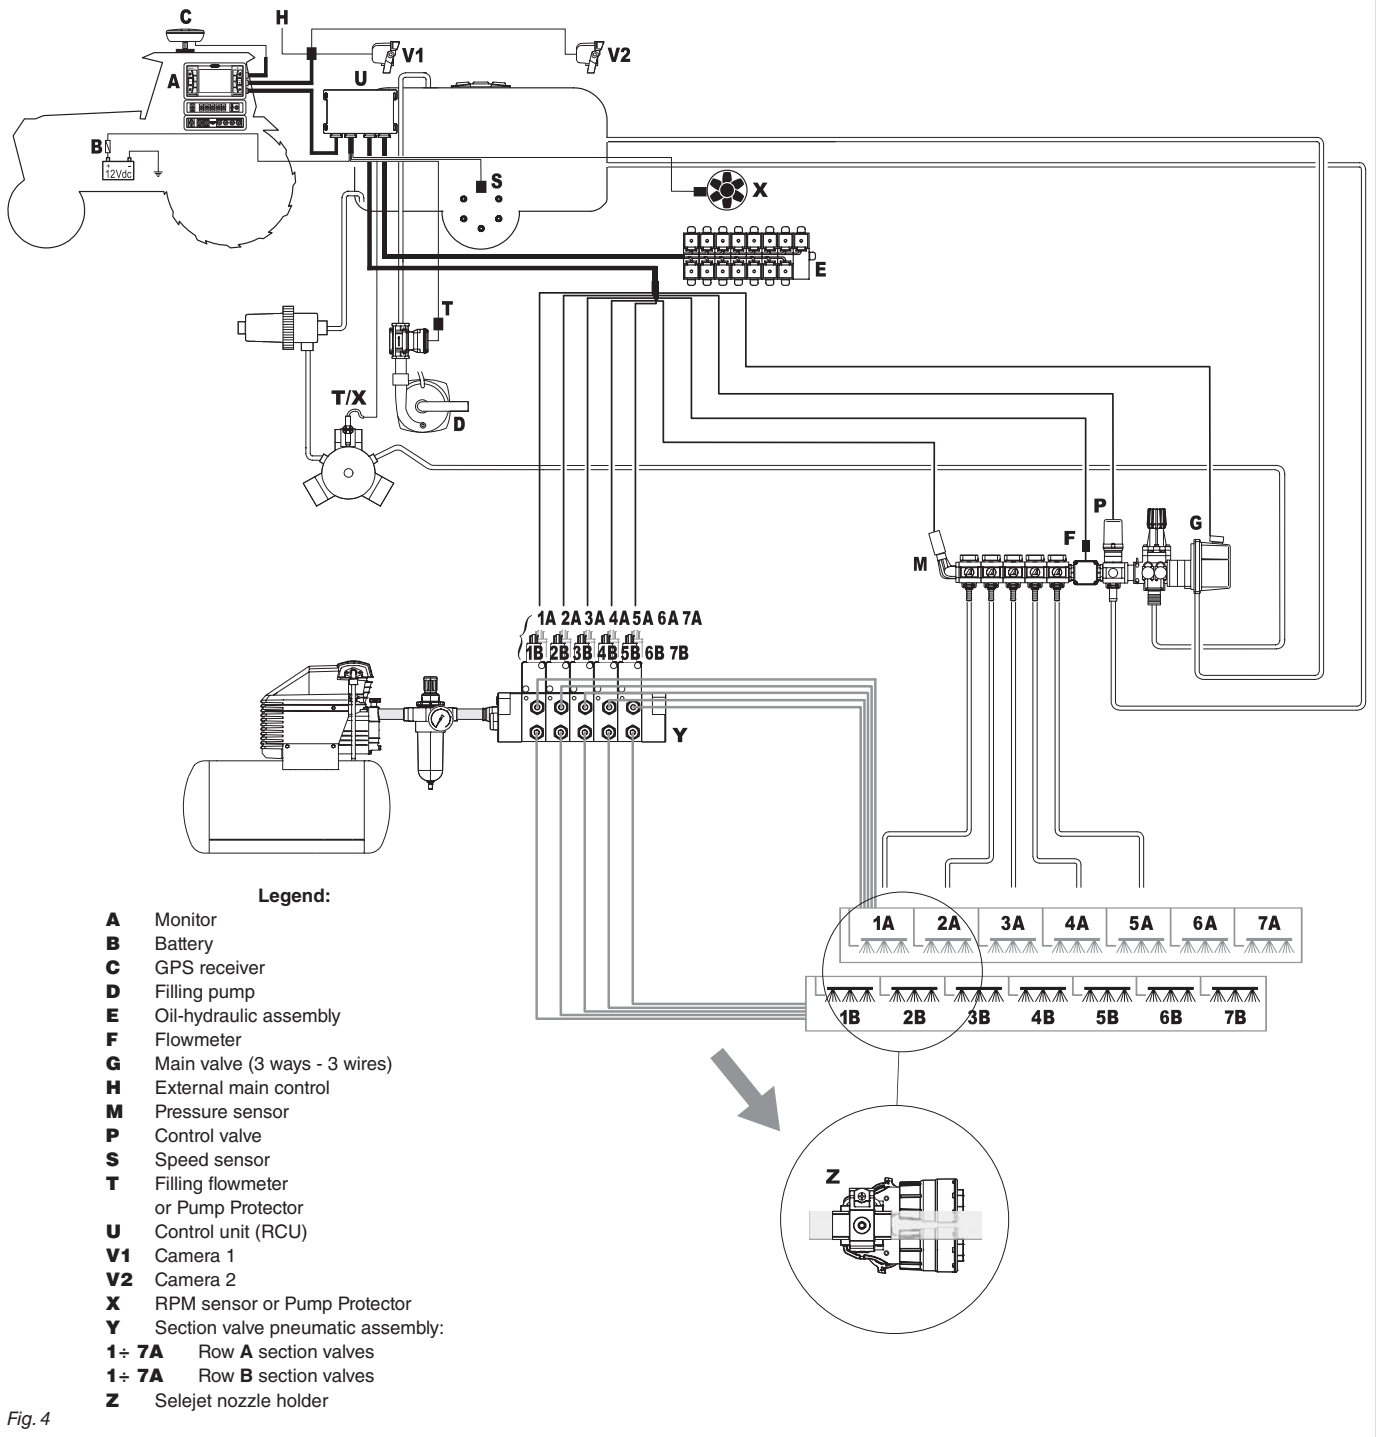


Fig. 4

ASSEMBLY DIAGRAM FOR CROP SPRAYERS WITH CENTRIFUGAL PUMP - WITH NOZZLE HOLDER CONTROL **seleJET**

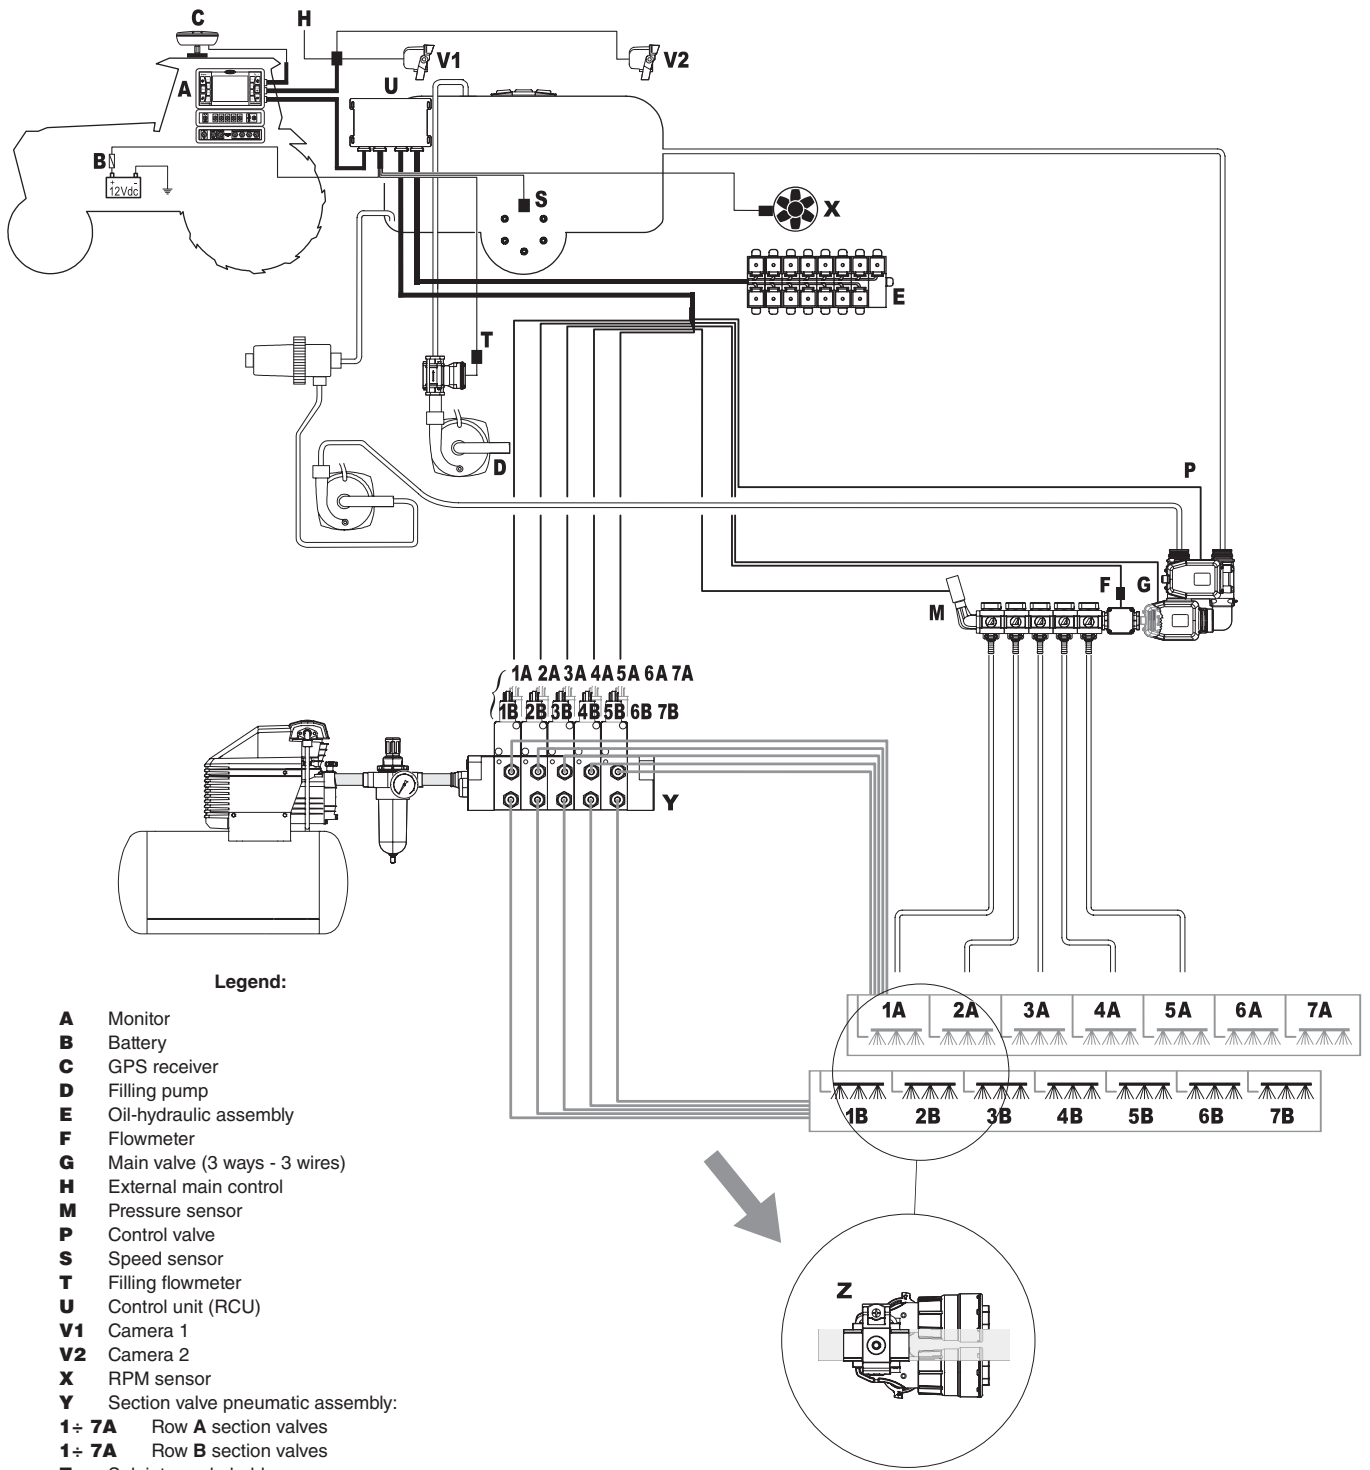


Fig. 5

6.2 Monitor and control unit location

• The BRAVO 400 series computer must be installed in the machine control cabin. Observe the following precautions:

- ⚠ - do NOT install the monitor in areas where it would be subjected to excessive vibrations or shocks, to prevent any damage or accidental use of the control keys;
- install the device in a visible position within easy reach by hand; bear in mind that the computer should not obstruct the operator's freedom of movement or block his view.

• Control unit (RCU): locate the control unit in the rear side of the machine near the control unit and the oil-hydraulic/pneumatic assemblies.

🖐 Note the connections required for the computer to operate (Fig. 6 and 7), the required length of the cables, and provide adequate space for connectors cables.
An identification symbol is located next to each connector to indicate its function. For the configuration of the systems, refer to par. 6.1 - Recommended system layout.

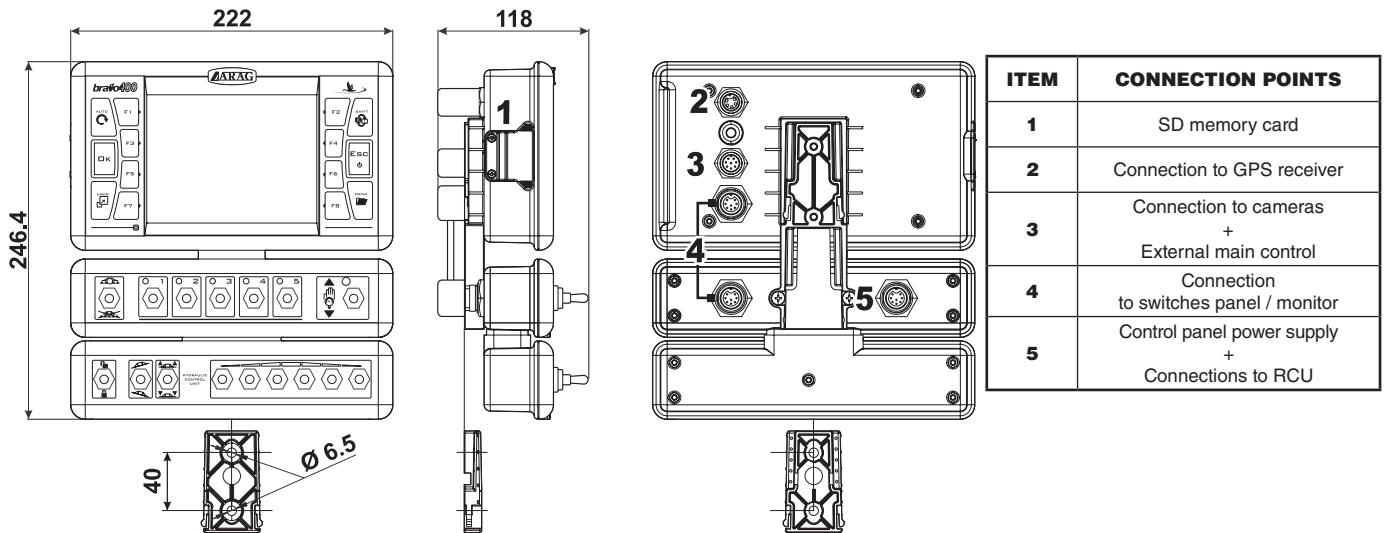


Fig. 6

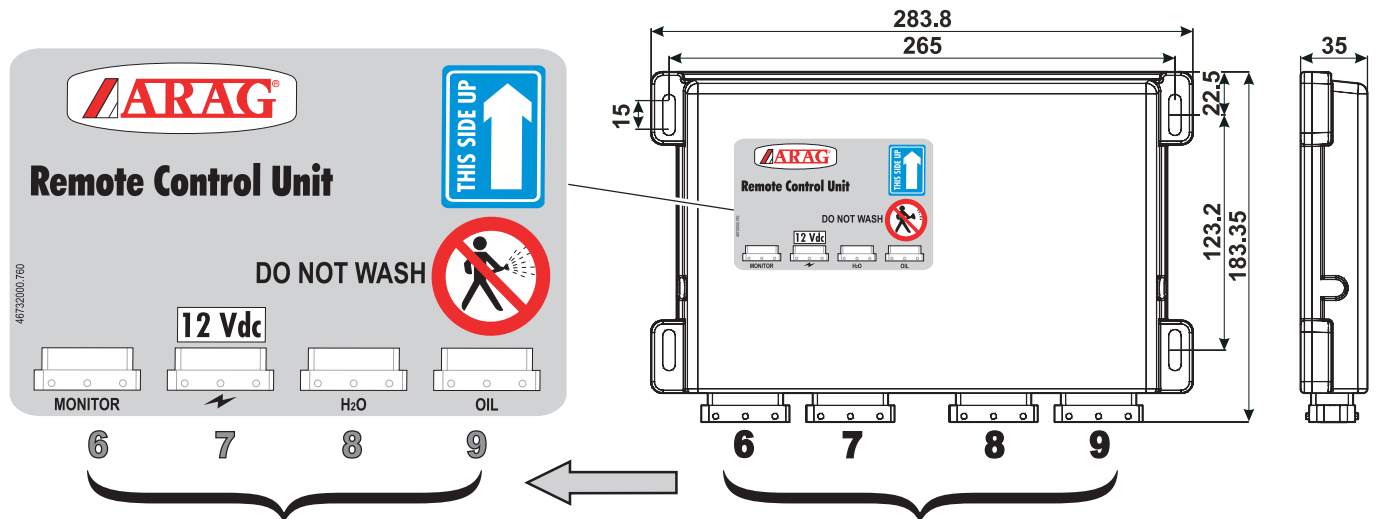


Fig. 7

ITEM	CONNECTION POINTS
6	Monitor
7	Power and sensors
8	Control unit
9	Oil-hydraulic assembly

6.3 Mounting the bracket

The monitor must be mounted after having fixed the bracket at the desired location (the previous paragraph shows the bracket drilling template). The bracket must be extracted from the monitor seat (A, Fig. 8) and fixed using the provided screws (B). Make sure the bracket is securely mounted, fit the monitor on it, and push it in until it locks in place (C).

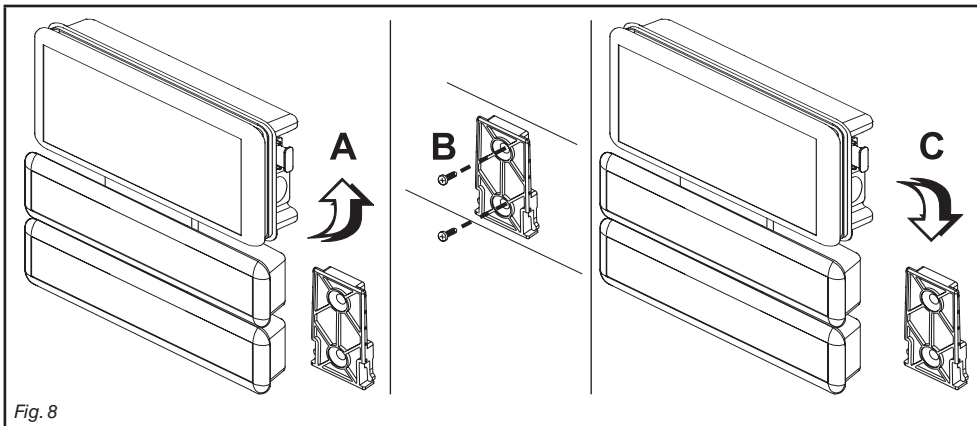


Fig. 8

6.4 Securing the control unit (RCU)

Observe the control unit assembly sense shown in Fig. 9 (connectors downwards).



Any other kind of positioning is not allowed.



Fig. 9

6.5 Control unit location

The control unit must be fixed with the special brackets supplied and fitted to the unit, positioning it as shown in the manual provided with the assembly.



MAKE SURE TO FOLLOW ALL THE SAFETY INSTRUCTIONS GIVEN IN THE CONTROL UNIT'S MANUAL.

6.6 Location of oil-hydraulic and pneumatic assemblies

The oil-hydraulic and pneumatic assemblies must be installed in the machine in a point protected against weather and the liquid sprayed by the machine.




ARAG IS NOT LIABLE FOR ANY DAMAGE CONSEQUENT ON INSTALLATION BY UNQUALIFIED PERSONS. IN CASE OF DAMAGE TO THE SYSTEM CAUSED BY INCORRECT INSTALLATION OR CONNECTIONS, THE WARRANTY IS AUTOMATICALLY VOIDED.



WARNING! DO NOT CONNECT OIL-HYDRAULIC / PNEUMATIC ASSEMBLIES OTHER THAN THE FORESEEN ONES (SEE ARAG GENERAL CATALOGUE).

ARAG IS NOT LIABLE FOR DAMAGE TO THE PRODUCT, FAULTS OR RISKS OF ANY NATURE CONSEQUENT ON CONNECTING THE MODULE TO NON-ORIGINAL RECEIVERS OR THOSE NOT SUPPLIED BY ARAG.

6.7 Locating the GPS receiver

 The user must position the GPS receiver as indicated in this manual and make sure the new vehicle height does not interfere with any obstacle.

Installing the GPS receiver:

Installation of the receiver on agricultural equipment must observe certain basic requirements: it shall be positioned on the highest position of the agricultural equipment (including trailer); receiving angle toward the sky shall be as large as possible.

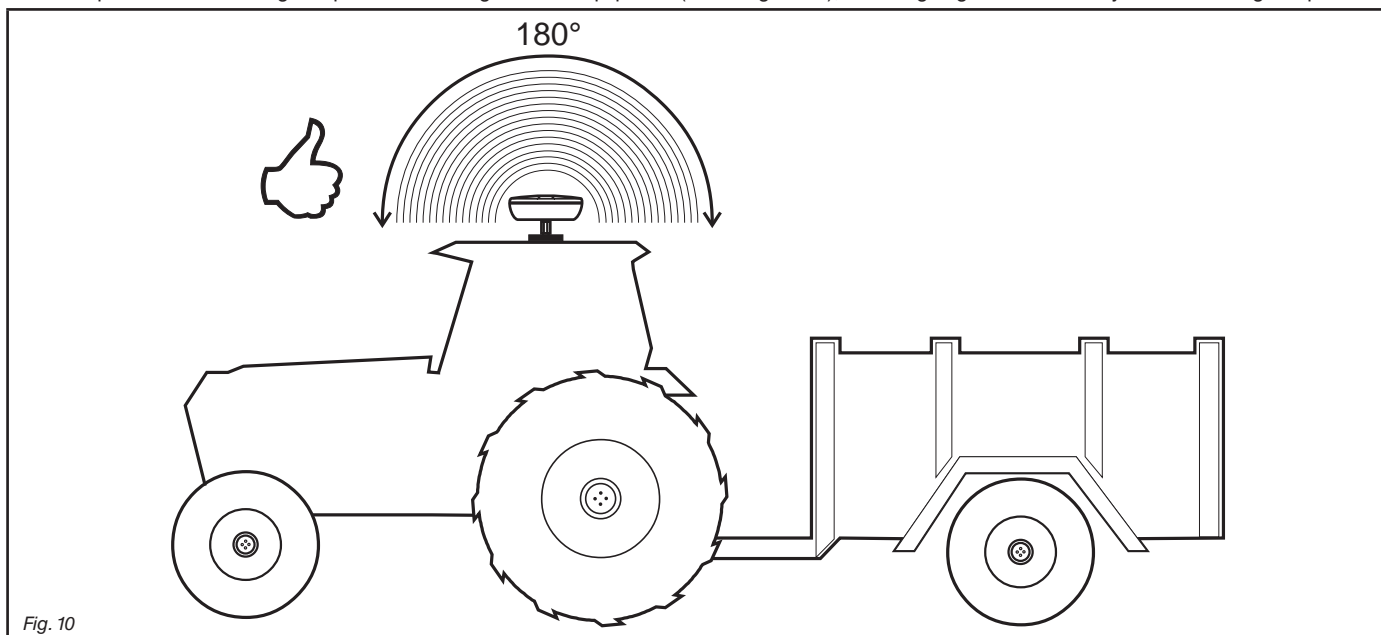


Fig. 10

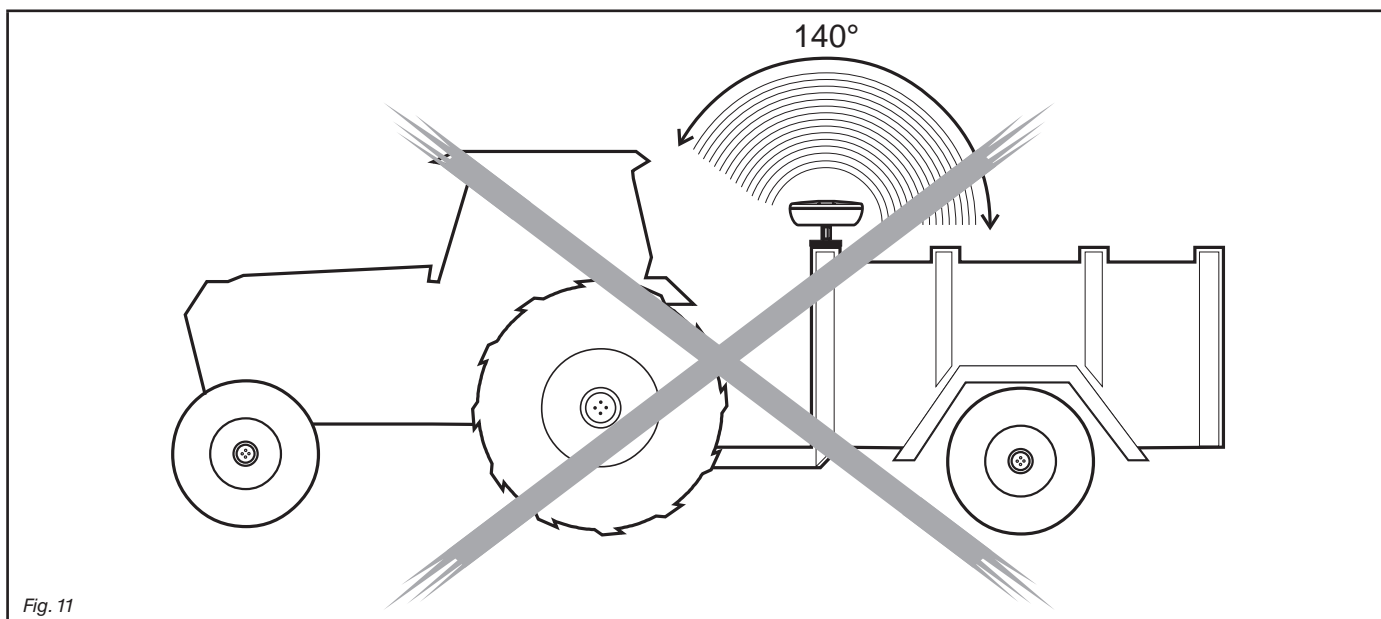


Fig. 11

The receiver shall be installed on vehicle longitudinal axis (Fig. 12).

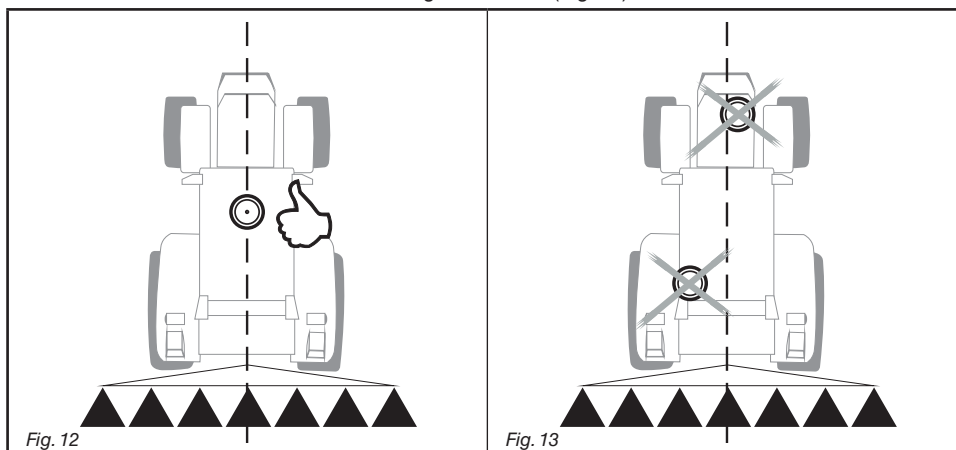


Fig. 12

Fig. 13

Securing the GPS receiver:

If the support used for fastening the receiver is in iron or steel, use the supplied magnet. Magnet features a threaded pin on which receiver is to be mounted, by screwing it on until it locks (Fig. 14).



Make sure that the receiver is mounted to a perfectly flat metal surface, free of any surface treatment capable of reducing the strength of the magnet itself.

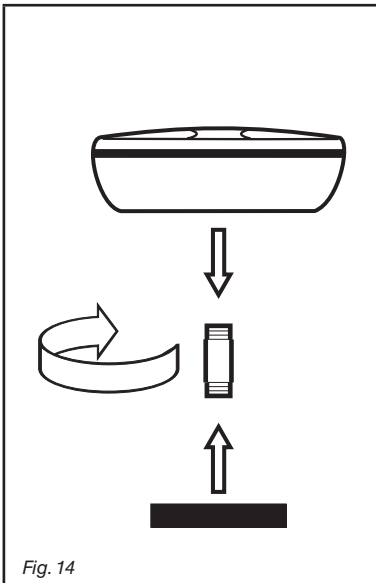


Fig. 14

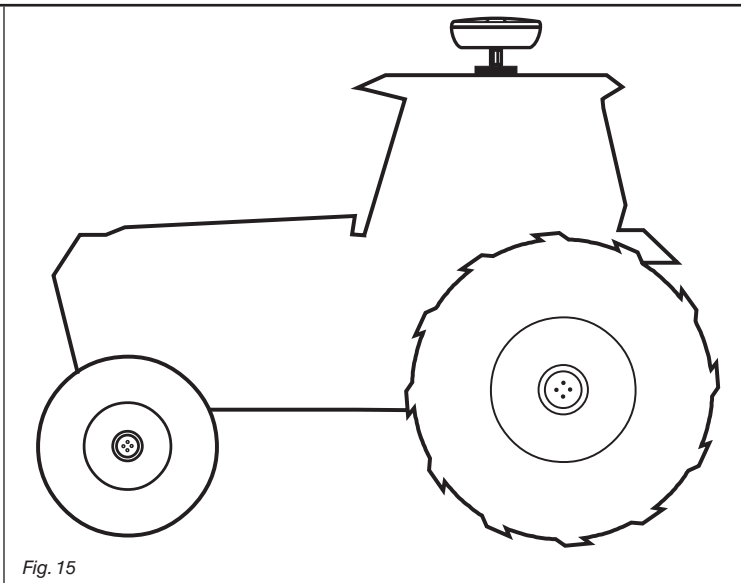


Fig. 15

If you are not sure that the magnet mounting system is completely secure, you'd better screw pin directly onto the machine chassis, as indicated in Fig. 16, by drilling and fastening it from inside using an M10 nut.

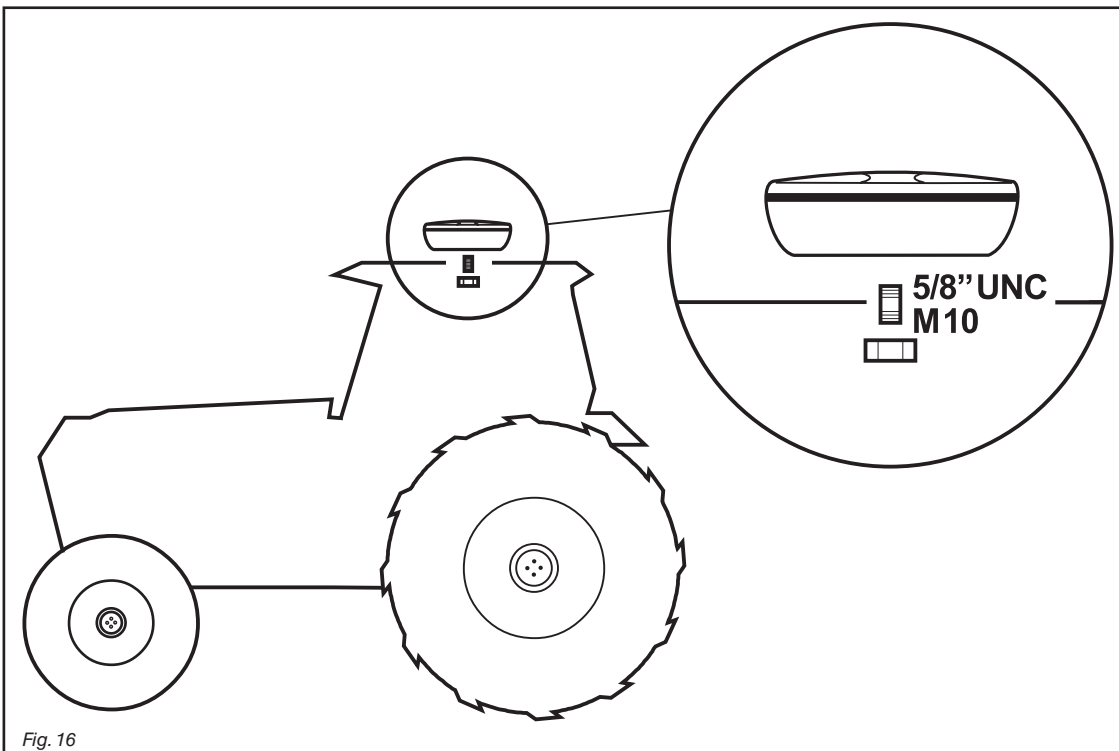


Fig. 16

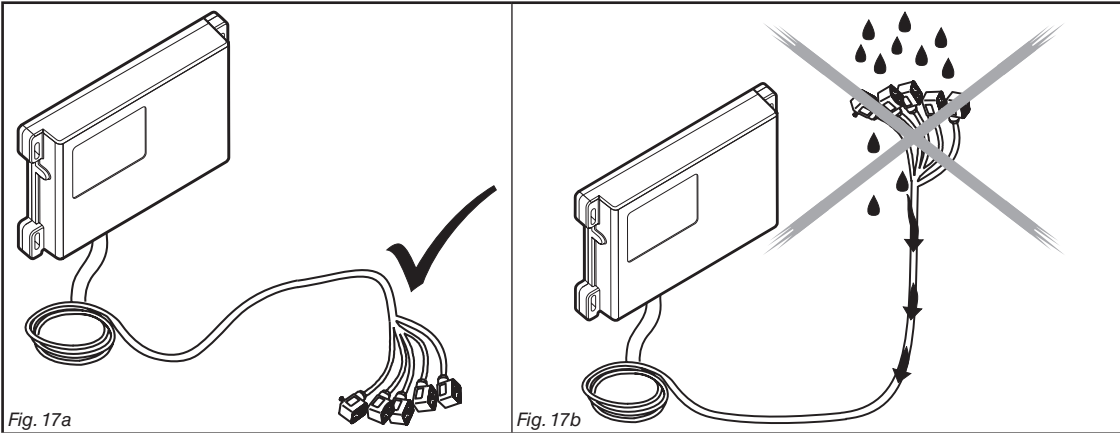


The operator is responsible for checking that the mounting system is completely secure. ARAG is not liable for damage of any nature caused by the receiver working free, independently of which mounting system is used.

7 CONNECTING THE COMPUTER TO THE AGRICULTURAL EQUIPMENT

7.1 General precautions for cable position

- **Securing the cables:**
 - secure the harness so that it does not interfere with moving parts;
 - route the harnesses in such a way that they cannot come into contact with moving parts.
- **Routing the cables to protect against water infiltrations:**
 - branches in the cable runs must ALWAYS be oriented downwards (Fig. 17a).




- **Fitting the cables to the connection points:**
 - do not force the connectors by pushing too hard or bending them: the contacts can be damaged and computer operation compromised.



Use ONLY the cables and accessories indicated in the catalogue, having technical features suitable for the use to be made of them.

7.2 Power supply connection

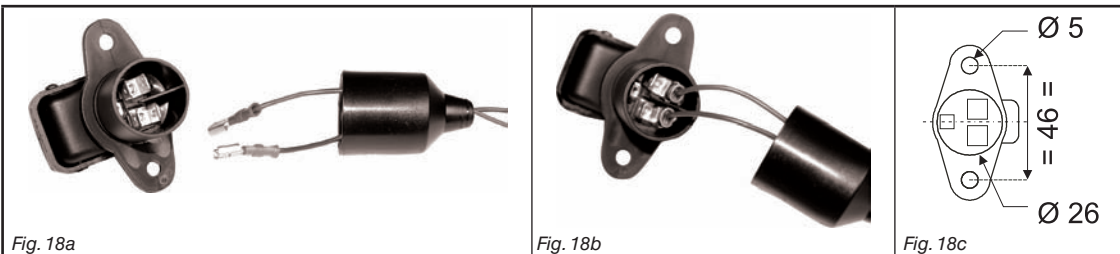Inside the package (component **12**, Fig. 1) you will find the power connector required for the connection to the machine's battery; Fig. 18c shows the drilling template for installing the power connector. Connect the power connector to the battery wires using two 6 mm faston connectors, as shown in figs. 18a and 18b. Use the cable provided in the package (component **3**, Fig. 1) to connect the computer to its power supply.




WARNING:
To avoid short circuits, do not connect the power cables to battery before the installation is completed.
Before powering up the computer and control unit, make sure the battery voltage is as specified (12 Vdc).

BRAVO 400 is powered directly from the battery (12 Vdc): it must ALWAYS be switched on from the computer; when finished, switch the computer off manually using the suitable key on the control panel.



Keeping BRAVO 400 on for long periods of time when the machine is off may run down the tractor battery: be sure to switch off the computer if the machine is to be left unused with the engine off for some time.

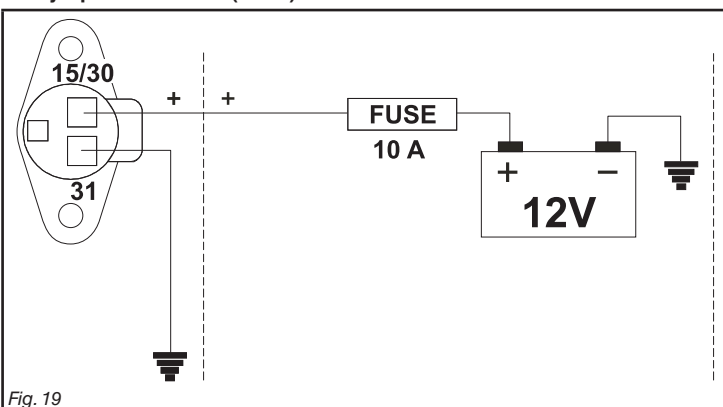Connect the power source as shown in Fig. 19: **the computer must be connected directly to the machine's battery. DO NOT connect the computer to key-operated switch (15/54).**



- WARNING:**
- The power circuit shall ALWAYS be protected by a 10 A fuse like the ones for automotive applications.
 - All cables connected to the battery shall have a minimum cross-section of 2.5 sq. mm.
- To avoid short-circuits, connect the power cable connector only after completing installation.
- Use cables with suitable terminals ensuring correct connection of all wires.

8 HARNESS CONNECTION TO CONTROL UNIT, PNEUMATIC ASSEMBLY AND OTHER AVAILABLE FUNCTIONS



- Use only the cables provided with the ARAG computers.
- Take care not to break, pull, tear or cut the cables.
- Use of unsuitable cables not provided by ARAG automatically voids the warranty.
- ARAG is not liable for damage to the equipment, persons or animals caused by failure to observe the above instructions.

8.1 Connecting the switches panel

Inside the package (component 9, Fig. 1) you will find the power cable connector required for the connection to the machine's battery. Fix the connectors (connection points at par. 6.2), properly insert the ring nut and turn it clockwise until it locks.

8.2 Connecting the remote control unit (RCU)

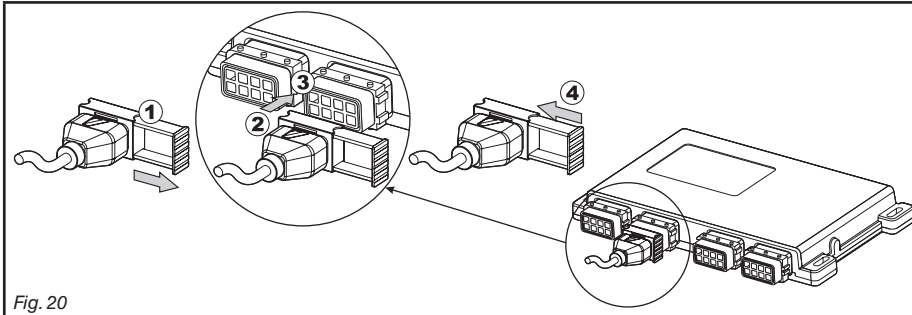


Fig. 20

- Open the connector rail (1, Fig. 20).
- Insert the connector (2) into the outlet (3) and push it: **be careful not to bend the contacts upon insertion.**
- Fully tighten the rail (4).



Connect the harnesses as indicated in par. 6.2; make sure to connect each harness to the relevant outlet on the remote control unit. In case the insertion proves difficult do not force the connectors and check the indicated position.

8.3 Connecting the control unit valves



- Use ARAG valves: use of unsuitable valves not provided by ARAG automatically voids the warranty. ARAG is not liable for damage to the equipment, persons or animals caused by failure to observe the above instructions.
- All valve connectors must be equipped with seals before installation (Fig. 22).
- Make sure the seals are correctly fitted to avoid infiltration of water when using the control unit.

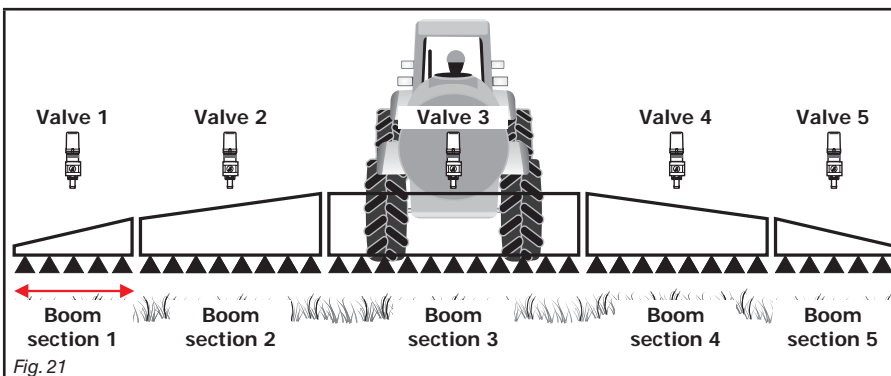


Fig. 21

Connector 1 shall control the valve which in turn is connected to the boom section 1, and so on with the other valves. Connect "connector 1" to "valve 1", and then the other connectors, with rising numbers from left to right: **the boom section 1 is the left one looking the machine from the rear side** (Fig. 21).

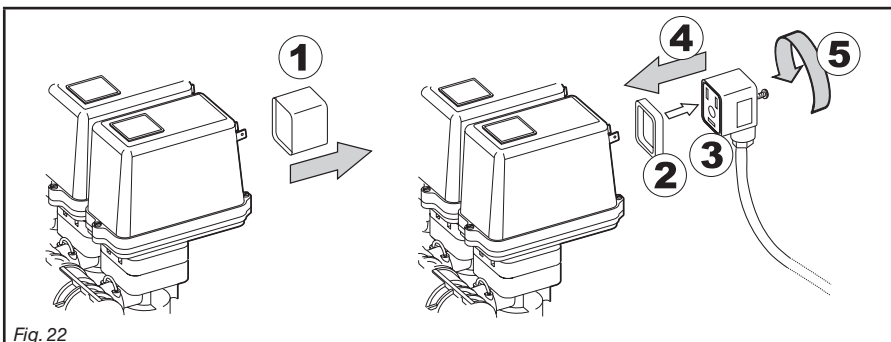


Fig. 22

Fix the connectors to the relevant valves according to the initials indicated in your assembly general diagram (par. 6.1 - Recommended system layout).

- Remove the protection cap (1, Fig. 22) from the electric valve.
- Place the seal (2) onto the connector (3), and push the connector fully on (4): **be careful not to bend the contacts upon insertion on the valve.**
- Tighten the screw (5) fully home.

• **ONLY FOR seleJET**

Bravo 400 can control up to 7 sections with a suitable pneumatic assembly.

WARNING! ! The main valve shall be a 3-wire one (the valve code features a "T" at the end).

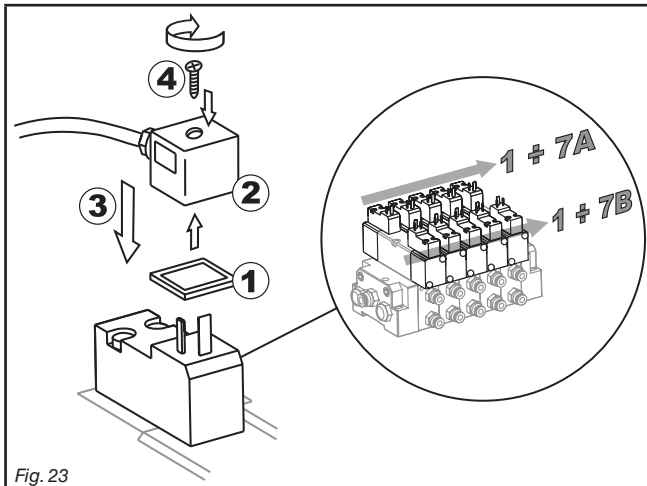


Fig. 23

Fix the connectors to the relevant valves according to the initials indicated in your assembly general diagram (par. 6.1 - Recommended system layout).

- Place the seal (1) onto the connector (2), and push the connector fully on (3): **be careful not to bend the contacts upon insertion on the valve.**
- Insert the screw into the connector and fully tighten it (4).

• **ONLY FOR SEQUENTIAL VERSION:**

WARNING!

The main and section valves connected to the computer shall be of the 3-wire type (the valve code features a "T" at the end). In case less than 13 section valves are required, always start to connect from section 1 until the last one in sequence.

Example:

- Connections for 8 valves: sec. 1 + 2 + 3 + 4 + 5 + 6 + 7 + 8
- Connections for 11 valves: sec. 1 + 2 + 3 + 4 + 5 + 6 + 7 + 8 + 9 + 10 + 11 etc.

8.4 Connecting the hydraulic valves

Bravo 400 can control up to 9 hydraulic functions through double action valves.

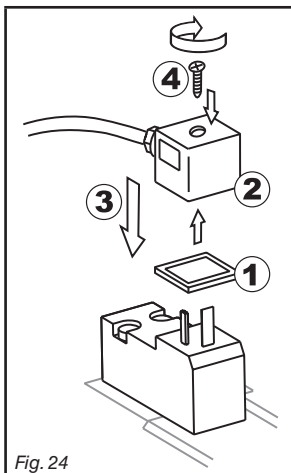


Fig. 24

Fix the connectors to the relevant valves according to the initials indicated in your assembly general diagram (par. 6.1 - Recommended system layout).

- Place the seal (1) onto the connector (2) and push the connector fully on (3): **be careful not to bend the contacts upon insertion on the valve.**
- Insert the screw into the connector and fully tighten it (4).

Following is the use of the switches located on the hydraulic function control panel.

- Connect the connector marked with "DD" to the pilot valve, followed by the other connectors as indicated in the table:

CONTROL	MOVEMENT	CONNECTOR
Section movement / AUX switch opening 1 - 2 - 3 - 4 - 5 - 6	Opening	1 ÷ 6 A
	Closing	1 ÷ 6 C
Boom height 	Opening	AA
	Closing	AC
Boom locking 	Opening	BA
	Closing	BC
Boom leveling 	Opening	CA
	Closing	CC

8.5 Connecting the sensors

Fix the connectors to the relevant functions according to the initials indicated in your assembly general diagram (par. 6.1).

Harness cables are marked with a symbol denoting their functions; please see the table for correct harness instructions.



Use ARAG sensors: use of unsuitable sensors not provided by ARAG automatically voids the warranty. ARAG is not liable for damage to the equipment, persons or animals caused by failure to observe the above instructions.

ITEM	CONNECTION PRIMARY	ALTERNATIVE CONNECTION
M	Pressure sensor	--
F	Flowmeter	--
T	Filling flowmeter	Pump Protector
X	RPM sensor	Pump Protector

The "Pump Protector" sensor (**code 4664000.100**) when connected to the computer, detects and signals breakage of the pump diaphragm or indicates when the oil drops below its minimum level.

The preferred sensor input is always marked with an "X" on the harness; if this input is not available, use the secondary input marked "T".



WARNING:
the secondary connection "T" shall be used only if connection "X" is already occupied by another sensor. Do not use the secondary input "T" if no sensor is connected to the "X" input otherwise the computer will not be able to acknowledge the Pump Protector sensor.

- The products are supplied with the sensor installation instructions.

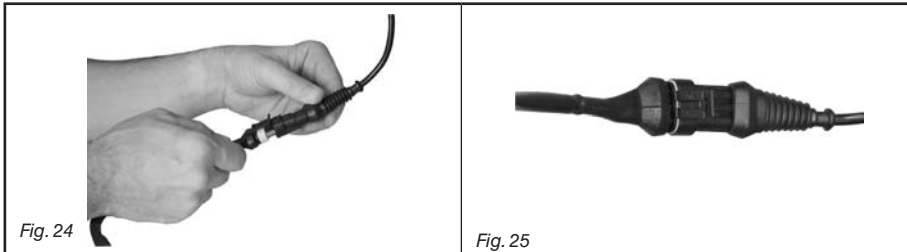
The following speed sensors can also be used as RPM sensors:

- inductive speed sensor (**code 467100.086**);
- magnetic speed sensor (**code 467100.100**).

- Connection of:

- flowmeter;
- pressure sensor;
- Pump Protector;
- filling flowmeter;
- RPM sensor.

All ARAG sensors use the same type of connector. Connect the sensor connector to the relevant harness; make sure it is correctly fitted and push it until locking it.



8.6 Connecting the cameras

Bravo 400 can be connected to one or two cameras **code 46700100** (to be purchased separately) using the suitable cables specified on the ARAG catalogue.

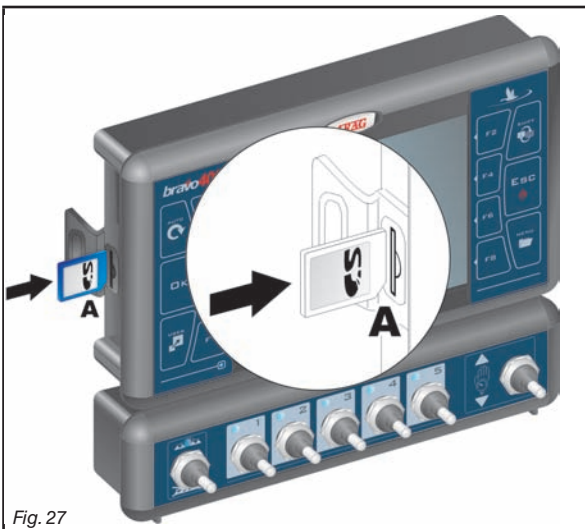
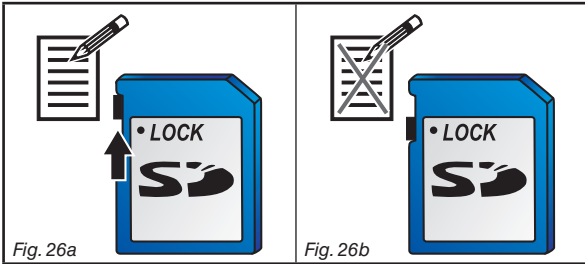
Connect the connector to the monitor (connection points at par. 6.2) and bring the other cable end to the camera: properly fit the ring nut and turn it clockwise until it locks.

8.7 SD memory card

The SD memory card is used to exchange data with the BRAVO 400 computer.



Make sure the card is not protected before installing it (Fig. 26a). ONLY use the SD card supplied with the package.



• **Insertion**

Insert the memory card making sure to orient it correctly: the card cut edge **A** must be faced downward; push the card until it engages into place and close the slot with the cover.

• **Removal**

Press and immediately release the card into the slot and slide it out.



Store the SD memory card into the suitable case (supplied) when not in use.

9 PROGRAMMING

9.1 Pre-programming tests and checks

Before computer programming, ensure:

- that all components are correctly installed (control unit and sensors);
- the connection to the power source;
- that all components are correctly connected (control unit and sensors).



Failure to correctly connect system components or to use specified components might damage the device or its components.

9.2 Switching on



Fig. 28



Fig. 29

1 Hold the push-button depressed until Bravo 400 displays the page shown in Fig. 28. After that, Bravo 400 shows the software version (Fig. 29).

FIRST START-UP OF THE DEVICE

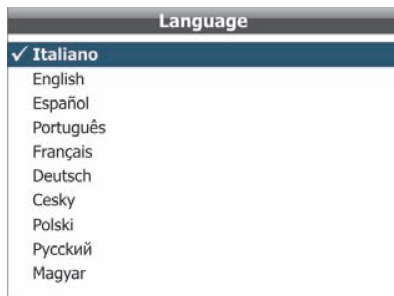


Fig. 30

Upon first start-up, after showing the software version, Bravo 400 immediately displays the page where to set the use language (Fig. 30). Enter value and proceed to the normal switch-on procedure (Fig. 31).

NORMAL SWITCH-ON PROCEDURE

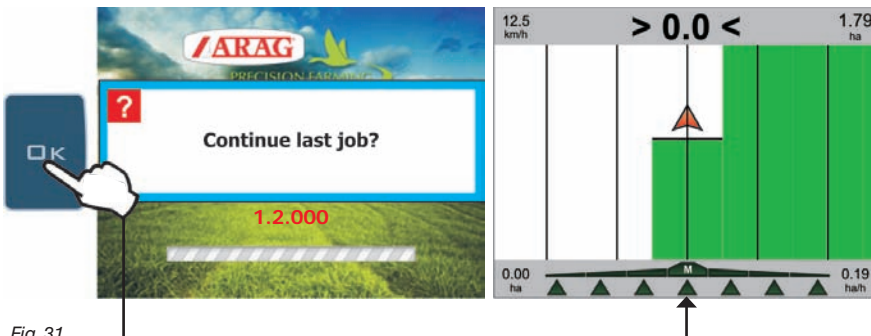


Fig. 31

After showing the software version, Bravo 400 displays the following message **Continue last job?** (Fig. 31). Button **OK** allows to continue the last job done before switch-off.

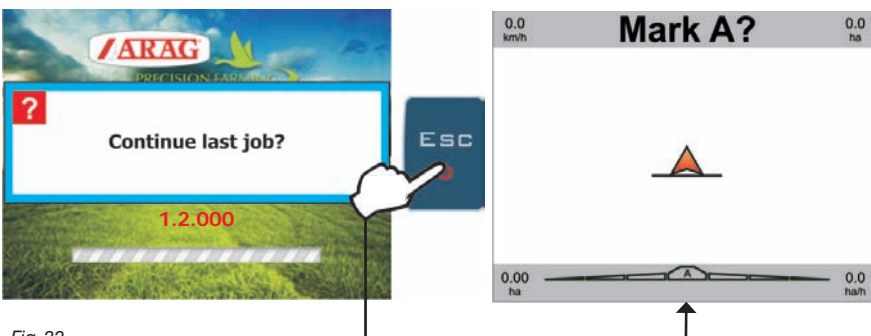


Fig. 32

Button **ESC** moves on to a new job without saving the last one done before switch-off.



WARNING: all job data not duly saved will be lost.

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------

9.3 Switching off



Fig. 33



Fig. 34

Hold **ESC** button depressed until Bravo 400 displays the page shown in Fig. 33. Release the button and device will switch off after a few seconds.

While switching off, Bravo 400 automatically saves current job.



Do NOT push any button or cut the power during switching off until the Bravo 400 display is OFF.

WARNING: ALWAYS use the suitable button to switch device off; failure to do so will cause ALL jobs and programming data to be lost.

9.4 Using the programming keys

SELECTION AND ACCESS TO MENU ITEMS

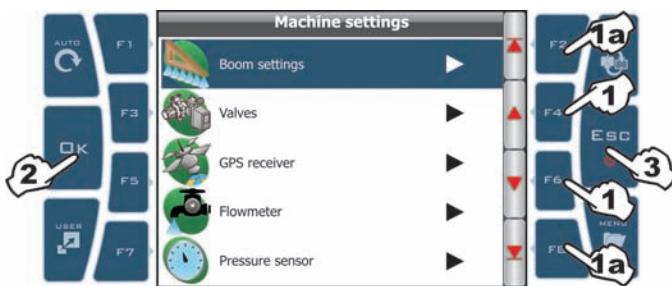


Fig. 35

- 1 Press repeatedly to toggle from one item to another (selected item is highlighted by a blue line)
- 1a Press repeatedly to toggle from one page to another
- 2 Press to open the selected item or confirm any changes
- 3 Press to quit current page or exit without confirming changes

ENTERING A NUMERICAL VALUE

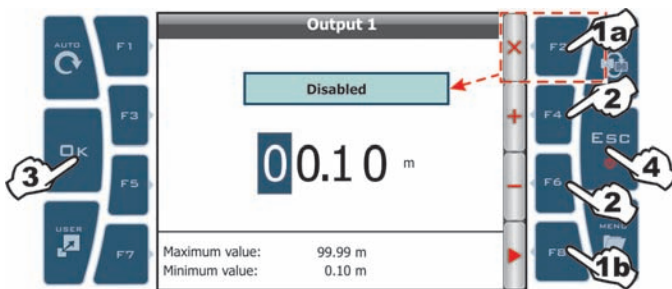


Fig. 36

- 1a Press to disable displayed data (in the example **Output 1**). In this case, display will show item **Disabled**
- 1b Press to activate data and shift cursor from one figure to another
- 2 Press to edit highlighted figure (+ increase, - decrease)
- 3 Press to confirm entered value
- 4 Press to quit current page or exit without confirming changes

ENTERING TEXT



Fig. 37

- 1 Press a few times to select character to type
- 2 Press to confirm selected character
- 3 Press to save name
- 4 Press to quit current page or exit without confirming changes

Legend:

- Job_00 Entered name
- Cursor
- Selected character
- Shift cursor across name characters
- Delete character before cursor
- Caps lock on / off

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------

10 ADVANCED PROGRAMMING - MACHINE SETTINGS

The computer can be programmed with the all data required to ensure a correct distribution of the treatment product.



must be done once only, when installing the computer.

WARNING: you will be allowed to access this menu only when the machine is NOT moving.

ACCESS TO MACHINE SETTINGS MENU

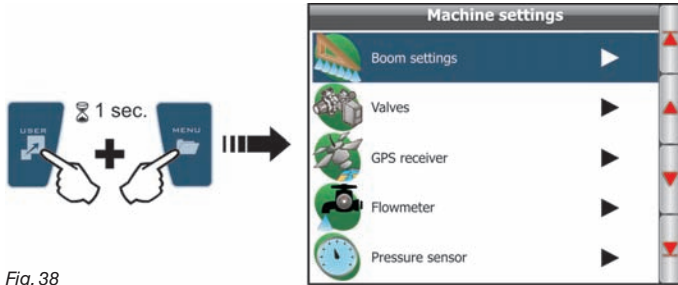


Fig. 38

- On the guidance page keep buttons **USER** and **MENU** pressed at the same time for about one second until the menu is displayed **Machine settings**.
- Select the desired menu item and set-up the data.

When present, the symbol ✓ indicates the active option.

For correct use of keys while programming refer to par. 9.4.

MACHINE SETTINGS - MENU LAYOUT

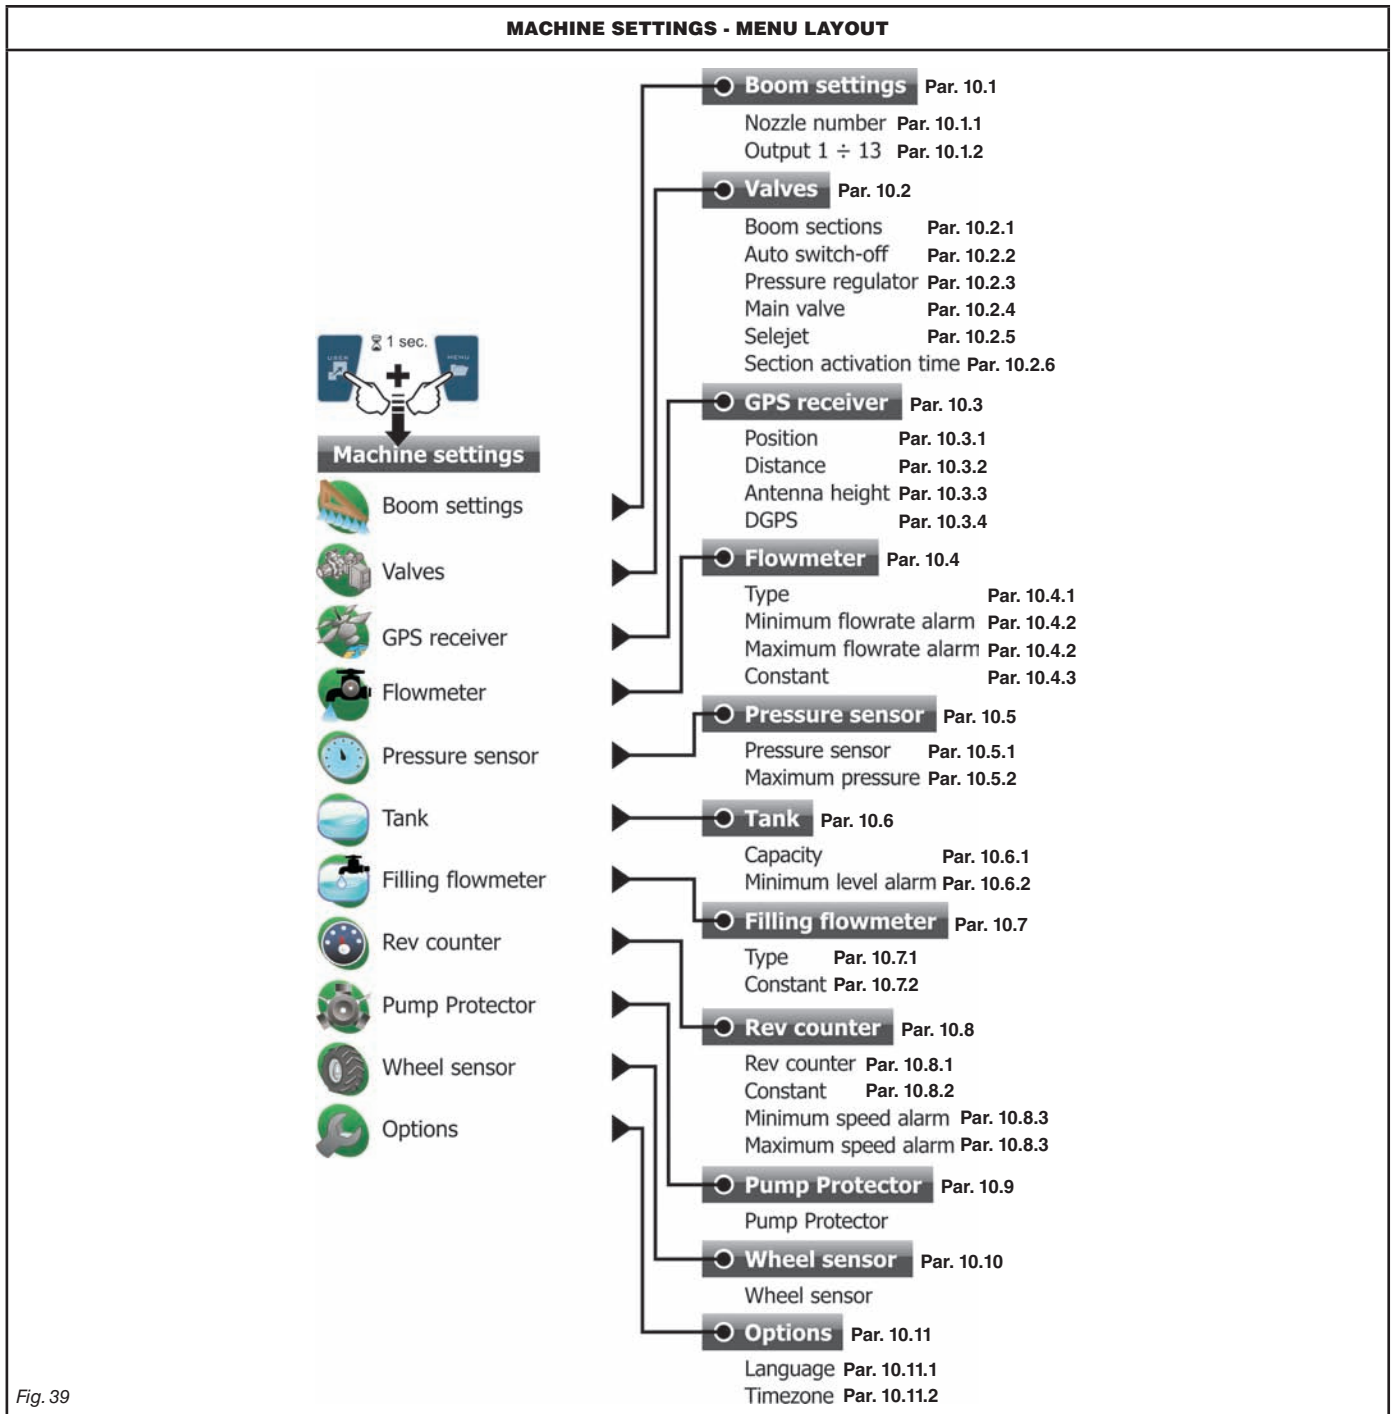


Fig. 39



10.1 - Boom settings

Boom settings - 20.00 m		
Nozzle number		40
Output 1	Section	4.00 m
Output 2	Section	4.00 m
Output 3	Section	4.00 m
Output 4	Section	4.00 m
Output 5	Section	4.00 m
Output 6	-	-
Output 7	-	-
Output 8	-	-
Output 9	-	-
Output 10	-	-



According to the programming both the boom aspect on the display (par. 12.6) and the total length value (near the Boom settings menu, Fig. 40)

Fig. 40

10.1.1 Nozzle number

Nozzle number	
040	
Maximum value:	999
Minimum value:	1

Indicate the total number of nozzles on the boom.

ONLY FOR seleJET

Indicate the total number of nozzle holders fitted on the boom despite the actual number of nozzles. For example: with 80 nozzles enter value '40'.

Fig. 41

10.1.2 Output 1 ÷ 13

- Indicate the Bravo 400 output connection by entering the width of each boom section. Repeat the programming for each item of Fig. 40.
- Disable the disconnected. Message **Disabled** will appear on the display.

AUX option: available for system diagnosis for ARAG personnel ONLY.

Output 1	
04.00 m	
Maximum value:	99.99 m
Minimum value:	0.10 m

Fig. 42

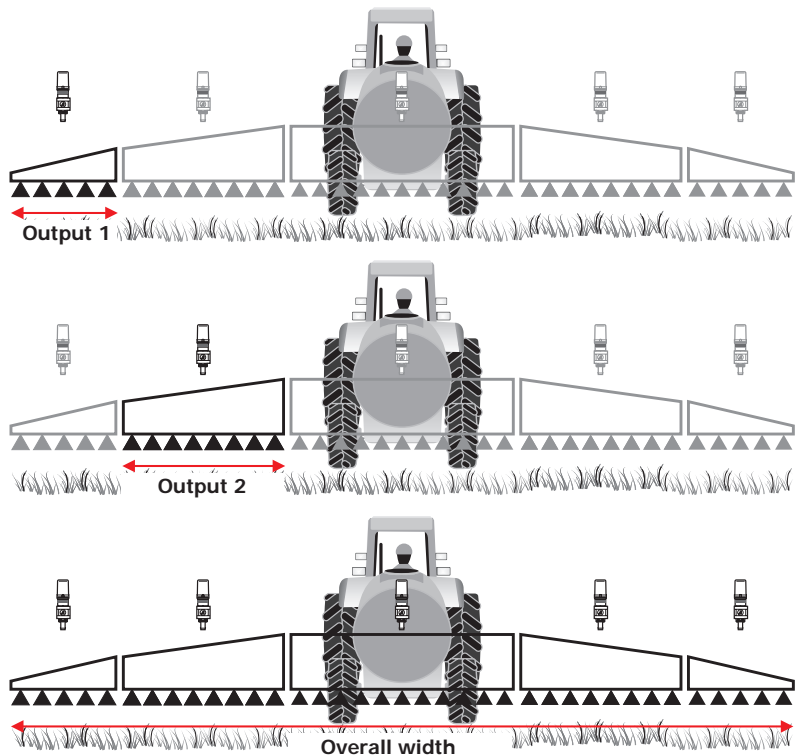


Fig. 43



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change




Exit function or datum change



Par. 9.4



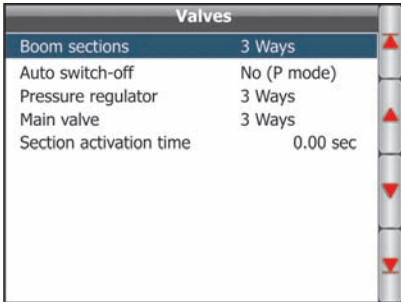
10.2 - Valves



In this menu set the type of valves installed on the system and the relevant data.

Fig. 44

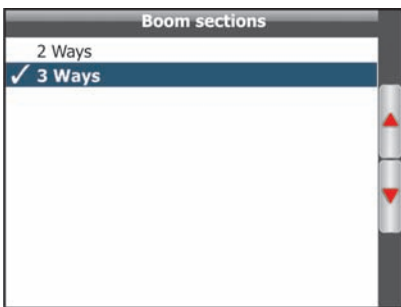
10.2.1 Boom sections



Indicate the type of section valves installed.
 • **2 Ways** = valves without calibrated backflows
 • **3 Ways** = valves with calibrated backflows

Fig. 45

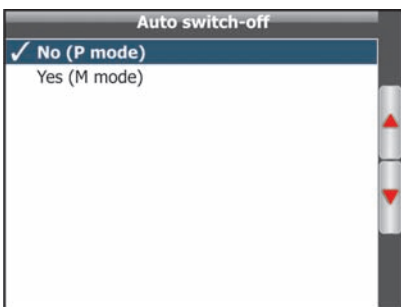10.2.2 Auto switch-off



Indicate the section valve operation mode, especially if the section automatic closing is active when the main valve is closed.

- **"P" operation mode (option No):**
section valves are operated independently. Main switch control functions do not affect section valve opening or closing.
- **"M" operation mode (option Yes):**
section valves are closed or opened from the main switch provided that section valve switches are set in the appropriate position; in other words, if section switches are set to OFF (lever down), operating the main switch does not affect the sections. If one or more section valve switches are set to ON (lever up), opening or closing the main switch opens or closes the section valves as well.

M operation (option Yes) must be activated when:
 - System features no main valve (menu Main valve > None - par. 10.2.4)
 - Bravo 400 is connected to a nozzle holder control (menu Selejet > Enabled, par. 10.2.5)

Fig. 46

10.2.3 Pressure regulator



Indicate the type of control valve installed.

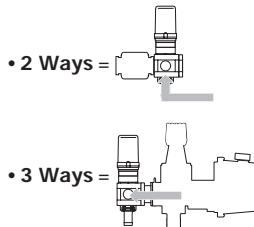


Fig. 47

10.2.4 Main valve

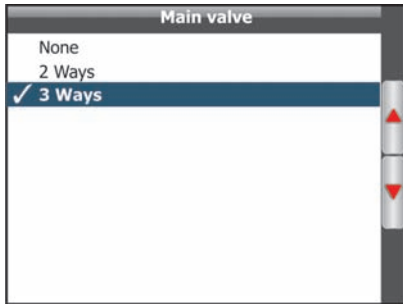


Fig. 48

Indicate the type of control main valve installed.

- None
- 2 Ways = discharge valve
- 3 Ways = main valve



When the option None is active, the M operating mode must be set (option Yes) in the Auto switch-off menu (par. 10.2.2).

10.2.5 Selejet

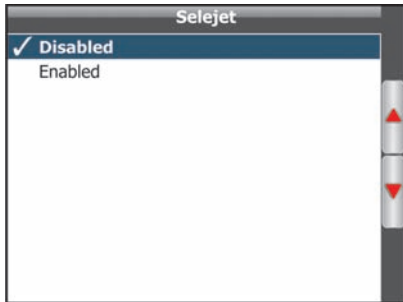



Fig. 49

Indicate the type of system the Bravo 400 is installed on (with or without nozzle  holder control).

- Disabled = without nozzle holder control
- Enabled = with nozzle holder control



The layout of the User menu changes according to the option enabled here, to allow the best configuration of Bravo 400 considering the system.

10.2.6 Section activation time

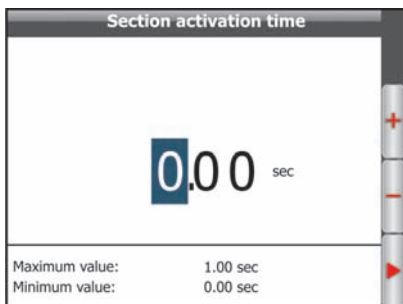


Fig. 50

Indicate the time between section valve control and actual start/stop of product spraying. The computer will use this information to precisely open and close the section valves.



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change



Exit function or datum change



Par. 9.4




10.3 - GPS receiver

GPS receiver	
Position	Front
Distance	0.0 m
Antenna height	0.0 m
DGPS	Disabled

In this menu it is possible to set the data of the GPS receiver installed on the system.

Fig. 51

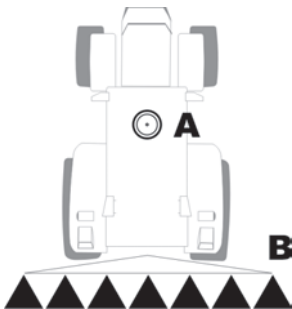10.3.1 Position




Indicate the antenna position with respect to the crop spraying boom. In the example shown in Fig. 52, antenna **A** is installed in **Front** of the spraying boom **B**.

WARNING: before setting this item change the Distance (Fig. 53): if Distance zero, the Position item can not be modified.

Fig. 52

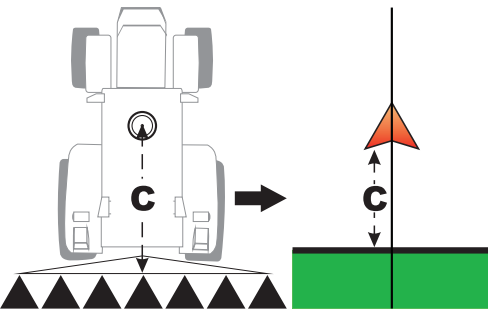10.3.2 Distance




Indicate distance **C** between antenna and work point (Fig. 53).

WARNING: Depending on entered value, the displayed sketch will change accordingly.

Fig. 53

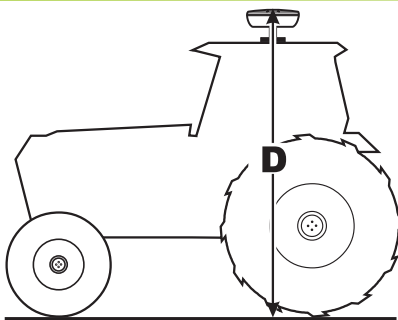
10.3.3 Antenna height



Indicate antenna height **D** with respect to the ground (Fig. 54).

Fig. 54

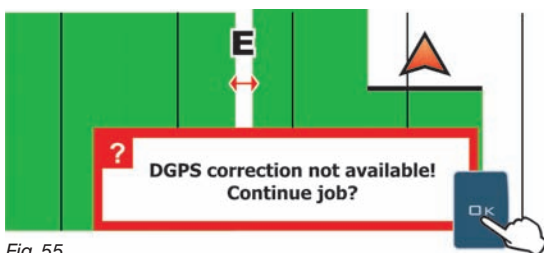10.3.4 DGPS



Allows you to enable the DGPS differential correction function (SBAS): SBAS differential correction signal is a free signal only available in some areas world-wide that ensures a higher work accuracy.

WARNING: this function can only be used in Europe (EGNOS), United States of America (WAAS) and Japan (MSAS).

Enabling / disabling the differential correction during the job can trigger a considerable measure error between the vehicle position and the tracks treated until that moment (**E**, in Fig. 55). The following passes will instead be measured correctly (at the same distance from one another). In the example shown in Fig. 55, press **OK** to continue job. IMMEDIATELY AFTER we recommend to align the tracks using the "Align" function (par. 13.1.7 - **F6** Align).

Fig. 55

	Scrolling menu pages		Scrolling menu items		Reset / disable data		Increase / decrease data		Shift the cursor		Confirm access or datum change		Exit function or datum change		Par. 9.4
--	----------------------	--	----------------------	--	----------------------	--	--------------------------	--	------------------	--	--------------------------------	--	-------------------------------	--	----------



10.4 - Flowmeter

In this menu it is possible to set the data of the flowmeter installed on the system.

The following table shows the values automatically set by selecting the flowmeter code (they can be also modified).

Flowmeter	
Type	Orion 462xxA4xxxx
Minimum flowrate alarm	10.0 l/min
Maximum flowrate alarm	200.0 l/min
Constant	300 pls/l

Fig. 56

ORION FLOWMETERS			
TYPE	Constant (pls/l)	Rate min. (l/min)	Rate max. (l/min)
4621xA0xxxx	6000	0.5	10.0
4621xA1xxxx	3000	1.0	20.0
4621xA2xxxx	1200	2.5	50.0
4621xA3xxxx	600	5.0	100.0
462xxA4xxxx	300	10.0	200.0
4622xA5xxxx	150	20.0	400.0
4622xA6xxxx	100	30.0	600.0
Other	625	10.0	200.0

WOLF FLOWMETERS			
TYPE	Constant (pls/l)	Rate min. (l/min)	Rate max. (l/min)
462x2xxx	1025	2.5	50.0
462x3xxx	625	5.0	100.0
462x4xxx	250	10.0	200.0
462x5xxx	132	20.0	400.0
462x7xxx	60	40.0	800.0

10.4.1 Type

Type
Disabled
Orion 4621xA0xxxx
Orion 4621xA1xxxx
Orion 4621xA2xxxx
Orion 4621xA3xxxx
<input checked="" type="checkbox"/> Orion 462xxA4xxxx
Orion 4622xA5xxxx
Orion 4622xA6xxxx
Other

Fig. 57

Indicate the type of flowmeter installed.



When the option Disabled is active, the items Minimum flowrate alarm, Maximum flowrate alarm and Constant are no longer displayed.

10.4.2 Rate alarms

Minimum flowrate alarm	
010.0 l/min	
Maximum value:	999.9 l/min
Minimum value:	0.1 l/min

Fig. 58

Maximum flowrate alarm	
200.0 l/min	
Maximum value:	999.9 l/min
Minimum value:	0.1 l/min

Fig. 59

The rate alarms (minimum or maximum) activate when the flowmeter rate exceed the set limits during the job.



Refer to par. 14.3 - Error Messages for the steps to take during the alarms.

10.4.3 Constant

Constant	
00300 pls/l	
Maximum value:	32000 pls/l
Minimum value:	1 pls/l


Fig. 60

Indicate the constant relevant to the installed flowmeter.

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------



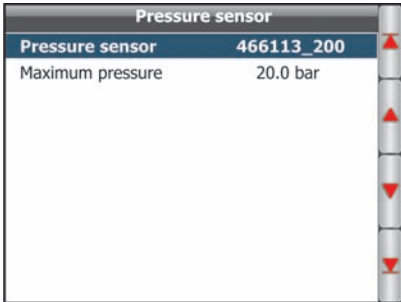10.5 - Pressure sensor



In this menu it is possible to set the data of the pressure sensor installed on the system.

The following table shows the values automatically set by selecting the sensor code (anyway, they can be modified).

ARAG PRESSURE SENSOR	
TYPE	Max pressure (bar)
ARAG 466113.200	20.0
ARAG 466113.500	50.0
Other	20.0

Fig. 61

The pressure sensor has a different use according to the situations.

• **Flowmeter enabled:**

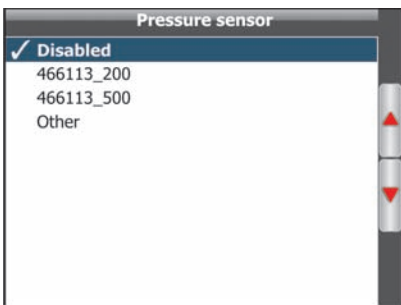
displays the job pressure when the machine operates within the flowmeter limits.

When the flowmeter operates outside the limits the measured pressure is used to calculate the spray rate.

• **Flowmeter disabled:**

the pressure sensor is always used to calculate the spray rate.

10.5.1 - Pressure sensor




Indicate the type of pressure sensor installed.



When the option Disabled is activated, the item Maximum pressure is no longer displayed (Fig. 61).

Fig. 62

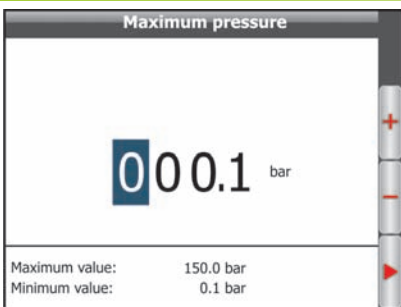10.5.2 Maximum pressure




Indicate the full scale relevant to the pressure sensor installed on the system.

Fig. 63



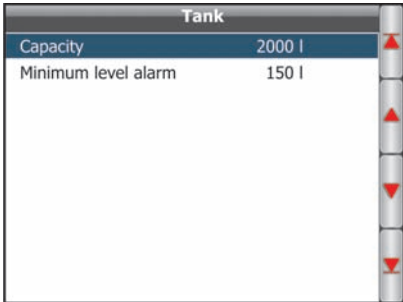
10.6 - Tank



In this menu it is possible to set both tank capacity and reserve value.

Fig. 64

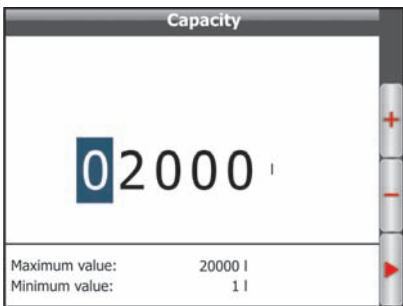
10.6.1 Capacity



Indicate the tank capacity.

Fig. 65

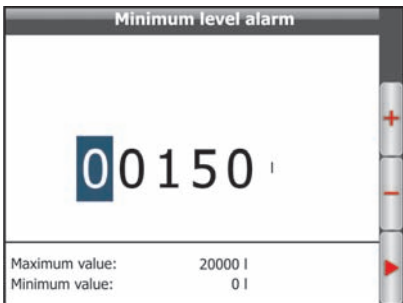10.6.2 Minimum level alarm



Indicate the reserve value.
The tank alarm is triggered when the level drops below the set value during the job.



Refer to par. 14.3 Error messages for the steps to take during the alarm.

Fig. 66



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change



Exit function or datum change



Par. 9.4



10.7 - Filling flowmeter

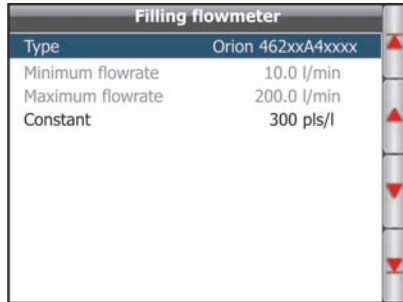


Fig. 67

In this menu it is possible to set the data of the filling flowmeter installed on the system.

The following table shows the values automatically set by selecting the flowmeter code (they can be also modified).

ORION FLOWMETERS				WOLF FLOWMETERS			
TYPE	Constant (pls/l)	Min. rate (l/min)	Max. rate (l/min)	TYPE	Constant (pls/l)	Rate min. (l/min)	Rate max. (l/min)
462xxA4xxxx	300	10.0	200.0	462x4xxx	250	10.0	200.0
4622xA5xxxx	150	20.0	400.0	462x5xxx	132	20.0	400.0
4622XA6XXXX	100	30.0	600.0	462x7xxx	60	40.0	800.0
Other	625	10.0	200.0				

10.7.1 Type



Fig. 68

Indicate the type of flowmeter installed.



When the option Disabled is active, the items Minimum flowrate, Maximum flowrate (Fig. 67) and Constant are no longer displayed.

10.7.2 Constant


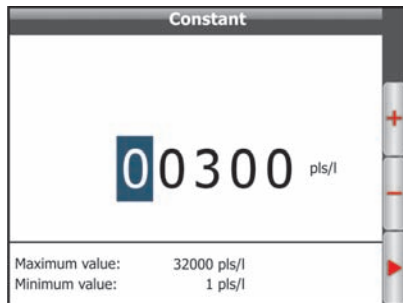


Fig. 69

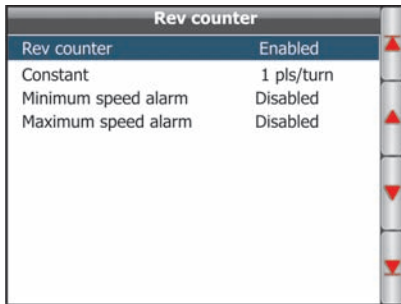Indicate the constant relevant to the filling flowmeter installed on the system.




10.8 - Rev counter



In this menu it is possible to set the data of the rev counter installed on the system.

Fig. 70

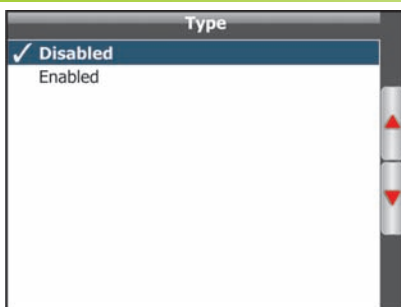10.8.1 - Rev counter




Indicate if the rev counter is installed.

When the option Disabled is activated, the items Constant, Minimum speed alarm, and Maximum speed alarm (Fig. 70) are no longer displayed.

Fig. 71

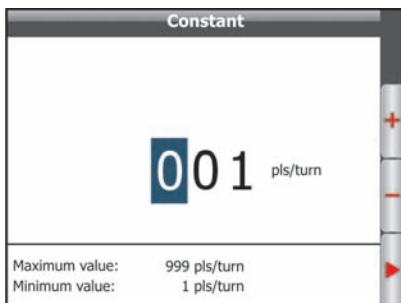10.8.2 Constant



Indicate the constant relevant to the installed rev counter.

Fig. 72

10.8.3 Speed alarms

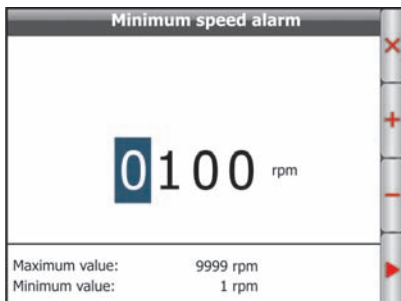


Fig. 73

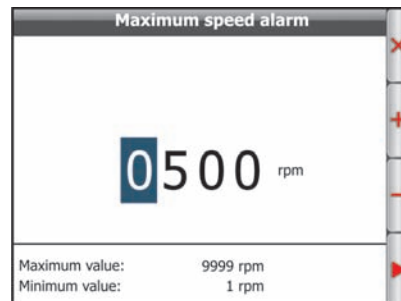


Fig. 74

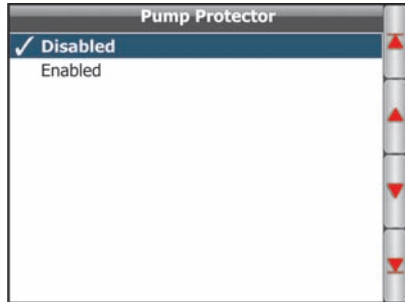
The speed alarms activate when the measured RPM exceed the set limits.
In case of minimum speed this control operates only when the spraying is active (main ON).

Alarms can be disabled with the relevant button: the item **Disabled** will be displayed.

Refer to par. 14.3 - Error Messages for the steps to take during the alarms.



10.9 - Pump Protector




In this menu indicate if the Pump Protector is installed on the system..

Fig. 75



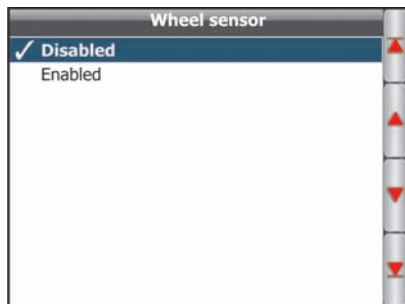10.10 - Maximum speed alarm



In this menu indicate if the wheel sensor is installed on the system..



When the wheel sensor is Enabled set the machine as described in par. 11.8 - Speed.

Fig. 76



10.11 Options



In this menu set the Bravo 400 system options.

Fig. 77


10.11.1 - Language



Set the Bravo 400 user's language.

Fig. 78

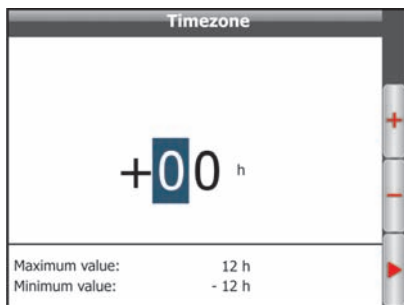10.11.2 Timezone



Set the local time zone with reference to the Greenwich prime meridian *.
Local time will be constantly updated thanks to the signal detected by the GPS receiver.

Fig. 79

* List of main time zones:

United Kingdom, Portugal, Liberia	0
Azores Islands	-1
Mid-Atlantic Islands	-2
Argentina, Brazil	-3
AST (USA), Venezuela	-4
EST (USA), Colombia	-5
CST (USA), Eastern Mexico	-6
MST (USA)	-7
PST (USA)	-8
AKST (USA)	-9
HST (USA), Hawaii	-10
Midway Islands	-11
Enewetak	-12

Central Europe (Germany, France, Italy)	+1
Latvia, Lithuania, Romania, Greece, Israel	+2
Western Russia, Iraq	+3
United Arab Emirates	+4
Pakistan	+5
Kazakhstan	+6
Thailand	+7
China, Western Australia	+8
Japan	+9
Eastern Australia	+10
Eastern Russia	+11
Fiji Islands, New Zealand	+12

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------

11 USER PROGRAMMING - USER MENU

ACCESS TO USER MENU

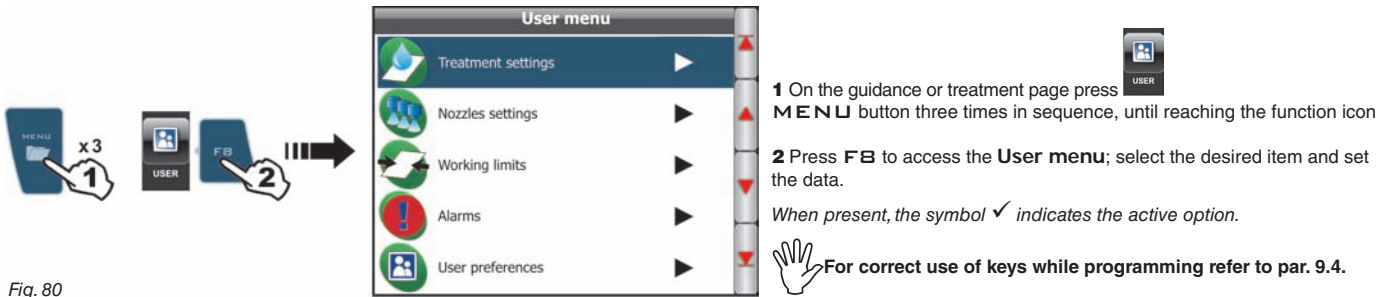


Fig. 80

USER PROGRAMMING - MENU STRUCTURE

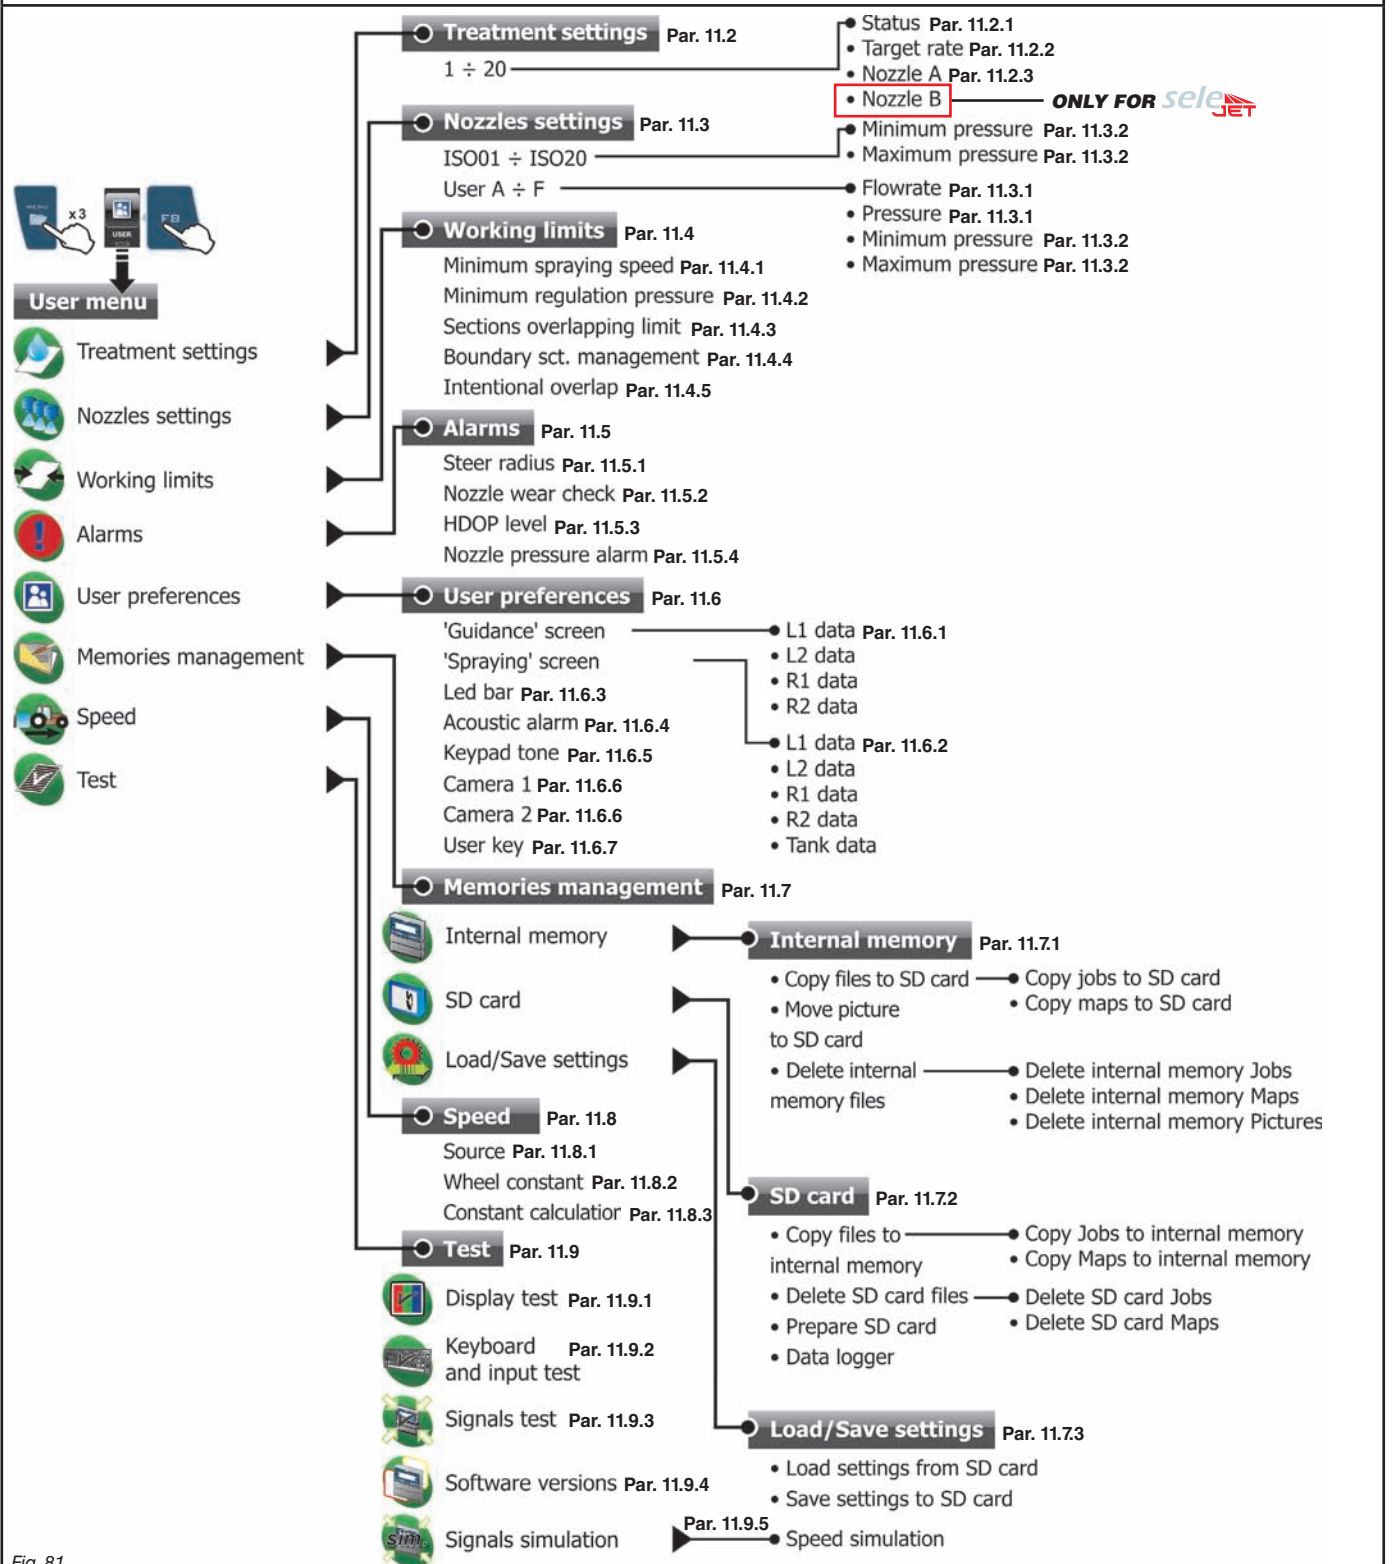



Fig. 81

11.1 How does the SELEJET system work

In a traditional system, the farming machine speed depends on the minimum and maximum pressure of nozzle in use and on desired spray rate. For instance, if we were spraying 100 l/ha with a violet evenfan nozzle ISO110025, the minimum operating speed shall be 6.9 km/h (corresponding to a pressure of 1 bar) while maximum speed shall be 13.9 Km/h (corresponding to a pressure of 4 bars). This operation field can be restrictive for the features of both crop to be treated and machine.

Operation field of possible combinations of ISO11002 and ISO110025 nozzles

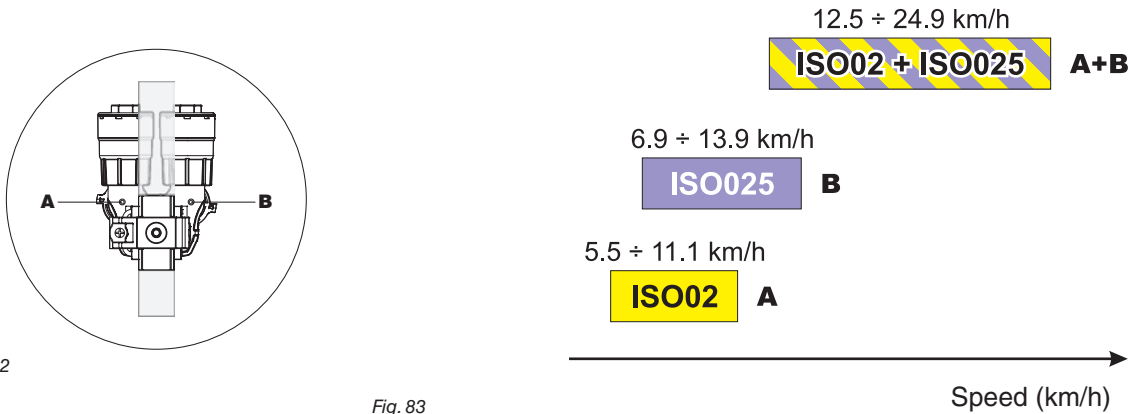Coupled with a specific pneumatic control unit and the relevant nozzle holders (refer to ARAG general catalogue), Bravo 400 in Selejet mode automatically selects the nozzle or the suitable combination of two different nozzles (**A** and **B**) for the speed and required spray rate. This system allows for widening the machine operating range, i.e. in the above instance, using ISO11002 yellow (**A**) and ISO110025 violet (**B**) nozzles, that work correctly at a speed from 5.5 km/h to 24.9 km/h.




According to the set data and those detected by the sensors, Bravo 400 select the suitable nozzle configuration constantly checking that:

- the spraying pressure always remains within the job features set for each single nozzle;
- in case of many possible nozzle configurations, the operating pressure of the configuration in use is as close as possible to the operating range of the nozzle;
- required number of nozzle changes is as low as possible.

When setting a treatment in Selejet mode make sure to couple compatible nozzles.

For example:

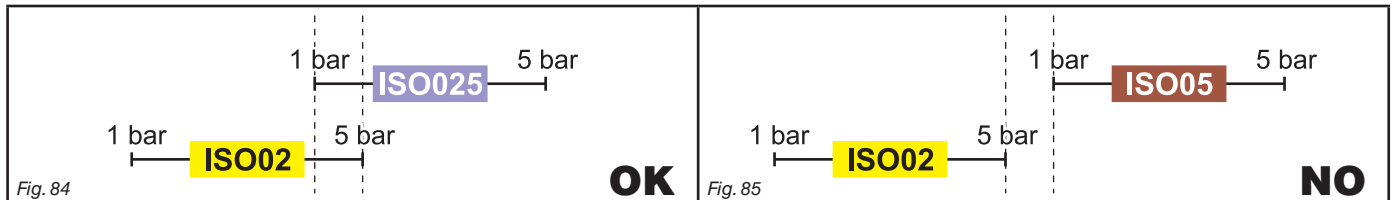- **Compatible nozzles:** the rate at 1 bar of the ISO025 nozzle is LOWER than the rate at 5 bars of the ISO02 nozzle (Fig. 84).
- **NOT compatible nozzles:** the rate at 1 bar of the ISO05 nozzle is HIGHER than the rate at 5 bars of the ISO02 nozzle (Fig. 85).



In the same way, the overall rate of both nozzles at MINIMUM pressure shall be LOWER than the rate of the high rate nozzle at MAXIMUM pressure.



When setting the job (par. 11.2 and 13.1.2) Bravo 400 automatically checks the rates and in case the conditions are not respected the computer will display the message Wrong nozzle configuration!



11.2 - Treatment settings

In this menu it is possible to set 20 different types of treatments. Select the treatment to be set (Fig. 86) and enter the features (Fig. 87). Repeat the programming for each treatment.

ONLY FOR seleJET

The column of nozzles (C) is double since each treatment can be associated with two nozzles (Fig. 88).

Treatment settings		
01	60 l/ha	ISO01
A	B 90	C ISO15
03	120 l/ha	ISO02
04	Disabled	
05	Disabled	
06	Disabled	
07	Disabled	
08	Disabled	
09	Disabled	
10	Disabled	
11	Disabled	

Fig. 86

Legend:
A Treatment number
B Set spray rate
C Selected nozzle

Treatment 1	
Status	Enabled
Target rate	60 l/ha
Nozzle	ISO01

Fig. 87

Treatment 1	
Status	Enabled
Target rate	60 l/ha
Nozzle A	ISO01
Nozzle B	ISO015

Fig. 88

11.2.1 Status

Status
Disabled
✓ Enabled

Fig. 89

Allows for enabling/disabling the selecting treatment.

11.2.2 Target rate

Target rate
0060 l/ha
Maximum value: 9999 l/ha
Minimum value: 1 l/ha

Fig. 90

Set the spray rate value for the selected treatment.

11.2.3 Nozzle

Nozzle	Flow rate	Pressure
✓ ISO01	0.40 l/min	3.0 bar
ISO015	0.60 l/min	3.0 bar
ISO02	0.80 l/min	3.0 bar
ISO025	1.00 l/min	3.0 bar
ISO03	1.20 l/min	3.0 bar
ISO04	1.60 l/min	3.0 bar
ISO05	2.00 l/min	3.0 bar
ISO06	2.40 l/min	3.0 bar
ISO08	3.20 l/min	3.0 bar
ISO10	4.00 l/min	3.0 bar
ISO15	6.00 l/min	3.0 bar

Fig. 91

Link the nozzle type to the selected treatment.

Bravo 400 can calculate the pressure without the pressure sensor based on the rate of the used nozzle.

ONLY FOR seleJET

As explained in paragraph 11.1 each treatment can be associated with two nozzles (Fig. 88), it is thus necessary to program the items **Nozzle A** and **Nozzle B**: if you need to use only one of the two nozzles, program only that one and disable the other selecting the relevant item

Example: Nozzle A , Nozzle B



11.3 - Nozzles settings

Nozzles settings		
ISO01	0.40 l/min	3.0 bar
ISO15	0.6 l/min	3.0 bar
ISO02	0.80 l/min	3.0 bar
ISO025	1.00 l/min	3.0 bar
ISO03	1.20 l/min	3.0 bar
ISO04	1.60 l/min	3.0 bar
ISO05	2.00 l/min	3.0 bar
ISO06	2.40 l/min	3.0 bar
ISO08	3.00 l/min	3.0 bar
ISO10	4.00 l/min	3.0 bar
ISO15	6.00 l/min	3.0 bar

Legend:
A Nozzle
B Reference rate
C Reference pressure

Fig. 92

User A	
Flowrate	1.00 l/min
Pressure	5.0 bar
Minimum pressure	Disabled
Maximum pressure	Disabled

Fig. 93

In this menu it is possible to set 12 types of ISO nozzles and 6 "Users" (A, B, C, D, E, F).
 Select the nozzle to be set (Fig. 92) and enter the features (Fig. 93).
 Repeat the programming for each nozzle.

11.3.1 Flowrate - Pressure

Flowrate	
01.00	l/min
Maximum value:	99.90 l/min
Minimum value:	0.10 l/min

Fig. 94

Pressure	
05.0	bar
Maximum value:	99.9 bar
Minimum value:	0.1 bar

Fig. 95

Set the reference rate and pressure for the selected nozzle. Bravo 400 can calculate the pressure without the pressure sensor based on the rate of the used nozzle.

The Flowrate and Pressure data can be ONLY modified for the "User" nozzles and not for the "ISO" ones.

11.3.2 Minimum pressure - Maximum pressure

Minimum pressure	
02.0	bar
Maximum value:	99.9 bar
Minimum value:	0.1 bar

Fig. 96

Maximum pressure	
10.0	bar
Maximum value:	99.9 bar
Minimum value:	0.1 bar

Fig. 97

Set the pressure limits for the selected nozzle.
 Enable the suitable function in the Alarms menu (par. 11.5.4 - Nozzle pressure alarm) to allow Bravo 400 triggering an alarm when the nozzle is out of the set limits.

ONLY FOR **seleJET**
 On the basis of the limits of the nozzle in use Bravo 400 select the suitable nozzle during the treatment; for this reason it is necessary to set them correctly.



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change



Exit function or datum change



Par. 9.4



11.4 - Working limits

Working limits	
Minimum spraying speed	Disabled
Minimum regulation pressure	Disabled
Sections overlapping limit	99 %
Boundary sct. management	Disabled
Intentional overlap	0.00 m

In this menu it is possible to set the machine working limits.

Fig. 98

11.4.1 Minimum spraying speed

Minimum spraying speed	
01.0 km/h	
Maximum value:	99.0 km/h
Minimum value:	1.0 km/h

Set the working minimum speed: Bravo 400 closes the main valve when the tractor speed is lower than the set one. The datum can be disabled with the relevant button: the item **Disabled** will be displayed.

Fig. 99

11.4.2 Minimum regulation pressure

Minimum regulation pressure	
00.1 bar	
Maximum value:	99.9 bar
Minimum value:	0.1 bar

Set the minimum working pressure: Bravo 400 automatically blocks the proportional valve regulation when the pressure is lower than the set one. The datum can be disabled with the relevant button: the item **Disabled** will be displayed.

Fig. 100

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------

11.4.3 Sections overlapping limit


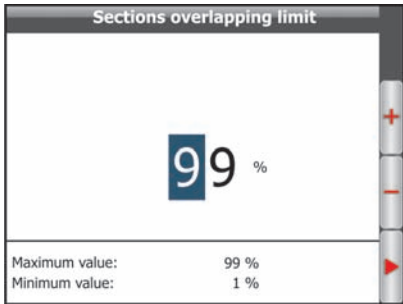


Fig. 101

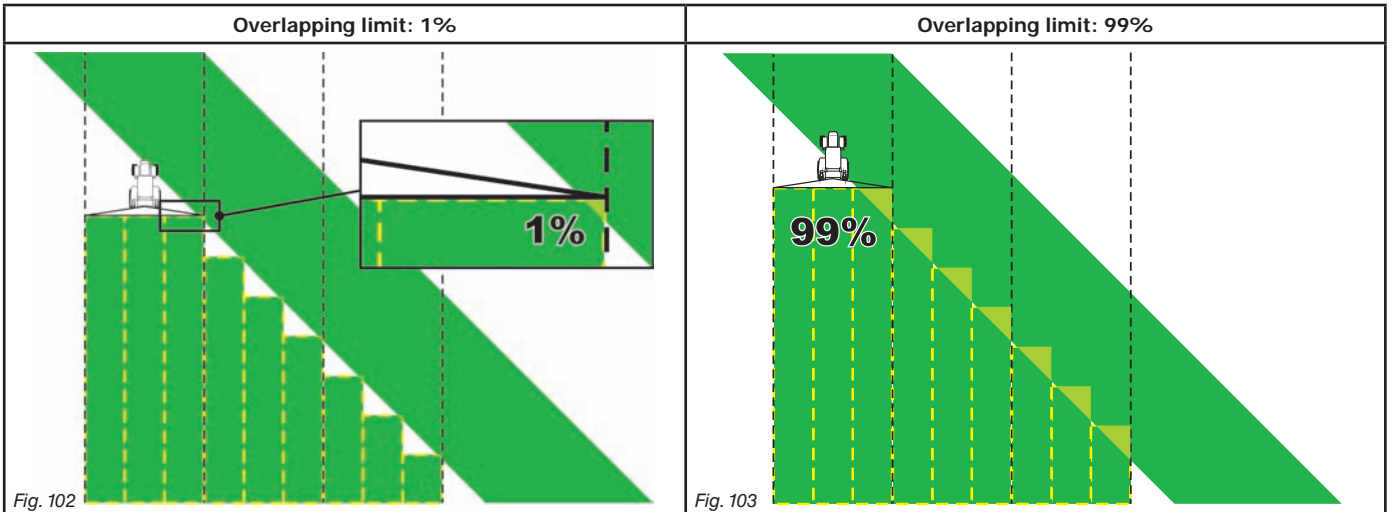Enables you to set the allowed threshold for spraying overlapping. When this value is exceeded, Bravo 400 restores the correct treatment: according to the active operation mode Bravo 400 will request to close the relevant valves or will automatically close the boom sections (par. 12.6).



11.4.4 Boundary sct. management

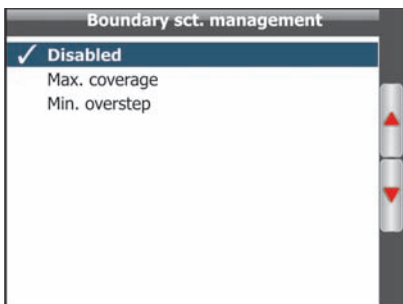


Fig. 104

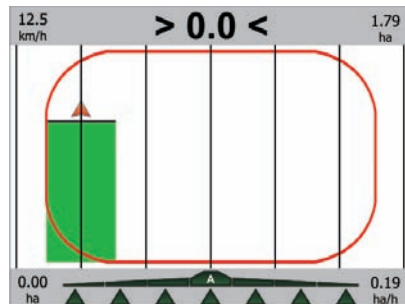

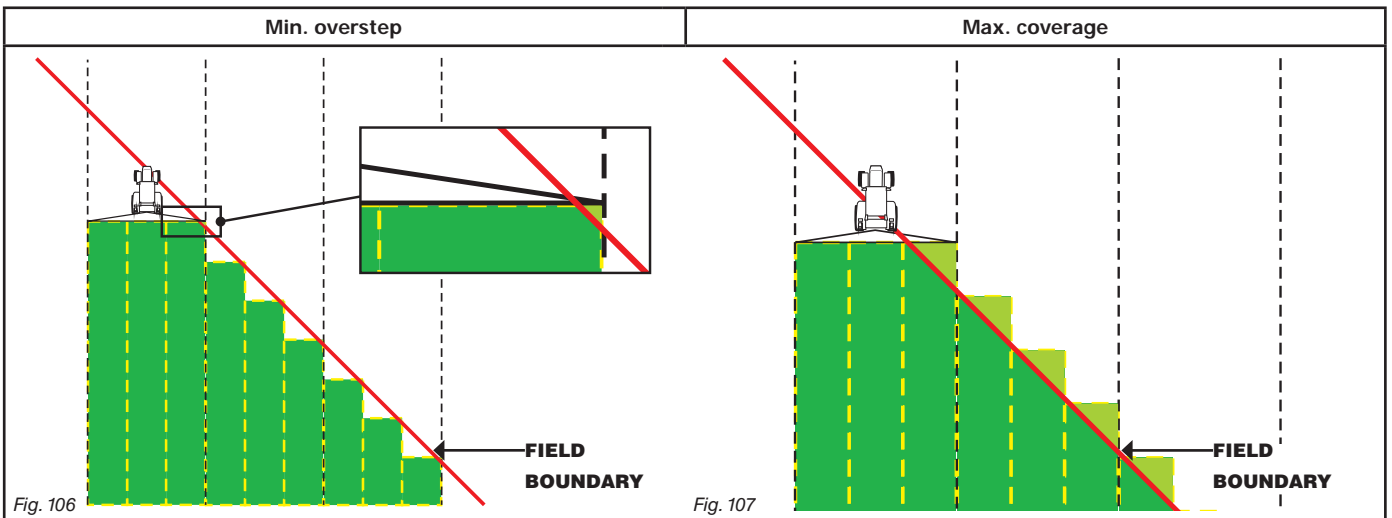


Fig. 105

Determines the moment when Bravo 400 requires to open or close the section valves spraying outside the field boundaries.

- **Min. overstep option:** in Fig. 106 the request of closing / opening the section valves will be triggered upon the least action out of field boundaries.
- **Max. coverage option:** in Fig. 107 the request of closing / opening the section valves will ONLY be triggered when the machine is spraying out of field boundaries for the whole coverage.

To use these settings you need to:
 - have marked field boundaries (red track in Fig. 105), using the function "Area" (par. 13.1.8).
 - have enabled the section automatic control: the icon  indicates the active automatic control.



11.4.5 Intentional overlap

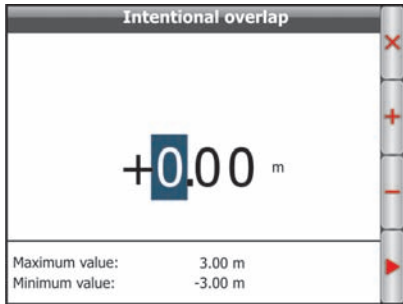


Fig. 108

Set an overlapping width between the sprays (Fig. 109) to avoid untreated areas due to driving imprecision. Otherwise, a negative value will lead to an untreated space between the sprays (Fig. 110).

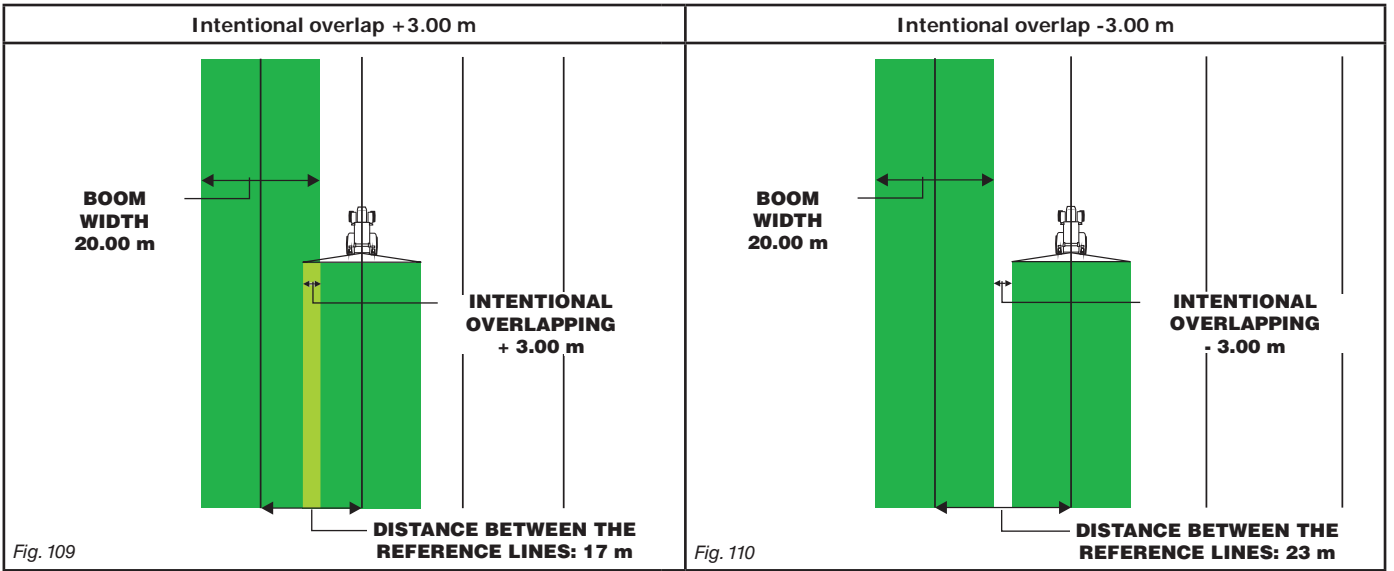


Fig. 109

Fig. 110



11.5 - Alarms

Alarms	
Steer radius	Disabled
Nozzle wear check	Disabled
HDOP level	4.0
Nozzle pressure alarm	Disabled

In this menu it is possible to set the Bravo 400 operating alarms.




Refer to par. 14.3 - Error Messages for the steps to take during the alarms.

Fig. 111

11.5.1 Steer radius

Steer radius	
00.1 m	
Maximum value:	19.9 m
Minimum value:	0.1 m

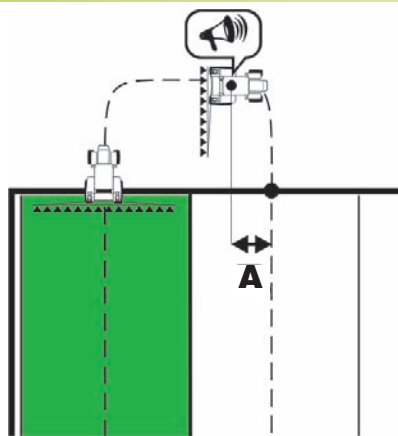Fig. 112



Entered value allows system to trigger an acoustic alarm at the exact moment when operator must turn to center the following track, without leaving any unsprayed areas or overlapping areas.

This distance should correspond to tractor steering radius (**A** in Fig. 113), used at field end to revert travel direction and resume spraying on the nearby track, but value shall be adjusted according to the operator skills and vehicle speed. **Alarm is triggered ONLY if vehicle travel direction creates an angle wider than 60° compared to the track to be run through.**

Fig. 113

11.5.2 Nozzle wear check

Nozzle wear check	
01 %	
Maximum value:	50 %
Minimum value:	1 %

Fig. 114

This alarm can ONLY be activated if the system features both the flowmeter and the pressure sensor: Bravo 400 compares the actual rate measured by the flowmeter and by the pressure sensor. When the difference between the two rate values exceeds the set percentage the alarm is triggered. The alarm can be disabled with the relevant button: the item **Disabled** will be displayed.



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change



Exit function or datum change



Par. 9.4

11.5.3 HDOP level

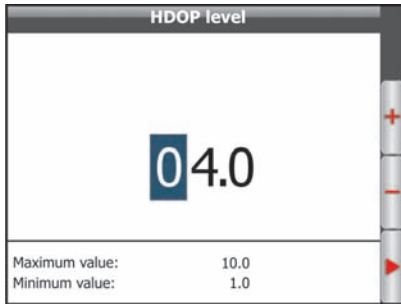


Fig. 115

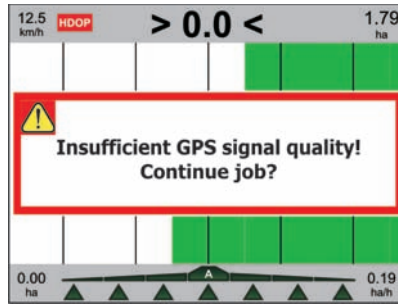


Fig. 116

"HDOP" is the value by which satellites number and position affect latitude and longitude accuracy; the lower the value, the higher the accuracy. Accuracy alarm is triggered when HDOP value measured by the GPS receiver exceeds set threshold: in this case Bravo 400 asks the operator whether to continue job underway (Fig. 116). We suggest NOT to set values higher than 4.0.

11.5.4 Nozzle pressure alarm



Fig. 117

Allows enabling the pressure alarm for the nozzle in use: out of the limits set in the **Minimum pressure / Maximum pressure** menu (par. 11.3.2), the computer triggers an alarm.



Refer to par. 14.3 - Error Messages for the steps to take during the alarms.



11.6 - User preferences

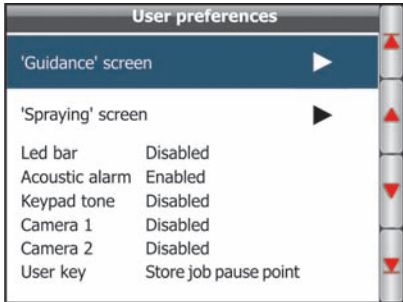


Fig. 118

In this menu it is possible to set the Bravo 400 sound and display preferences.

11.6.1 'Guidance' screen

• L1 - L2 - R1 - R2 data

Allows setting spraying job data you wish to view on guidance page (Fig. 119).

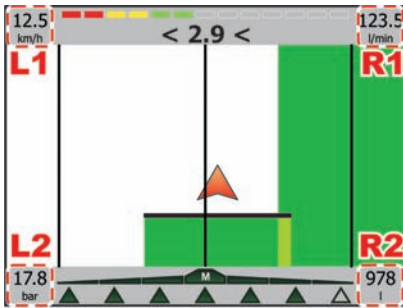


Fig. 119

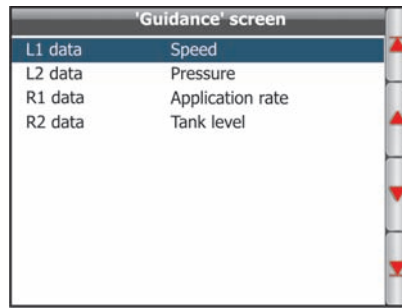


Fig. 120

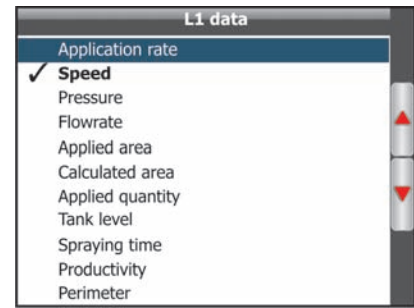


Fig. 121

11.6.2 'Spraying' screen

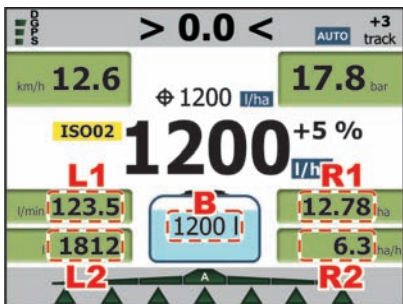


Fig. 122

• L1 - L2 - R1 - R2 data

Allows setting spraying job data you wish to view on spraying screen (Fig. 122).

• Tank data

Allows setting tank data you wish to view on spraying screen (B, Fig. 122).

If the Both item is set, the values alternate.

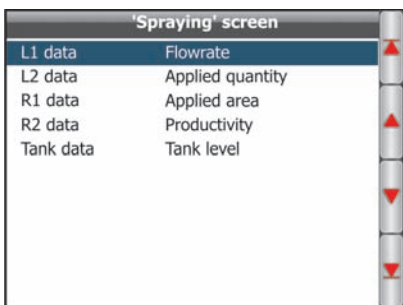


Fig. 123

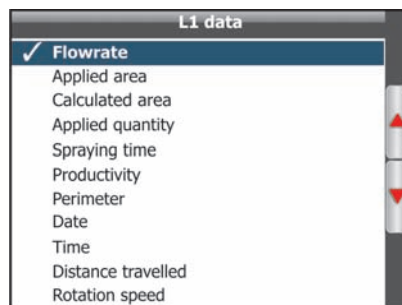


Fig. 124



Fig. 125

11.6.3 Led bar

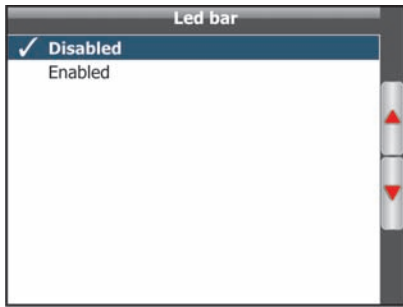


Fig. 126

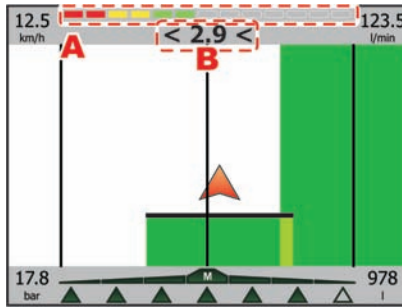


Fig. 126a

It allows to display on the guidance screen the led bar (A in Fig. 126a) which graphically represents the deviation (B).

11.6.4 - Acoustic alarm

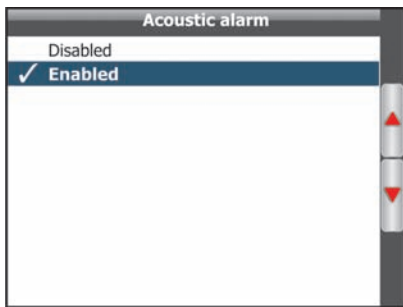


Fig. 127

Allows enabling/disabling acoustic warning activated during alarms.

11.6.5 Keypad tone

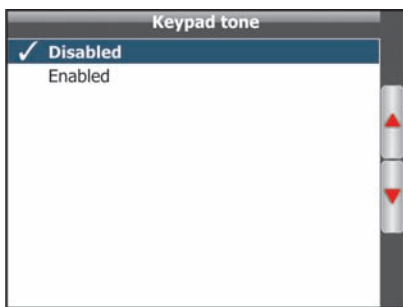


Fig. 128

Allows enabling/disabling tone activated when pressing keys.

11.6.6 Camera 1 / Camera 2

Up to 2 cameras can be connected to Bravo 400 to check the working areas out of the operator view (i.e.: when going in reverse). The menu allows to select the display mode of each camera (Fig. 130 - 131).

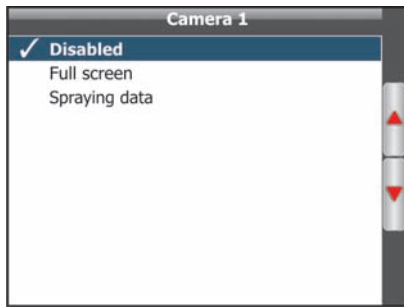


Fig. 129



Fig. 130

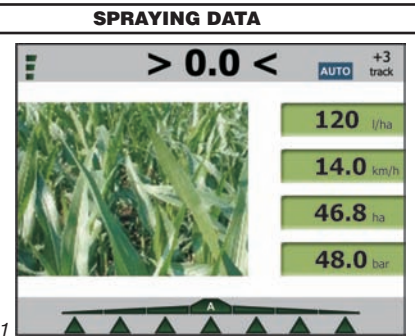


Fig. 131

11.6.7 User key

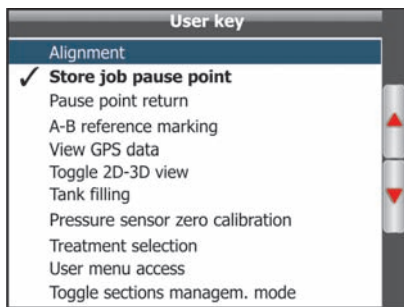


Fig. 132


Allows customization of the **USER** key.

When button is pressed, one of the following options is executed:

- Alignment (par. 13.1.7 - **F6** Align).
- Pause point storing (par. 13.1.3 - **F2** Pause).
- Pause point return (par. 13.1.5 - **F4** Return).
- New reference A-B marking (par. 13.2.2 - **F2** Mark AB).
- GPS data displaying (par. 13.2.6 - **F7** GPS).
- 2D-3D displaying change (par. 13.2.3 - **F3** 2D/3D).
- Tank filling (par. 13.1.9 - **FB** Tank).
- Pressure sensor zero setup (par. 13.2.7 - **FB** Pressure).
- Spraying selection (par. 13.1.1 and 13.1.2 - **F1** Job type).
- Access to user menu (par. 13.3.4 - **FB** User).
- Section control mode change (par. 11.4.4 - **Working limits / Boundary sct. management**).

	Scrolling menu pages		Scrolling menu items		Reset / disable data		Increase / decrease data		Shift the cursor		Confirm access or datum change		Exit function or datum change		Par. 9.4
--	----------------------	--	----------------------	--	----------------------	--	--------------------------	--	------------------	--	--------------------------------	--	-------------------------------	--	----------

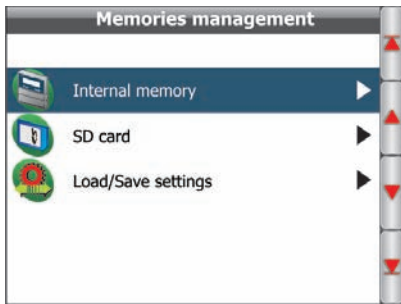11.7 Memories management



Allows you to load, save and/or delete information stored on Bravo 400 or on a remote memory (SD card); this data concern jobs done, spraying images, maps or machine configurations. The possible operations will be explained in the paragraphs below.

Preparing the SD card for data exchange: refer to par. 11.7.2.

Fig. 133

11.7.1 - Internal memory

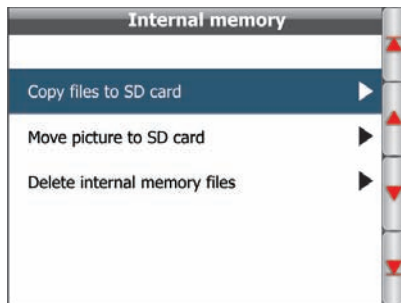


Fig. 134

Copy files to SD card

Allows you to transfer saved data, about jobs or maps, from Bravo 400 internal memory to a SD card.

Insert the SD card into the suitable groove to display the menu items (par. 6.2). Without the card the message SD card not found! is displayed.

• **Copy jobs to SD card**

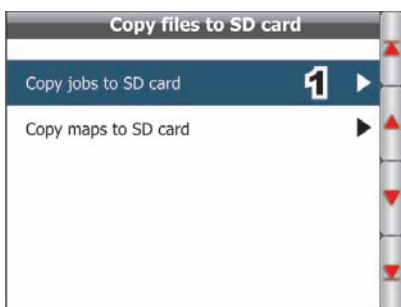


Fig. 135

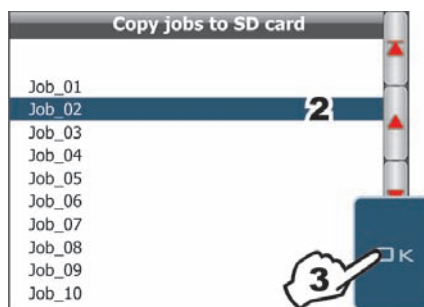


Fig. 136

1 Select the item **Copy jobs to SD card** (Fig. 135) and press **OK**;
2 Scroll down the job list (Fig. 136) and select the file to copy;
3 Confirm copy by pressing **OK**.
 A confirmation message is displayed once copy is completed (Fig. 137). Press **ESC**.

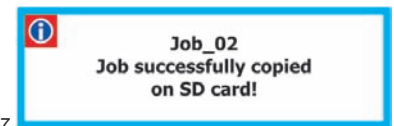


Fig. 137

• **Copy maps to SD card**

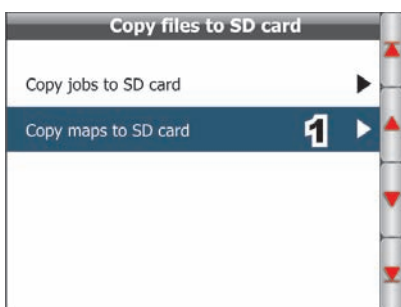


Fig. 138

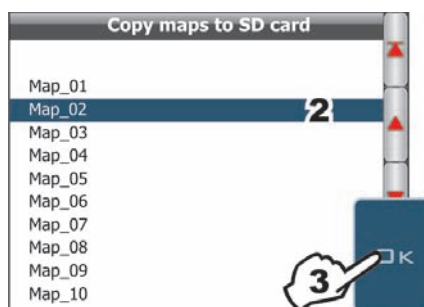


Fig. 139

1 Select the item **Copy jobs to SD card** (Fig. 138) and press **OK**;
2 Scroll down the map list (Fig. 139) and select the file to copy;
3 Confirm copy by pressing **OK**.
 A confirmation message is displayed once copy is completed (Fig. 140). Press **ESC**.

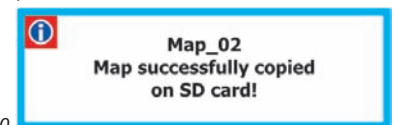
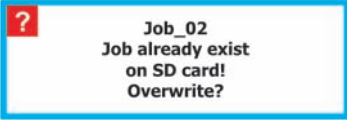
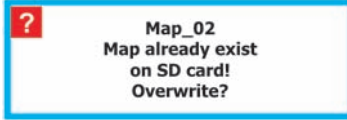


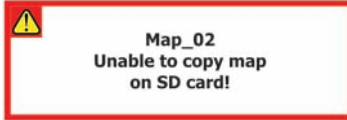


Fig. 140

CONT'D

Scrolling menu pages	Scrolling menu items	Reset / disable data	Increase / decrease data	Shift the cursor	Confirm access or datum change	Exit function or datum change	Par. 9.4
----------------------	----------------------	----------------------	--------------------------	------------------	--------------------------------	-------------------------------	----------

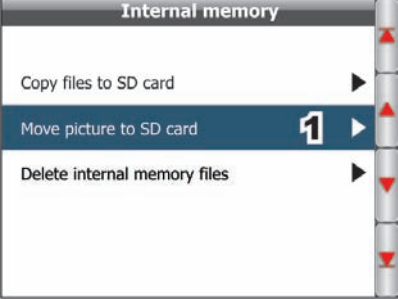
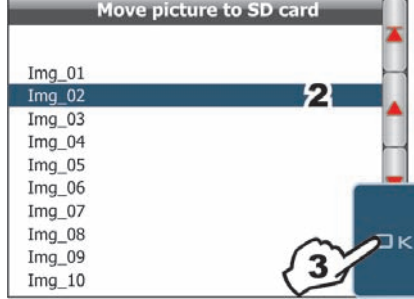
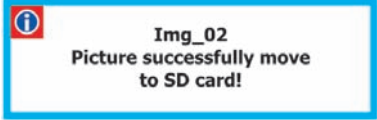
.....> Copy files to SD card (CONTINUED)

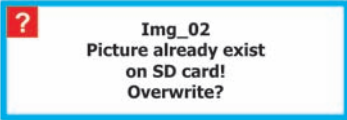

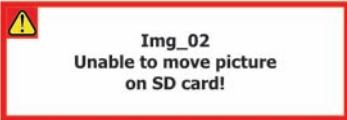
ERROR MESSAGES		
 <p>Fig. 141</p>	 <p>Fig. 142</p>	<p>The SD card already contains a file with this name. Following are the two possible instances: - Press OK to replace file.</p> <p> WARNING: ALL data concerning replaced file will be lost. - Press ESC to avoid replacing file: check file content or change its name before repeating saving control.</p>
 <p>Fig. 143</p>	 <p>Fig. 144</p>	<p>Possible causes: - Space available on SD card is over: delete some files from the memory as explained under par. 11.7.2 - SD card / Delete SD card files and try saving again.</p>

.....> Move picture to SD card

Allows moving to SD card the pictures saved during spraying.

 **WARNING: once moved on SD card the picture is AUTOMATICALLY deleted from the Bravo 400 memory.**

 <p>Fig. 145</p>	 <p>Fig. 146</p>	<p>1 Select item Move picture to SD card (Fig. 145) and press OK; 2 Scroll down the picture list (Fig. 146) and select the files to move; 3 Confirm by pressing OK. A confirmation message is displayed once saving is completed (Fig. 147). Press ESC.</p>
		 <p>Fig. 147</p>

ERROR MESSAGES		
 <p>Fig. 148</p>	<p>The SD card already contains a file with this name. Following are the two possible instances: - Press OK to replace file.</p> <p> WARNING: ALL data concerning replaced file will be lost. - Press ESC to avoid replacing file: check file content or change its name before repeating saving control.</p>	
 <p>Fig. 149</p>	<p>Possible causes: - Available space on SD card is over: delete files from the memory as explained under par. 11.7.2 - SD card / Delete SD card files and try saving again.</p>	

 <p>Scrolling menu pages</p>	 <p>Scrolling menu items</p>	 <p>Reset / disable data</p>	 <p>Increase / decrease data</p>	 <p>Shift the cursor</p>	 <p>Confirm access or datum change</p>	 <p>Exit function or datum change</p>	 <p>Par. 9.4</p>
--	---	---	---	--	---	--	---

.....> Delete internal memory files

Allows you to delete saved data, about jobs, pictures or maps, from Bravo 400 internal memory.

• Delete internal memory Jobs

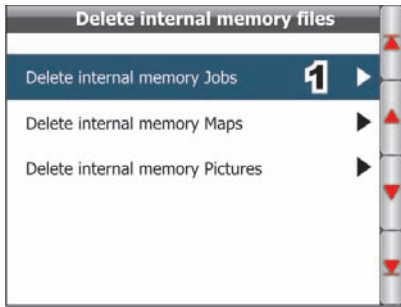


Fig. 150

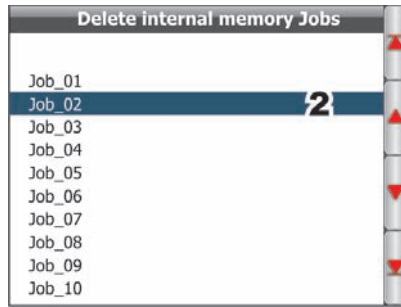


Fig. 151

- 1 Select item **Delete internal memory Jobs** (Fig. 150) and press **OK**;
- 2 Scroll down the job list (Fig. 151) and select the files to delete;
- 3 The message shown in Fig. 152 is displayed: confirm deletion by pressing **OK**.



Fig. 152

• Delete internal memory Maps

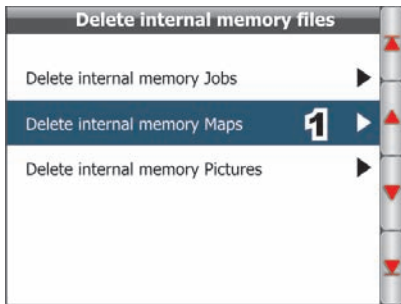


Fig. 153

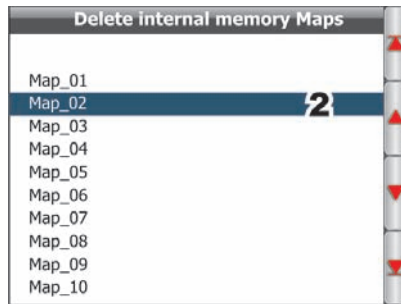


Fig. 154

- 1 Select item **Delete internal memory Maps** (Fig. 153) and press **OK**;
- 2 Scroll down the map list (Fig. 154) and select the files to delete;
- 3 The message shown in Fig. 155 is displayed: confirm deletion by pressing **OK**.

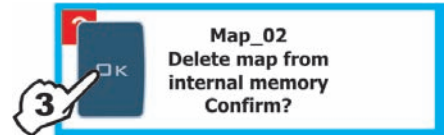


Fig. 155

• Delete internal memory Pictures

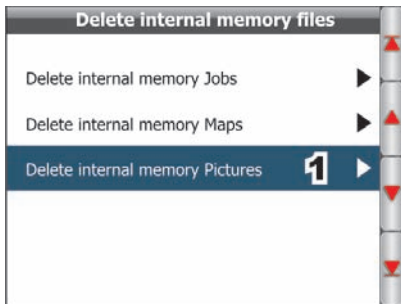


Fig. 156

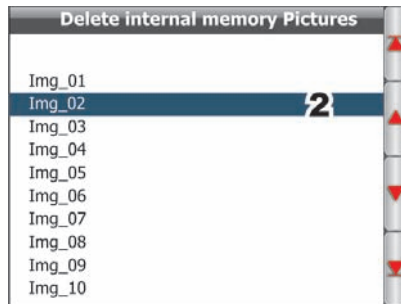


Fig. 157


- 1 Select item **Delete internal memory Pictures** (Fig. 156) and press **OK**;
- 2 Scroll down the picture list (Fig. 157) and select the files to delete;
- 3 The message shown in Fig. 158 is displayed: confirm deletion by pressing **OK**.



Fig. 158



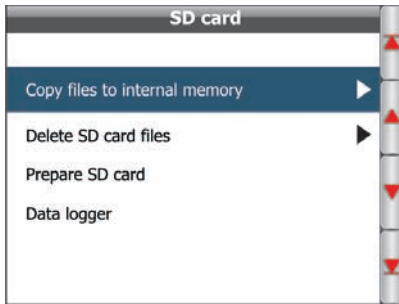11.7.2 - SD card



Insert the SD card into the suitable groove to display the menu items (par. 6.2). Without the card the message SD card not found! is displayed.

Fig. 159

Copy files to internal memory

Allows you to transfer saved data, about jobs or maps, from a SD card to the Bravo 400 internal memory.

• Copy Jobs to internal memory

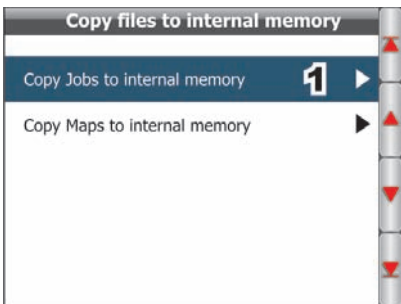


Fig. 160

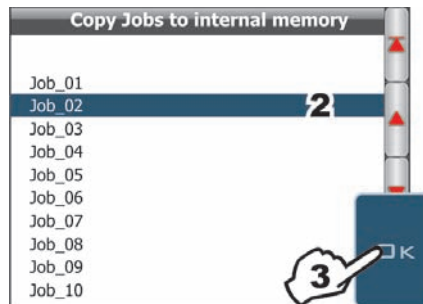


Fig. 161

- 1 Select the item **Copy Jobs to internal memory** (Fig. 160) and press **OK**;
 - 2 Scroll down the job list (Fig. 161) and select the file to copy;
 - 3 Confirm copy by pressing **OK**.
- A confirmation message is displayed once copy is completed (Fig. 162). Press **ESC**.

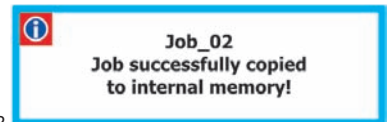


Fig. 162

• Copy Maps to internal memory

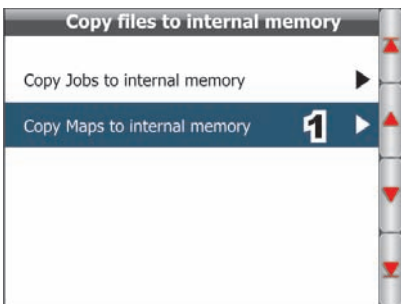


Fig. 163

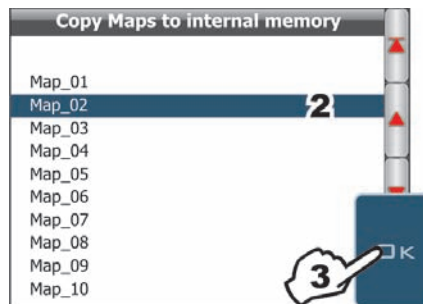


Fig. 164

- 1 Select item **Copy Maps to internal memory** (Fig. 163) and press **OK**;
 - 2 Scroll down the map list (Fig. 164) and select the file to copy;
 - 3 Confirm copy by pressing **OK**.
- A confirmation message is displayed once copy is completed (Fig. 165). Press **ESC**.

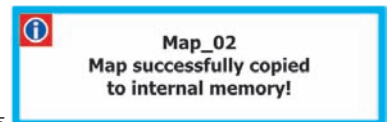


Fig. 165

ERROR MESSAGES

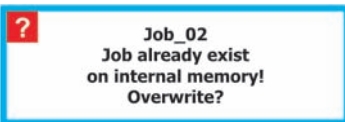


Fig. 166

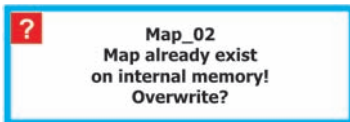


Fig. 167

The internal memory already contains a file with this name. Following are the two possible instances:
 - Press **OK** to replace file.
WARNING: ALL data concerning replaced file will be lost.
 - Press **ESC** to avoid replacing the file: check file content or change name before repeating save option.

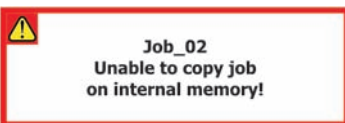


Fig. 168

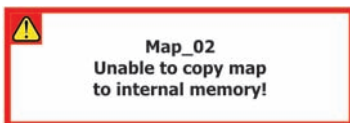


Fig. 169

Possible causes:
 - Space available on internal memory is over: eliminate some files as explained under par. 11.7.1 **Internal memory / Delete internal memory files** and try saving again.

CONT'D



Scrolling menu pages



Scrolling menu items



Reset / disable data



Increase / decrease data



Shift the cursor



Confirm access or datum change



Exit function or datum change



Par. 9.4

.....> Delete SD card files

Allows you to delete saved data, about jobs or maps, from SD card.

• Delete SD card Jobs



Fig. 170

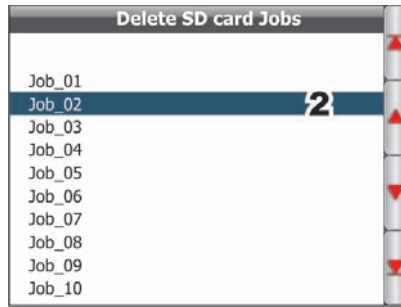


Fig. 171

- 1 Select item **Delete SD card Jobs** (Fig. 170) and press **OK**;
- 2 Scroll down the job list (Fig. 171) and select the file to delete;
- 3 The message shown in Fig. 172 is displayed: confirm deletion by pressing **OK**.



Fig. 172

• Delete SD card Maps



Fig. 173

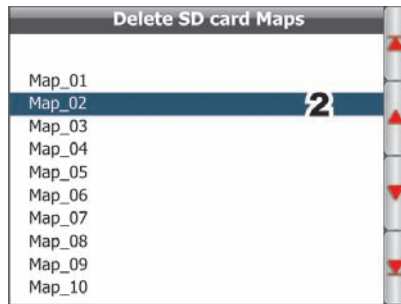


Fig. 174

- 1 Select item **Delete SD card Maps** (Fig. 173) and press **OK**;
- 2 Scroll down the map list (Fig. 174) and select the file to delete;
- 3 The message shown in Fig. 175 is displayed: confirm deletion by pressing **OK**.


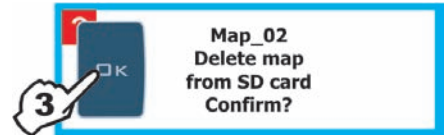


Fig. 175

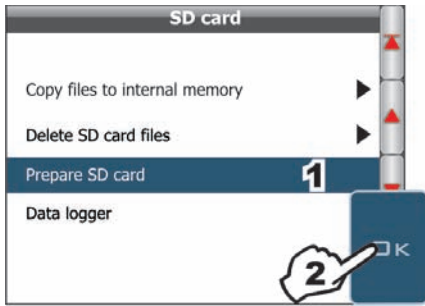.....> Prepare SD card




It allows to save folders on SD card to correctly exchange data as described in the **Memories management** menu (par. 11.7).

- 1 Select the item **Prepare SD card**.
- 2 Press **K**. SD card is now ready to use.

After this operation has been carried out the item **Prepare SD card** is disabled (grey color). Use the SD card in the package.

Fig. 176

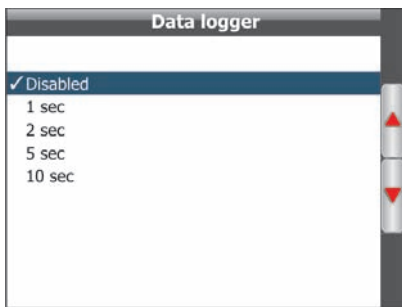.....> Date logger



It allows to enable / disable saving on the SD card the job data and the machine geographic position during the spraying. Set a save interval (1, 2, 5, 10 s) to enable data recorder.

Fig. 177

"SPRAYER.LOG" DATA LOGGER FILE

With data recorder enabled Bravo 400 creates a file **"Sprayer.log"** on SD card, where job data are saved * at the interval set in the **Date logger** menu. Logging becomes active when the main control in ON.

Data inside the file can be displayed on Personal Computer with a text editor.

They consist of a header followed by data strings (see example below).

Each time the configuration is changed or the job is started / restarted a new header followed by data will be generated.

Header legend:

- #01: Manufacturer
- #02: Software version
- #03: Number of sections, width of each section (cm)
- #04: Description of data in the following strings

Header example:

- #01:Arag s.r.l.
- #02:1.2.000 - beta 4
- #03:7 140, 420, 420, 525, 420, 420, 140
- #04: day, time, lat, lon, rate, speed, flow, pressure, rpm, sprayed liters, sprayed surface, active nozzles, sections

Data string legend:

- 30/11/2010 = Date (DD:MM:YY)
- 13:24:53 = Time (HH:MM:SS)
- 25.45568848 = Latitude (in degrees)
- 51.87777710 = Longitude (in degrees)
- 60 = Spray rate (l/ha)
- 9.5 = Speed (km/h)
- 21.9 = Rate (l/min)
- 4.0 = Pressure (bar)
- 856 = Rotation speed (rpm)
- 67 = Sprayed fluid (l)
- 10719 = Area covered (m2)
- ISO01 = Nozzle used
- 1111110 = Section status (1 open, 0 closed: in the example all sections are open except the last one)

Example of data string:

30/11/2010,13:24:53,-25.45568848,-51.87777710, 60,9.5,21.9, 4.0,856, 67,10719,ISO01,111110

* These data are represent just a mere example. In real facts they will always be different according to the type of spraying.

END OF PAR. 11.72 - SD CARD

	Scrolling menu pages		Scrolling menu items		Reset / disable data		Increase / decrease data		Shift the cursor		Confirm access or datum change		Exit function or datum change		Par. 9.4
--	----------------------	--	----------------------	--	----------------------	--	--------------------------	--	------------------	--	--------------------------------	--	-------------------------------	--	----------



11.7.3 - Load / Save settings

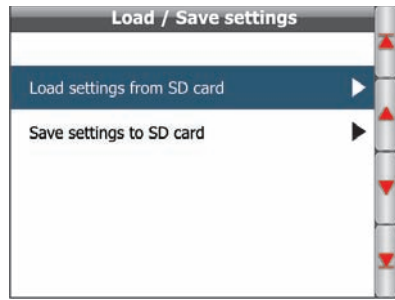


Fig. 178

Bravo 400 settings can be loaded or saved to SD card to be able to restore device settings when needed, solve problems or set another Bravo 400 without having to repeat all operations manually.

Once installation is completed, and you checked machine correct operation, we recommend you to store the whole configuration onto SD card.

Insert the SD card into the suitable groove to display the menu items (par. 6.2). Without the card the message SD card not found! is displayed.

Load settings from SD card

Allows you to select a configuration file stored on SD card and reset Bravo 400.

WARNING: UPLOADING A CONFIGURATION FILE TO BRAVO 400 WILL DELETE ALL SETTINGS MADE SO FAR.

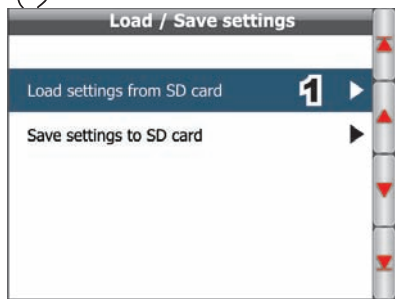


Fig. 179

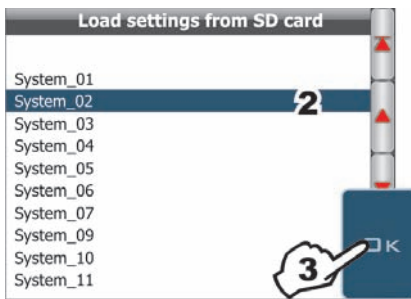


Fig. 180

- 1 Select item **Load settings from SD card** (Fig. 179) and press **OK**;
 - 2 Scroll down the configuration list (Fig. 180) and select the file to copy;
 - 3 Confirm loading by pressing **OK**.
- A confirmation message is displayed once setting is completed (Fig. 181). Press **ESC**.

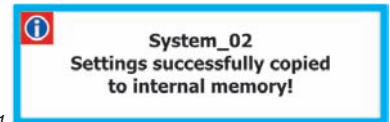


Fig. 181

Save settings to SD card

Allows saving Bravo 400 configuration to SD card: you can upload it again at a later moment, any time it is necessary to repeat the same settings.

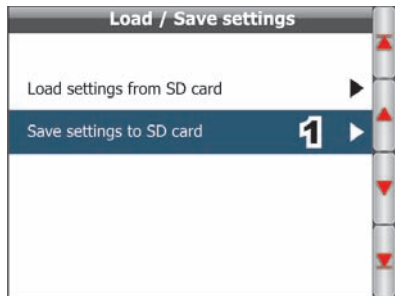


Fig. 182



Fig. 183

- 1 Select item **Save settings to SD card** (Fig. 182) and press **OK**;
 - 2 Enter file name using keys shown in Fig. 183, as described in par. 6.3 - Using the programming keys;
 - 3 Confirm name by pressing **OK**.
- A confirmation message is displayed once saving is completed (Fig. 184). Press **ESC**.


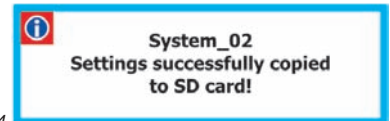


Fig. 184

ERROR MESSAGES

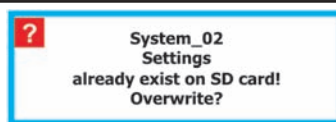

Fig. 185



The SD card already contains a file with this name. Following are the two possible instances:
 - Press **OK** twice to replace file.
WARNING: ALL data concerning replaced file will be lost.
 - Press **ESC** to avoid replacing file: check file content or change its name before repeating saving control.

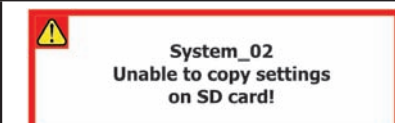


Fig. 186

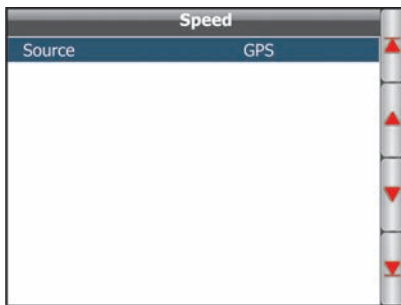


Fig. 187

Possible causes:
 - Space available on SD card is over: eliminate some files from SD card and try saving again.
 If the problems persist, please contact the service centre.

		Scrolling menu pages			Scrolling menu items		Reset / disable data			Increase / decrease data		Shift the cursor		Confirm access or datum change		Exit function or datum change		Par. 9.4
--	--	----------------------	--	--	----------------------	--	----------------------	--	--	--------------------------	--	------------------	--	--------------------------------	--	-------------------------------	--	----------

 11.8 - Speed



The information about the speed is usually received by the GPS connected to Bravo 400. Without signal from GPS this menu allows to select the wheel sensor as alternative source, and calculate data according to the inputs received by the speed sensor on the wheel.


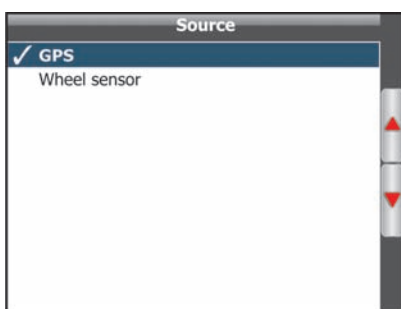
 This menu is displayed ONLY when the wheel sensor is Enabled (par. 10.10).

Fig. 188

11.8.1 Source



It allows to select the source to calculate the speed. When the item **Maximum speed alarm** is set, the speed is calculated with the inputs coming from the speed sensor installed on the wheel. Set the wheel constant with the menus **Wheel constant** or **Constant calculation**.


 **Take measurements with tyres at the operating pressure. This test must be performed on medium-hard terrain; for application to very soft or very hard terrain, rolling diameter may vary, leading to inaccurate output calculation; when this is the case, repeat the procedure. During the test cover the distance with the tank filled up to half capacity with water.**

Fig. 189

Wheel constant

It allows to enter the wheel constant value calculated with the suitable formula. The wheel constant can be calculated with a good approximation detecting the distance travelled by the wheel with the speed sensor. The longer the distance travelled, the more accurate wheel constant calculation.

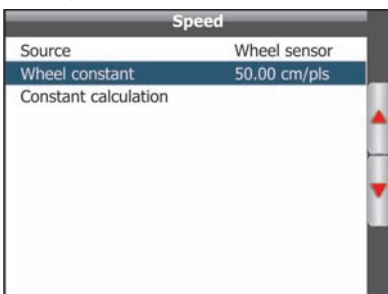


Fig. 190

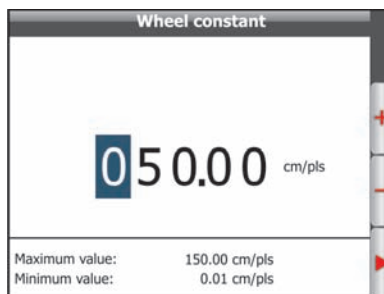


Fig. 191

Select the item **Wheel constant** and enter the calculated value.

$$K_{wheel} = \frac{\text{distance travelled (cm)}}{\text{no. of detection points} \times \text{wheel rpm}}$$

- <distance travelled> , distance expressed in cm covered by the wheel along measurement travel.
- <no. of measurement points> number of measurement points (e.g. magnets, bolts, etc.), mounted on wheel.
- <no. of wheel revolutions> number of wheel revolutions required to travel measurement distance.

Constant calculation

It allows to calculate and save the wheel constant with the formula below:

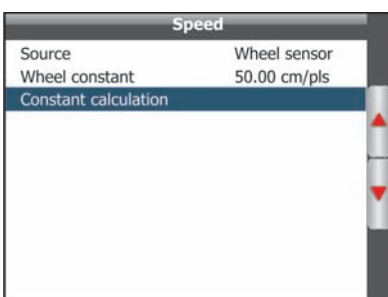


Fig. 192

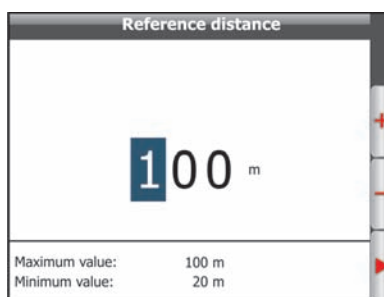


Fig. 193

- Measure a straight path at least 100 m long.
- Select the item **Constant calculation** (Fig. 192) and press **OK**;
- The screen in Fig. 193 will be automatically displayed: enter the **Reference distance** to be covered and press **OK**. The message will be displayed **Drive trough setted distance and press OK key**
- Travel the required distance. When finished, stop the tractor.
- Press **OK** to stop counting: the computer will show the calculated constant. Wheel constant has been stored.

11.9 - Test



Allows you to check Bravo 400 correct operation:
 Tests are **READING-ONLY** data.

Fig. 190


11.9.1 - Display test



Test basically consists in switching display on to check its correct operation; press **ESC** to quit.

Fig. 191

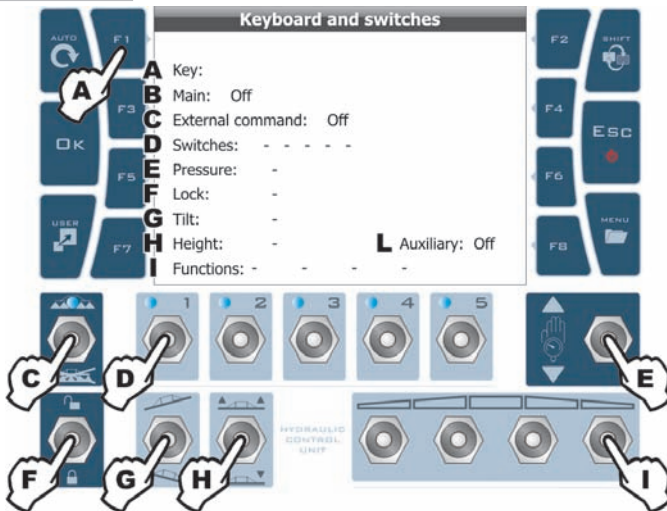11.9.2 - Keyboard and input test



Press all keys or switches one at a time: if operation is correct, the display will show the name of relevant control.

- A Key:**
(F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / Auto / OK / User / Shift / Esc / Menu)
- B Main valve: (On / Off)**
- C External command: (On / Off)**
the display shows the presence of a main external control to start the spraying.
- D Switches: (1 / 2 / 3 / 4 / 5)**
- ONLY FOR SEQUENTIAL VERSION:**
- Right: (Open / Close)** **Left: (Open / Close)**
- E Pressure: (+ / -)**
- F Lock: (Unlock / Lock)**
- G Tilt: (Left / Right)**
- H Height: (Down / Up)**
- I Functions: (Open / Close)**
- L Auxiliary: (On / Off)**

Fig. 192

	Scrolling menu pages		Scrolling menu items		Reset / disable data		Increase / decrease data		Shift the cursor		Confirm access or datum change		Exit function or datum change		Par. 9.4
--	----------------------	--	----------------------	--	----------------------	--	--------------------------	--	------------------	--	--------------------------------	--	-------------------------------	--	----------

 11.9.3 - Signals test

Inputs	
[S] Speed	0.00 Hz
[F] Flowrate	0.00 Hz
[M] Pressure	0.0 mA
[T] Filling flowrate	0.00 Hz
[X] Rev counter	0.00 Hz

Bravo 400 detects frequency and current generated by each sensor on the system.

Fig. 193

 11.9.4 - Software versions

Software versions	
Monitor software version:	1.2.000 - beta 3
RCU software version:	1.11 beta
Switch panel version:	1.10 beta

Bravo 400 displays the software versions.






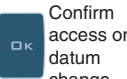


Fig. 194

 11.9.5 - Signals simulation

Signals simulation	
Speed simulation	Disabled

It allows to enable/disable the speed simulation
The simulation allows to test setup with stopped machine (par. 12.5).

Fig. 195

 Scrolling menu pages	 Scrolling menu items	 Reset / disable data	 Increase / decrease data	 Shift the cursor	 Confirm access or datum change	 Exit function or datum change	 Par. 9.4
---	--	--	--	---	--	---	--

12 USE

12.1 Computer controls

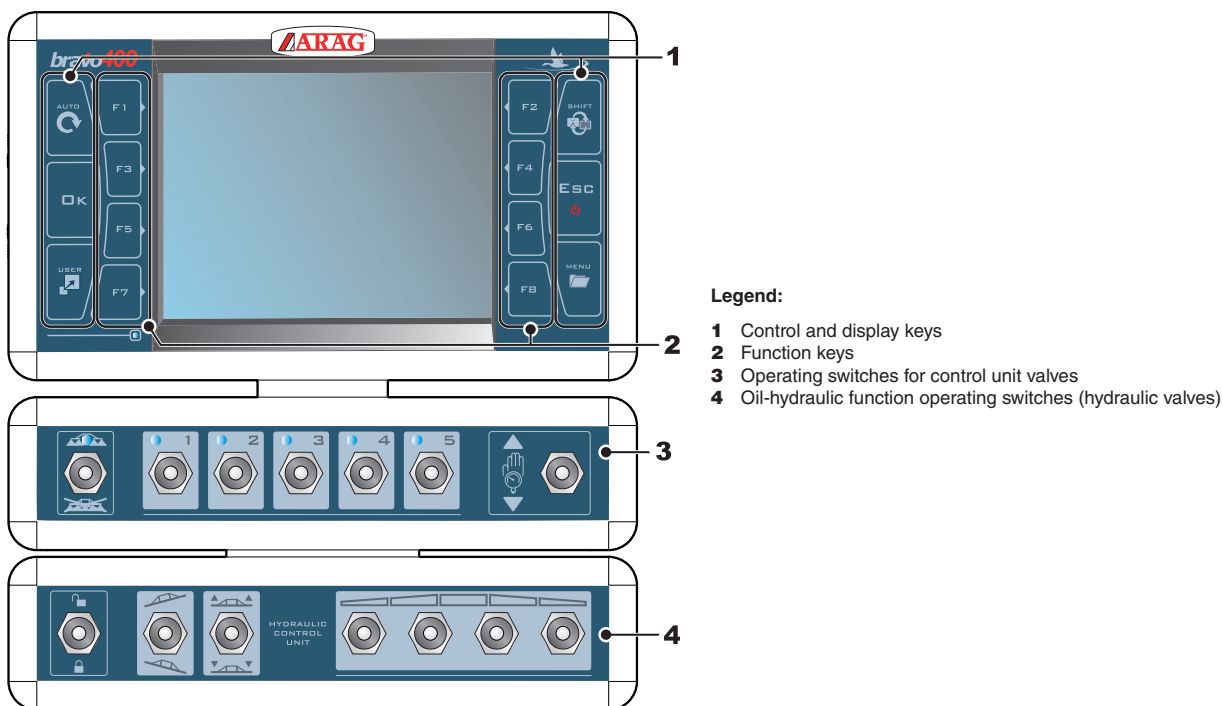


Fig. 196

12.2 Using keys

SELECT / EDIT/ SAVE DATA

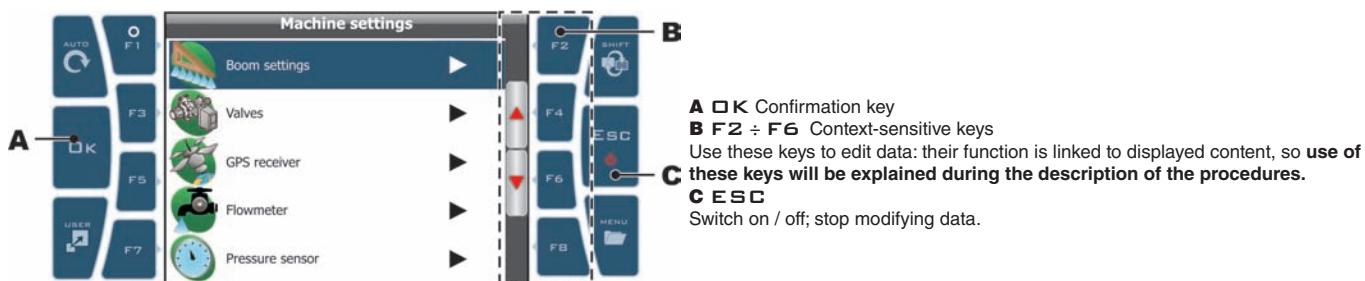


Fig. 197

NAVIGATION

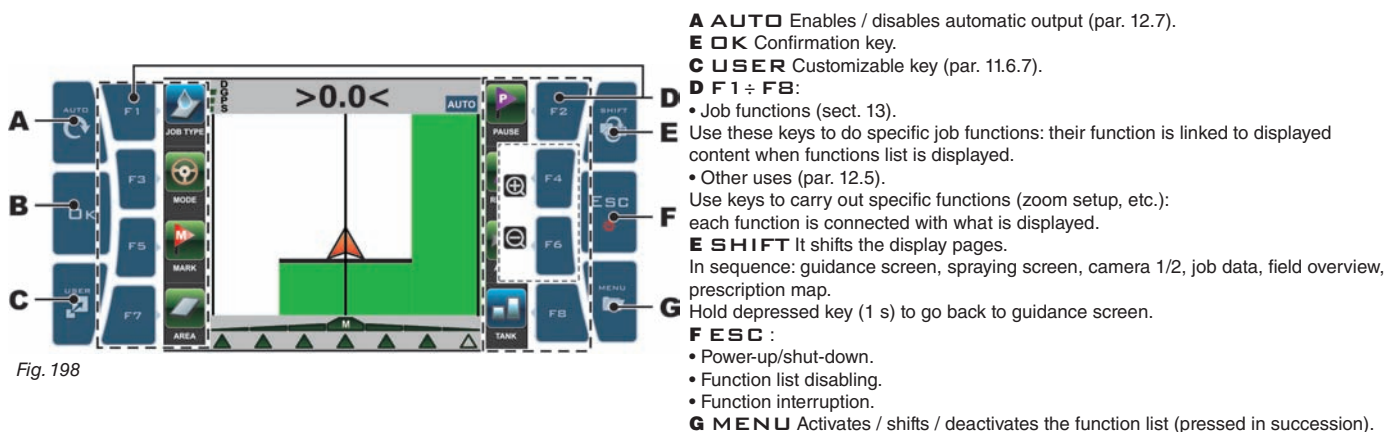


Fig. 198

12.3 Operating switches for control unit valves

Upon computer switching the section valves are open.


If main control is ON the message Disable spraying command!: no function can be accessed until main control is set again to OFF.

Main control ON	Main control OFF	Open section	Closed section	Output increase	Output decrease

ONLY FOR SEQUENTIAL VERSION:

Main control ON	Main control OFF	Section operating switches Open section Closed section		Output increase	Output decrease

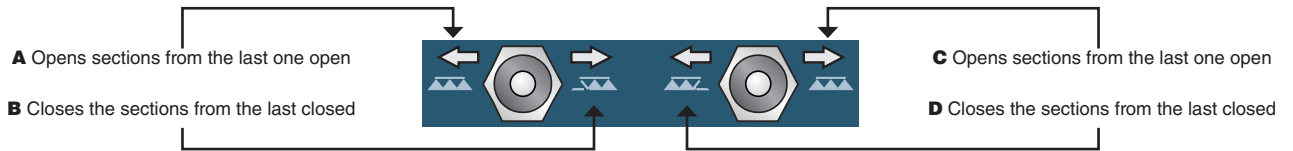• Switches for sequential control



The valves can be opened and closed from the right to the left and vice versa with the section control switches. Prolonged pressure opens / closes the sections of half boom.

Examples:

• Closing of one section



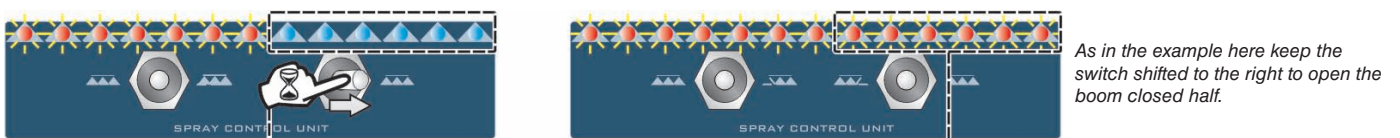
• Opening of one section



• Simultaneous closing of half boom sections



• Simultaneous opening of half boom sections




12.4 Operating switches for hydraulic valves

Boom release	Boom locking	Boom clockwise leveling	Boom counter-clockwise leveling	Boom height increase	Boom height decrease	Boom section movement: opening	Boom section movement: closing

12.5 Display

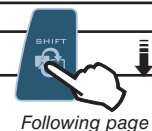GUIDANCE PAGE



DAY DISPLAY MODE

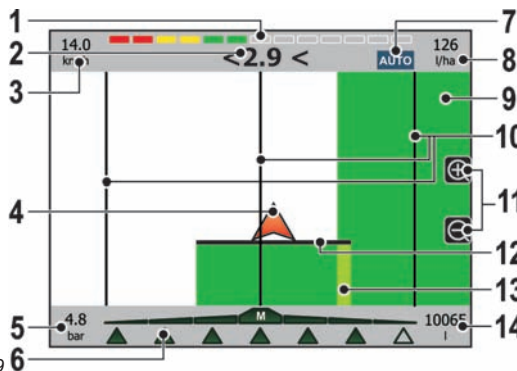


Fig. 199

NIGHT DISPLAY MODE

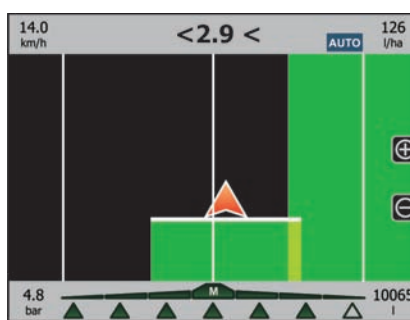


Fig. 200

Accessory function keys:

- F 1 Increases the display brightness
 - F 4 Increases the display zoom
Maximum zoom: keep key pressed
 - F 6 Decreases the display zoom
Minimum zoom: keep key pressed
 - F 7 Decreases the display brightness
- * Spraying data list that can be displayed: Application rate, Speed, Pressure, Flowrate, Applied area, Calculated area, Applied quantity, Tank level, Tank range, Spraying time, Productivity, Perimeter, Date, Time, Rotation speed, Direction, GPS signal quality, Track number, Target rate, Available memory.

SPRAYING SCREEN

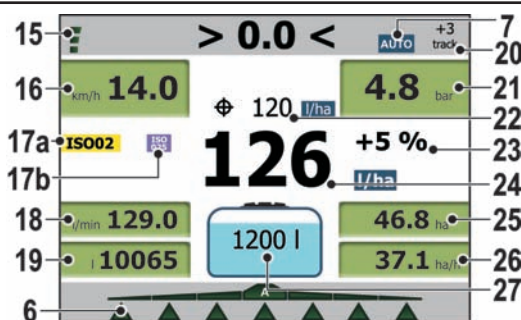


Fig. 201

Accessory function keys:

- F 1 Increases the display brightness
- F 2 Increases the simulated speed
- F 7 Decreases the display brightness
- F 8 Decreases the simulated speed

ONLY FOR

- F 3 Open/closes nozzle A when manual control is active (ref. 7 in Fig. 199).
- F 4 Open/closes nozzle B when manual control is active (ref. 7 in Fig. 199).

** Spraying data list that can be displayed: Flowrate, Applied area, Calculated area, Applied quantity, Spraying time, Productivity, Perimeter, Date, Time, Rotation speed, Direction, Track number.

CAMERA 1 / CAMERA 2



SPRAYING DATA DISPLAY

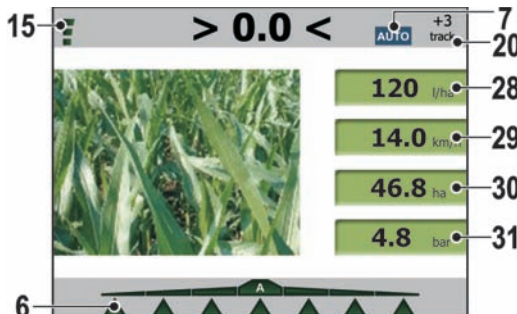


Fig. 202

FULL SCREEN DISPLAY



Fig. 203

Accessory function keys:

- F 1 Increases the display brightness
- F 7 Decreases the display brightness

Bravo 400 can be connected to one or two cameras to check the job areas.

Use the **User preferences** menu (par. 11.6) to set one of the two display modes (Fig. 202 and 203).

• **Picture saving:**

Any time you press **K** the picture is saved on the internal memory under the name **Img_(number).jpg**.

Upon each saving the picture number in the name will increase progressively.

Up to 100 different names can be saved: then BRAVO 400 starts numbering again and replaces the files beginning from **Img_00.jpg**.

• **Picture moving:**

- Use the option **Move picture to SD card** (par. 11.7.1).

- Move pictures from SD card to PC to display it.

Legend:

- 1 Led bar. Every led corresponds to 50 cm.
- 2 Deviation: distance between tractor position and the track to be followed.
- 3 L1 data: spraying datum, can be personalized by the user* (par. 11.6.1).
- 4 Machine position
- 5 L2 data: spraying datum, can be personalized by the user* (par. 11.6.1).
- 6 Boom sections: each triangle corresponds to one section (par. 12.6)
- 7 Output control status (AUTO / MAN, par. 12.7)
- 8 R1 data: spraying datum, can be personalized by the user* (par. 11.6.1).
- 9 Sprayed area
- 10 Reference tracks
- 11 Zoom change onto display
- 12 Point where spraying job is performed
- 13 Sprayed areas overlap

- 14 R2 data: spraying datum, can be personalized by the user* (par. 11.6.1).
- 15 Insufficient GPS signal quality!
- 16 - Speed
- 17a - Nozzle in use
- 17b - Nozzle in use (**ONLY FOR SELEJET VERSION**)
- 18 L1 data: spraying datum, can be personalized by the user* (par. 11.6.2).
- 19 L2 data: spraying datum, can be personalized by the user** (par. 11.6.2).
- 20 Spray pass number: the reference line, calculated with function "Mark AB", is number 0, the left tracks are negative whereas the right ones are positive.

- 21 Pressure
- 22 Set spray rate
- 23 Output percentage variation
- 24 Instantaneous spray rate
- 25 R1 data: spraying datum, can be personalized by the user* (par. 11.6.2).
- 26 R2 data: spraying datum, can be personalized by the user* (par. 11.6.2).
- 27 Residual quantity inside the tank
- 28 Instantaneous spray rate
- 29 - Speed
- 30 Sprayed area
- 31 Pressure

JOB DATA

Job data	
Sprayed area	46.8 ha
Calculated area	0.00 ha
Applied quantity	10065 l
Spraying time	01:15 hh:mm
Productivity	37.1 ha/h
Target rate	120 l/ha
Average rate	135 l/ha
Nozzle A	ISO02
Nozzle B	ISO025
Job start date	15/12/09 dd/mm
Job start time	10:49 hh:mm
Perimeter	0.00 m

Fig. 204



Displayed data and relevant units of measurement are specified in par. 15.1.

Nozzle A and Nozzle B data are displayed in the version ONLY **selectJET**. For any other version the reference datum is Nozzle.



Following page

FIELD OVERVIEW

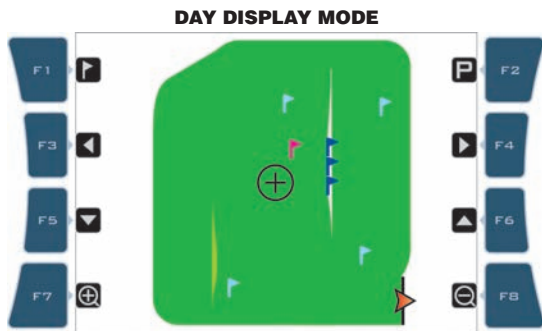


Fig. 205

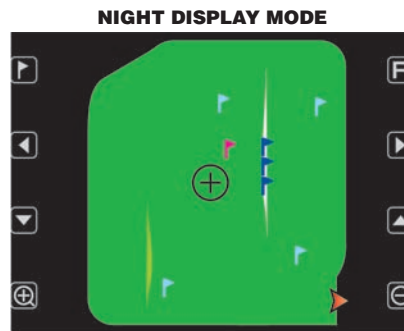


Fig. 206

Points of interest marked on field:

- Waypoint, inserted with function "WAYPT" (par. 13.3.2)
- Job breaking point, inserted with function "PAUSE" (par. 13.1.3)
- Point of interest inserted with function "P.O.I." (par. 13.1.6)

Indicators:

- Machine position
- Point where spraying job is performed
- Cursor
- Sprayed area
- Sprayed areas overlap

Accessory function keys:

- F1 Mark/remove the "Waypoint" point
- F2 Mark/remove the point (job interruption)
- F3 Shift cursor to the left
- F4 Shift cursor to the right
- F5 Shift cursor down
- F6 Shift cursor up
- F7 Increase the display zoom
- FB Decrease the display zoom
- OK Mark/remove the "P.O.I." point

PRESCRIPTION MAP

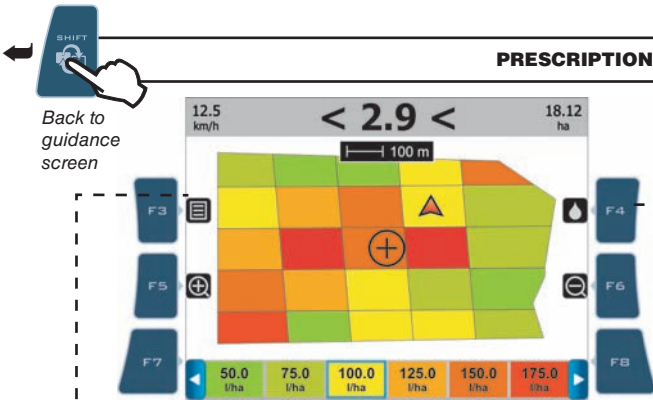


Fig. 207

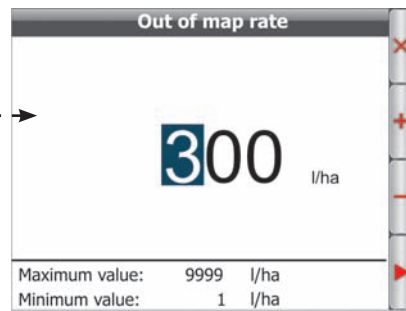


Fig. 208

Accessory function keys:

- F3 Display prescription map data (Fig. 209)
- F4 Modify spray rate in the areas out of map (Fig. 208)
- F5 Increase the display zoom
- FB Decrease the display zoom
- F7 Shift to the left the spray rate values
- FB Shift to the right the spray rate values

Indicators:

- Scale
- Machine position
- Spray rate value legend; the blue box indicates the spray rate in the current machine position
- Cursor
- Machine position when outside the displayed area

Map data	
Total quantity to apply:	4078 l
Total area:	37.49 ha
Area at rate 50.0 :	6.92 ha
Area at rate 75.0 :	6.76 ha
Area at rate 100.0 :	8.06 ha
Area at rate 125.0 :	5.32 ha
Area at rate 150.0 :	6.22 ha
Area at rate 175.0 :	2.54 ha
Area at rate 225.0 :	1.68 ha

Fig. 209

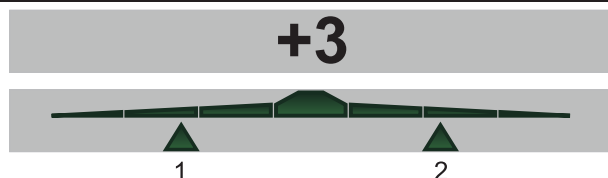
12.6 Spraying boom

Spraying boom display changes according to number of bar sections set during machine configuration (par. 10.1.2).

The display shows the following:

- Boom section number (max. 13)
- Section control
- Spraying status (ON / OFF)
- Boom section status (ON / OFF)
- Opening or closing indications.

BOOM SECTION NUMBER



DISPLAYED ONLY IS 1 SECTION IS SET:


the display shows the number of the track vehicle is covering.



The display does not actually indicate the boom number, it is shown here just for ease of reference.

SECTION CONTROL

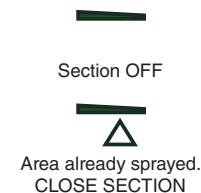
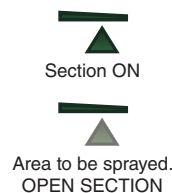
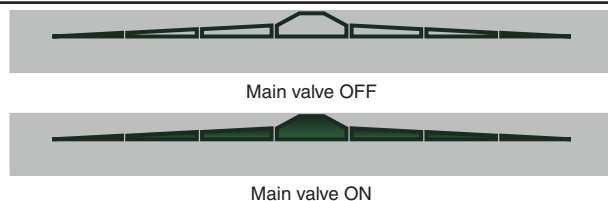
MANUAL control active : manually open or close the section valves.

AUTOMATIC control active : section valves are opened or closed automatically: details are specified further on in this manual.



To change the section valve control use the **F4 AUTO/MAN** function (par. 13.2.4).

BOOM SECTION STATUS INDICATION



OPENING OR CLOSING INDICATIONS

- Section manual control (M)

When overlapping exceeds the set **Sections overlapping limit**, Bravo 400 requires to **CLOSE** the affected sections (Fig. 210).
 Close the section valve with the relevant switch: Bravo 400 will confirm the closing on the display.
 As far as vehicle moves on, signal will be triggered for every section.

When overlapping goes back to allowed limits, Bravo 400 prompts you to **OPEN** affected sections (Fig. 211).
 Open the section valve with the relevant switch: Bravo 400 will confirm the opening on the display.
 As far as vehicle moves on, signal will be triggered for every section.

CLOSING PROMPT

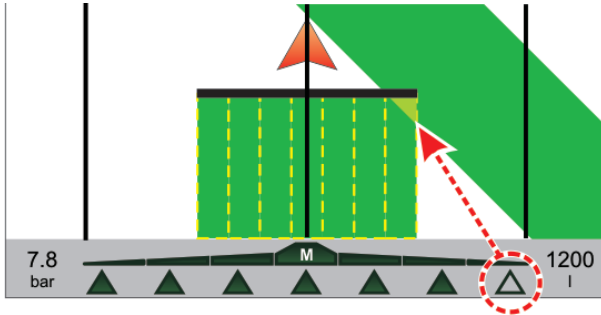


Fig. 210

OPENING PROMPT

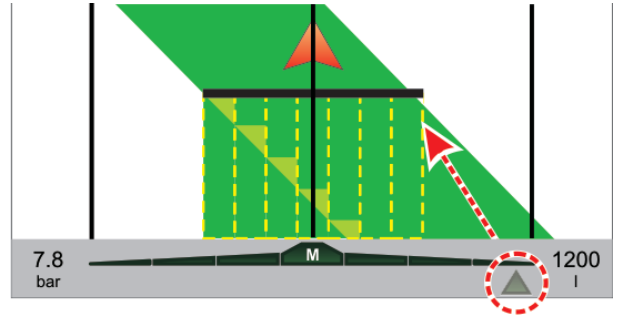


Fig. 211

- Sections automatic control (A)

When overlapping of **JUST ONE** or **ALL** boom sections exceeds the set **Sections overlapping limit**, Bravo 400 **CLOSES** the affected sections.
 There is no need to operate the switches.
 Bravo 400 automatically closes the sections and displays in real time the spraying interruption.

When overlapping goes back to allowed limits, Bravo 400 automatically open the affected sections and displays in real time the spraying recovering.

SECTIONS AUTOMATIC CLOSING

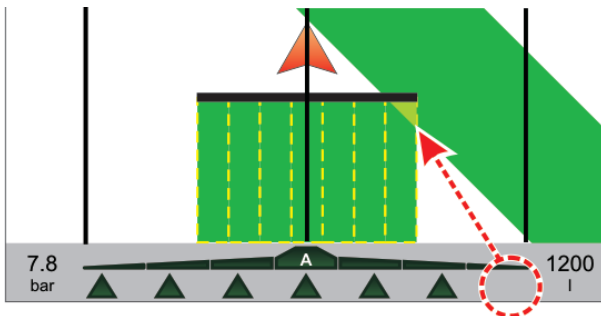


Fig. 212

SECTIONS AUTOMATIC OPENING

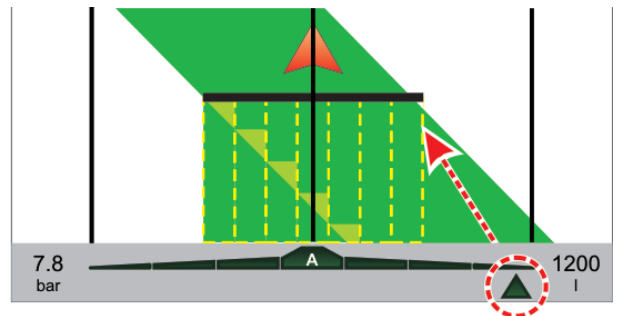


Fig. 213

12.7 Spray rate regulation

Bravo 400 regulates the chemical products output in two different ways:

• Automatic regulation **AUTO**

Bravo 400 keeps the set spray rate constant regardless from the changes in speed and boom section status.

In this case spray rate can be set with the suitable function **F 1 JOB TYPE** (par. 13.1.1), or loading a prescription map by one SD card (par. 12.8).

If necessary, spraying can be adapted to the crop by temporarily increasing or decreasing the spray rate up to $\pm 50\%$ with the suitable switch (par. 12.3).

• Manual regulation **MAN**

Manual regulation shall be carried out with the suitable switch (par. 12.3).

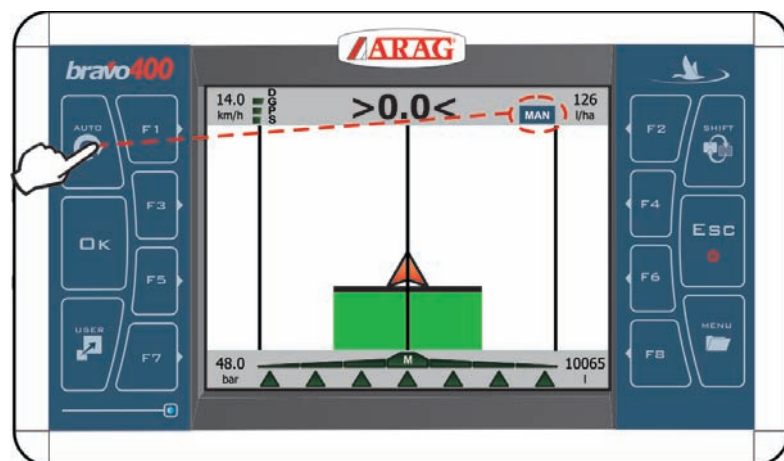


Fig. 214

Output mode selection:

Press the **AUTO** key to select the desired mode: the display will show type of regulation active during the job. (DEFAULT: AUTO)

12.8 Importing and using a prescription map

Bravo 400 can vary the spray rate using data from a "prescription map", indicating exactly the quantity of fluid to be sprayed at any point of the field. Map is created using suitable analysis and simulation software, and defines, position by position, which is the spray rate to be used to obtain optimum soil yield with the least waste of material and time.

To enable Bravo 400 to read and use the gathered information, some basic requirements are necessary:

- The prescription map shall be in "Shapefile ESRI®" format.
- The database field containing the spray rate to be used for the various areas shall be named "Rate".
- Other fields can be present in the database provided that they exclusively contain numerical values (any alphabetic character will prevent the correct import).

Now it is necessary to transfer the prescription map (through SD card) to Bravo 400:

- Save map to SD card.
- Copy map from SD card to internal memory using the **Copy Maps to internal memory** option (par. 11.7.2 Memories management / SD card / Copy files to internal memory).
- Start spraying.

Execute function **F 1 New job** (13.3.1) or **F 1 Job resume** (par. 13.2.1): Bravo 400 will request you to select the prescription map to be used.

- Operate the spraying: Bravo 400 will apply the suitable spray rate to the treated area according to the position detected by the GPS receiver (Fig. 215).

If tractor is on a "white" area of the map, i.e. without displaying a spray rate, Bravo 400 will use the value set in

Out of map rate (Fig. 216), which is **Disabled** by default (spraying disabled).

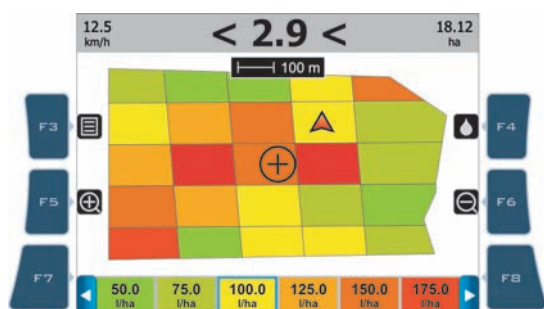


Fig. 215

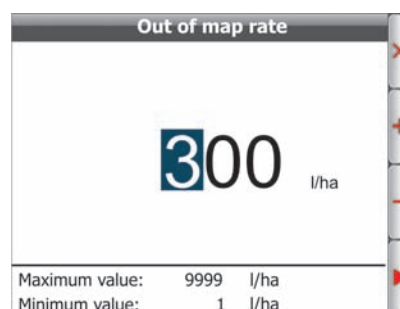


Fig. 216

ESRI® is a trademark owned by ESRI, California, USA

12.9 Spraying a field

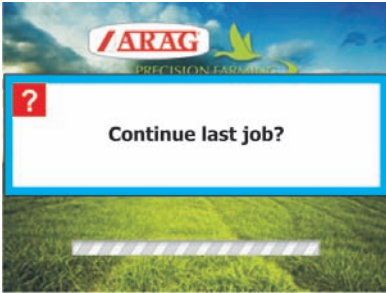





Fig. 217

Let's consider to wish to spray field by parallel lines, but only after spraying field borders.

- Switch Bravo 400 on (par 9.2). After self-diagnosis routine, system asks if you wish to continue a previous job (Fig. 217). Press **ESC** to start a new spraying job.

- Select driving mode you wish to use during spraying job: execute function  (par. 13.1.4).
- Select or set the spraying to perform with the suitable function  (par. 13.1.1 - 13.1.2).
- Set the tank level with the suitable function  (par. 13.1.9).
- Set at the beginning of field to spray (Fig. 218).
- Operate the switch for the main control valve to start spraying.
- Start driving along field border. During this path, message **Mark A?** is displayed

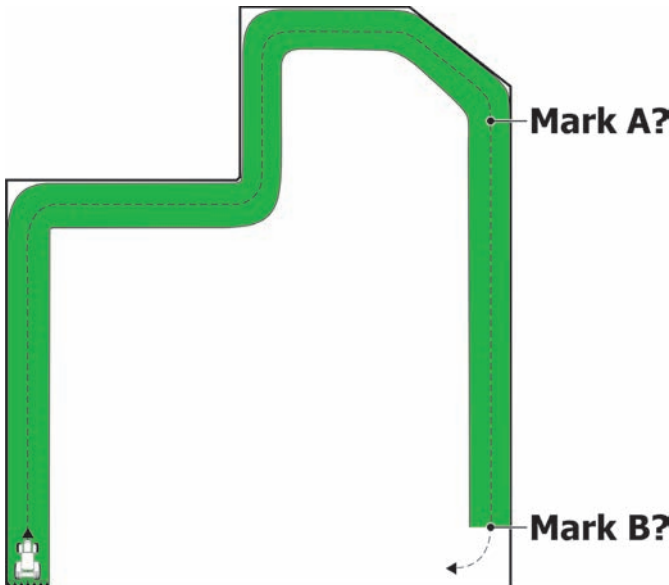



Fig. 218

MARKING POINTS A AND B

- While driving field border you will mark two points A and B

(as described under par. 13.2.2 - function ).

This operation is essential for Bravo 400 to guide you, during spraying, on tracks parallel to the reference one obtained marking points A and B.

We recommend that you mark A and B at the ends of a straight length as long as possible and while vehicle is moving: the longer the marked length across points A and B, the lower the error caused by your deviation while driving.

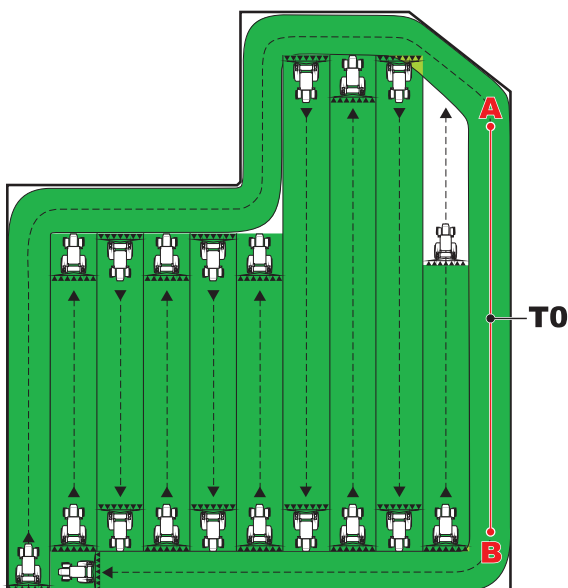


Fig. 219

- Once straight line A/B (**T0**) is tracked, the whole field could be sprayed along tracks parallel to it (Fig. 219), following the reference tracks that will be displayed (Fig. 220).

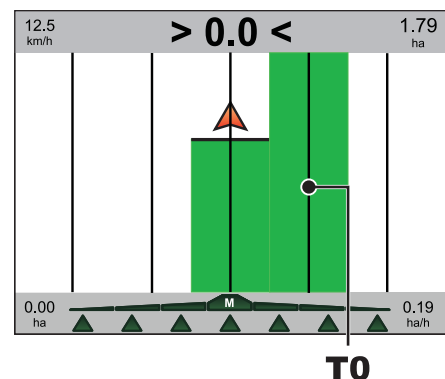



Fig. 220

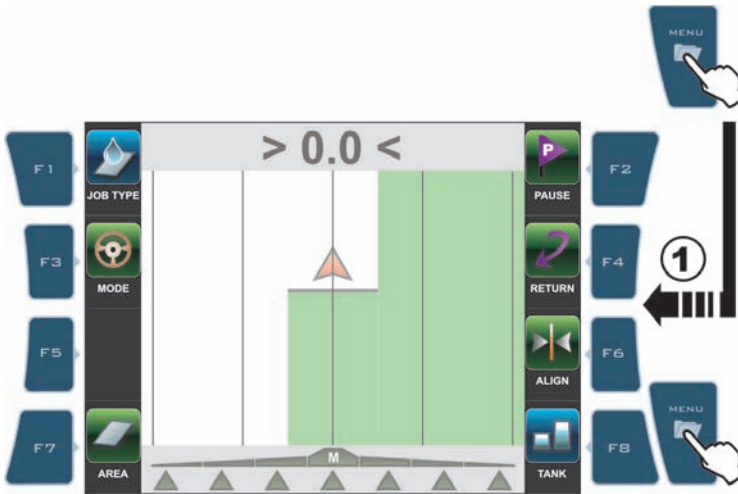
13 WORK FUNCTIONS

Work functions list display: press **MENU** key.

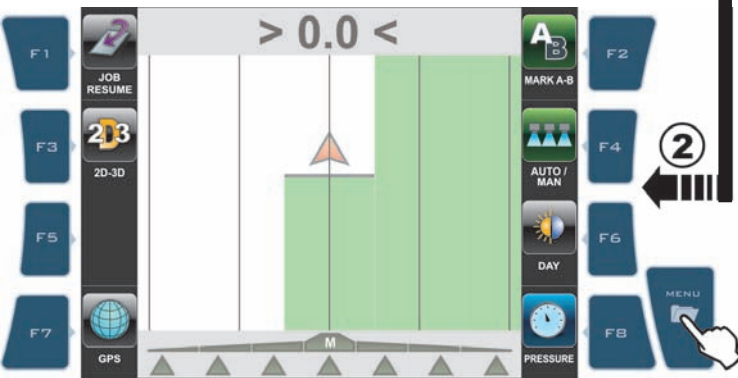
when list is active, pressing every key will activate the corresponding function displayed on the side; **USE MENU** to scroll the pages.

The table below gives an overview of all possible work functions and corresponding function key:

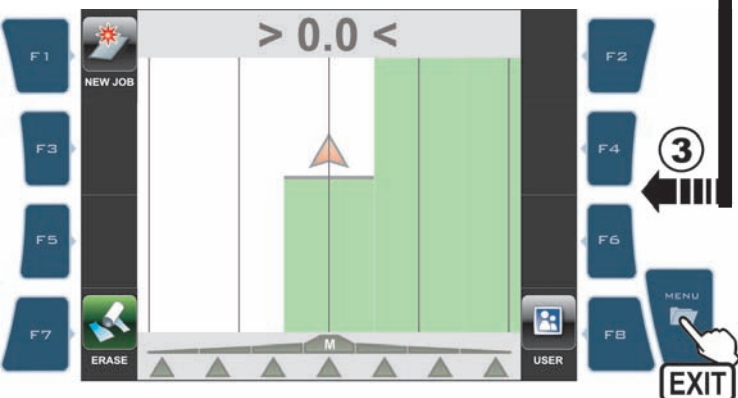
 The display actually does not show the page numbers, indicated here for ease of reference.





















Page 2








Page 3



FUNCTION		Par.
	F 1 Job type Select the type of treatment to perform	13.1.1 13.1.2
	F 2 Pause Saves one operation breaking point  on the display	13.1.3
	F 3 Mode Select the driving mode between Straight parallel and Curved parallel	13.1.4
	F 4 Return Activate procedure to go back to job breaking point  previously stored using function "Pause"	13.1.5
	F 5 P.O.I. Save one "P.O.I."  on the display	13.1.6
	F 6 Align Shift the closest reference track and realign it to machine position	13.1.7
	F 7 Area Activate the procedure to calculate the field area, while driving on borders	13.1.8
	F 8 Tank Activate the tank filling procedure	13.1.9

	F 1 Job resume Activate the procedure to resume a spraying job previously interrupted	13.2.1
	F 2 Mark AB Store two field points A and B, that Bravo 400 will use to create a line to be used as a reference track for spraying job underway	13.2.2
	F 3 2D-3D Toggle from 2D display mode to 3D and vice versa	13.2.3
	F 4 Auto / Man Activate/Deactivate automatic control of section valves	13.2.4
	F 6 Day / Night Toggle from day display driving mode to night one and vice versa	13.2.5
	F 7 GPS Display the data transmitted to GPS receiver	13.2.6
	F 8 Pressure Activate the "zero" calibration procedure of pressure sensor	13.2.7

	F 1 New job Start a new job	13.3.1
	F 2 Waypt Activate the procedure to go back in sequence to "Waypoints" 	13.3.2
	F 7 Erase Delete stored job data	13.3.3
	F 8 User Access to user menu	13.3.4

13.1 Functions List: PAGE 1

F1 **13.1.1 F1 Job type** Select the type of treatment to perform among those pre-set in the **Treatment settings** menu (par. 11.2), or temporarily change the treatment underway.

- 1 Press **F1**. The display will show the features of treatment underway (Fig. 222). In this screen it is possible to change the treatment values (Fig. 223 - 224), or select a pre-set one (Fig. 225).
- 2 Press **F4** or **F6** to select the item to change.
- 3 Confirm selection.


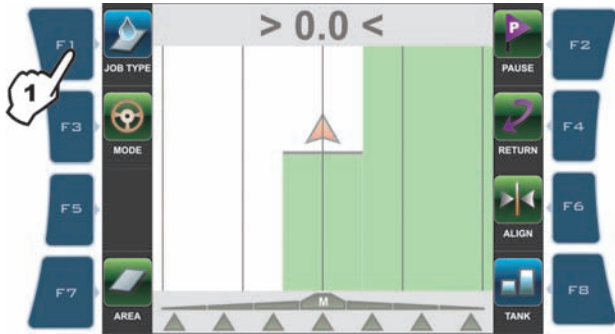


Fig. 221

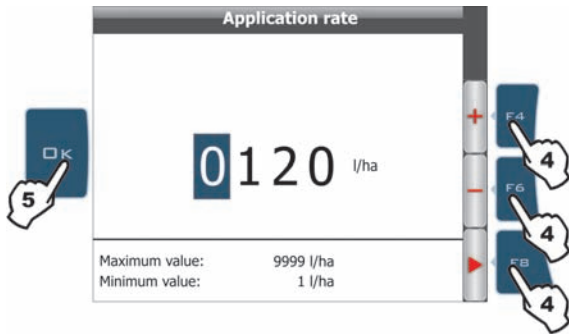SPRAY RATE CHANGE



- Fig. 223
- 4 Change the value (+ increase, - decrease).
 - 5 Confirm datum.



Fig. 222

NOZZLE CHANGE



- Fig. 224
- 4 Select nozzle.
 - 5 Confirm selection.

Above changes are only TEMPORARY and are not stored among the pre-set treatments.

SELECTING ONE PRE-SET TREATMENT



Fig. 225

- 1 Select the treatment to use.
- 2 Confirm selection.

13.12 ONLY FOR seleJET
F 1 Job type Select the type of treatment to perform among those pre-set in the **Treatment settings** menu (par. 11.2), or temporarily change the treatment underway.

- 1 Press **F 1**. The display will show the features of treatment underway (Fig. 227).
- In this screen it is possible to change the treatment values (Fig. 228 - 229), or select a pre-set one (Fig. 230).
- 2 Press **F 4** or **F 6** to select the item to change.
- 3 Confirm selection.

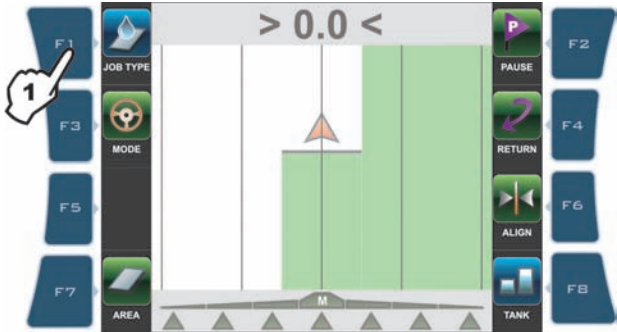


Fig. 226

SPRAY RATE CHANGE

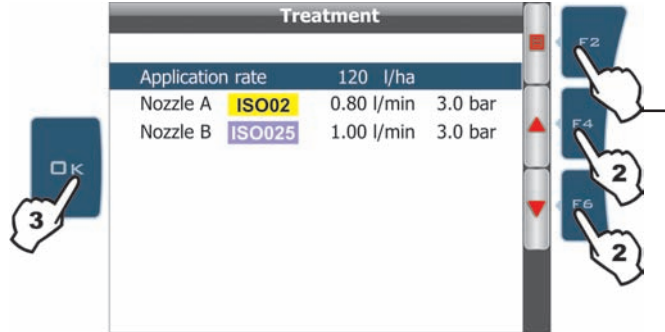


Fig. 227

NOZZLE CHANGE

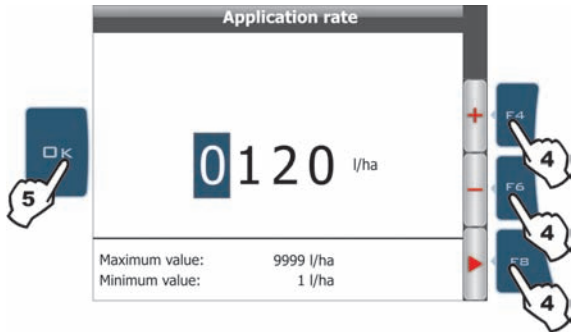


Fig. 228

- 4 Change the value (+ increase, - decrease).
- 5 Confirm datum.

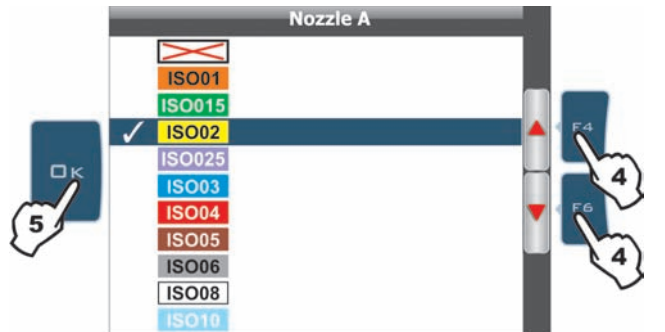



Fig. 229

- 4 Select nozzle **A** (option  disables the nozzle)
- 5 Confirm selection.
- 6 Repeat the operation for nozzle **B**.

 Above changes are only **TEMPORARY** and are not stored among the pre-set treatments.

SELECTING ONE PRE-SET TREATMENT

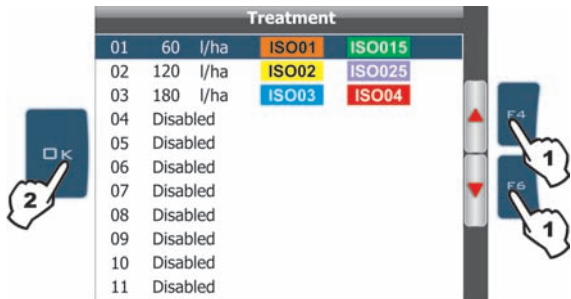



Fig. 230

- 1 Select the treatment to use.
- 2 Confirm selection.



13.13
F2 Pause

Stores the job breaking point "Pause" on the field marked with a flag  on the display. Flag can be seen on guidance screen (Fig. 231) and on field full zoom page (Fig. 232). "Pause" breaking point can be stored using the two procedures described below:

GUIDANCE PAGE

1a Press **F2** when you are in the position to be stored: flag will be positioned at that point (**A** in Fig. 231).

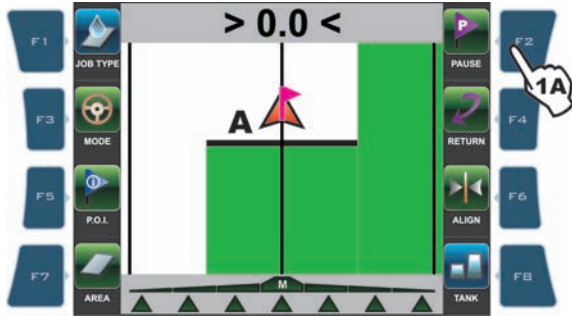


Fig. 231



Bravo 400 can store only one breaking point, so that every time you set a flag, the previous one will be deleted.

FIELD FULL ZOOM

From this page, you can store a field point even if tractor is in another position.

- 1b** Press keys **F3**, **F4**, **F5**, **F6** to shift position of cursor **B** (Fig. 232) on field.
- 2b** Once you reach the desired position, **PRESS F2**.
- 3b** If a breaking point already exists, confirmation prompt is displayed: press **OK**.

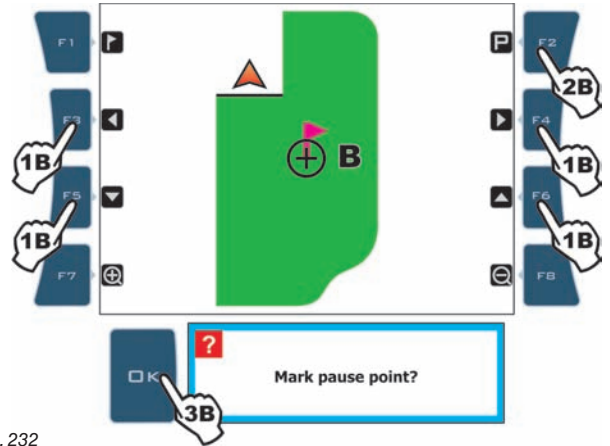


Fig. 232



13.1.4
F3 Mode

Select driving mode between **Straight parallel** and **Curved parallel**.

- 1 Press **F3**.
- 2 Selection page is displayed: press **F4** or **F6** to scroll across items.
- 3 Confirm selection.

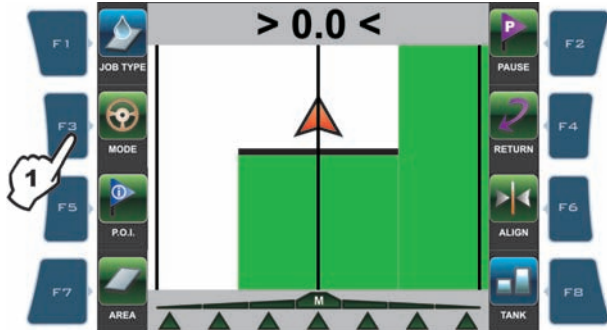


Fig. 233

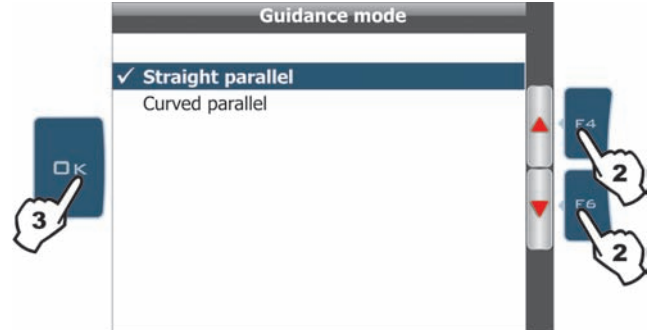


Fig. 234

STRAIGHT PARALLEL

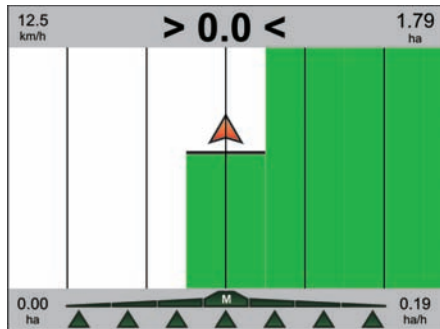


Fig. 235
Track on display will be used as driving reference and are perfectly straight and parallel with each other.

CURVED PARALLEL

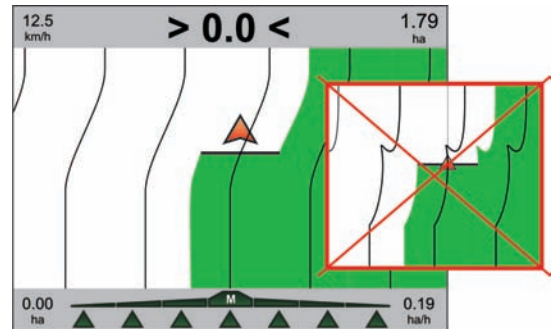



Fig. 236
Displayed tracks will be used as driving reference and are parallel with each other, they feature no straight but ONLY with trajectories with not too sharp curves.



13.15

F4 Return

Activate the procedure to go back to job breaking point , as previously stored using the function "Pause" (par. 13.1.3)

Press **F4** to receive guidance information and go back to point of interest "Pause" (Fig. 237):

- A fuchsia line connecting the middle position to the flag shows the trajectory to be followed to get closer to marked point (**C** in Fig. 237).
- The display shows in fuchsia the number of tracks to be crossed before reaching point (**D** in Fig. 237): in the example, + next to the number indicates you shall move to the right, - indicates you shall move to the left.

Carry on driving.

- When you reach the track with the breaking point, the display shows the distance between your position and the point (**E** Fig. 238).

- Move along the track and check that distance in metres decreases: you are getting closer to the point.

When you are nearby, you can see the flag displayed.

- Once you reach the flag position, distance value gets to "zero" (Fig. 239): press **OK** or **ESC** to quit this procedure.

OK Bravo 400 recalls spraying job guidance information and flag is deleted.

ESC Bravo 400 recalls spraying job guidance information but flag remains memorised.

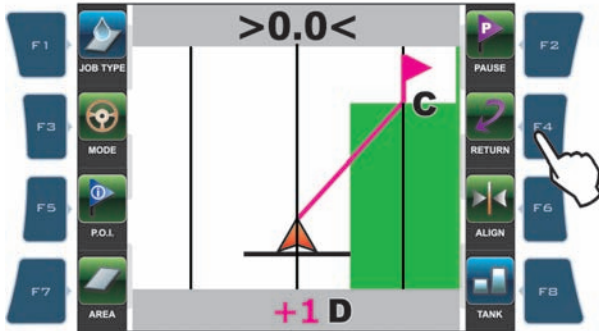


Fig. 237

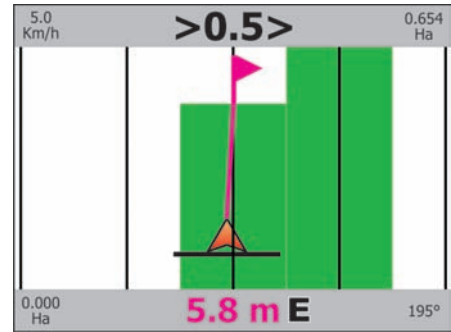


Fig. 238

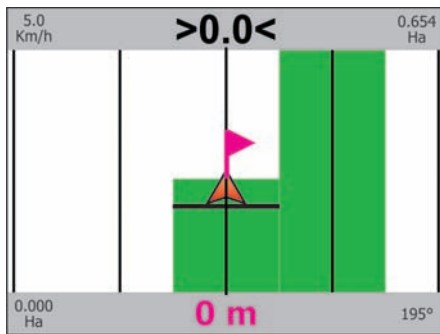



Fig. 239



13.1.6 Save one "P.O.I."  on display (Fig. 240 and 241). More points can be marked.
F5 P.O.I. "P.O.I." can be stored with the two procedures below:

GUIDANCE PAGE

1a Press **F5** when you are in the position to be stored: flag will be positioned at that point (**A** in Fig. 240).

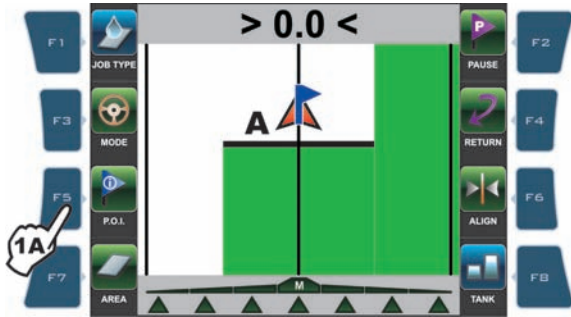


Fig. 240

FIELD FULL ZOOM

From this page, you can store a field point even if tractor is in another position.
1b Press keys **F3, F4, F5, F6** to shift position of cursor **B** (Fig. 241) on field.
2b Once you reach the desired position, **PRESS OK**.

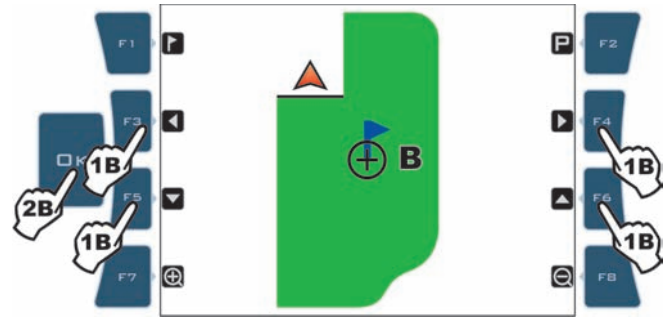


Fig. 241

Here you can also delete one point previously stored: press keys **F3, F4, F5, F6** to shift the cursor position **B** near or above the marked point, and press **OK**.



F6

13.1.7
F6 Align

Shift the closest reference track and realign it to machine position

- Press **F6** if you need to realign, maintaining the same direction (such as with maize, sugar cane).
- Set to the position you would like to set as new reference track and press **F6**.
 - The "old" reference track **F** (Fig. 242) shifts and aligns to tractor centre: all other reference tracks shift accordingly.
 - The "old" deviation value $>4.2<$ (**G**) becomes $>0.0<$ because it takes the "new" track as reference.

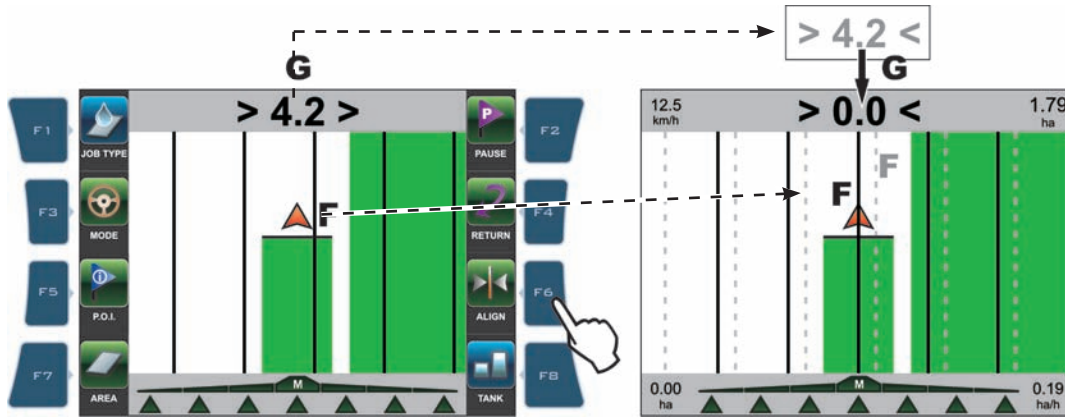


Fig. 242



After using the "Align" function, it is not possible to recover the initial reference track.

F7 **AREA** **13.18 F7 Area** Activate the procedure to calculate the field area, while driving on borders

- 1 Press **F7** to start the procedure and calculate the area (functions list is no longer displayed). Message **Select field border** is displayed to set machine side to be used as field outer edge.
- 2 Press **F5 (Left)** or **F6 (Right)**: the display will show a red line drawing the field border as far as the tractor moves along.

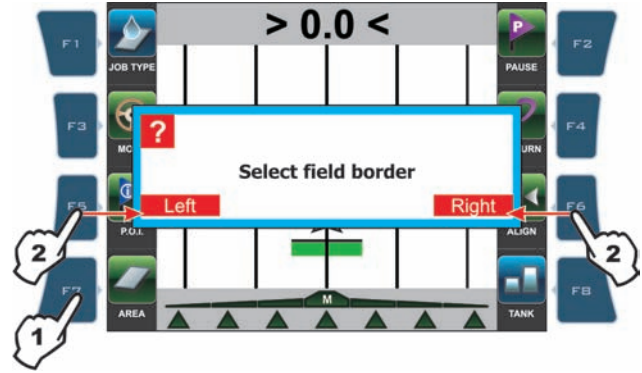


Fig. 243

Following are the two possible instances:

FIELD BORDER ON MACHINE LEFT-HAND SIDE

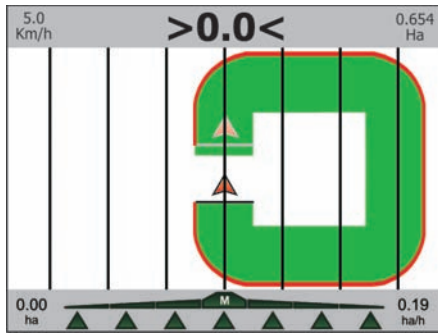


Fig. 244

FIELD BORDER ON MACHINE RIGHT-HAND SIDE

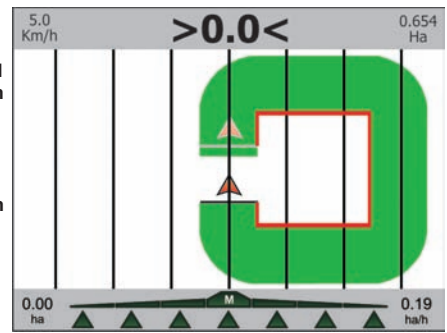


Fig. 245

Field outer edge (red line) follows the path of the outermost section valve open. When all section valves are closed, field border (red line) starts from boom centre.

- 3 Drive along field borders or border of the area to be calculated. To complete the procedure, view again the corresponding functions list page (Fig. 243) and press **F7**.
- 4 Message **Boundary closure?** is displayed. Press **OK** (Fig. 246).
- 5 To view calculated data (**Calculated area** and **Perimeter**), press **SHIFT** a few times until viewing **Job data** page on the display (Fig. 247).

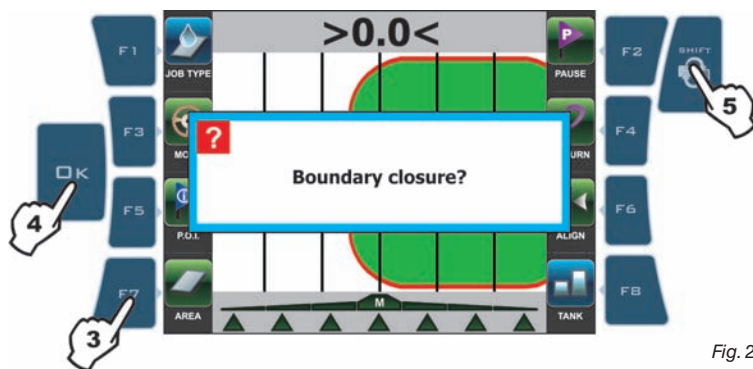


Fig. 246

Job data	
Sprayed area	10.2 ha
Calculated area	46.8 ha
Applied quantity	10065 l
Spraying time	01:15 hh:mm
Productivity	37.1 ha/h
Target rate	120 l/ha
Average rate	135 l/ha
Nozzle	ISO02
Job start date	15/12/09 dd/mm
Job start time	10:49 hh:mm
Perimeter	239 m

Fig. 247

13.1.9
FB Tank It controls the tank filling.

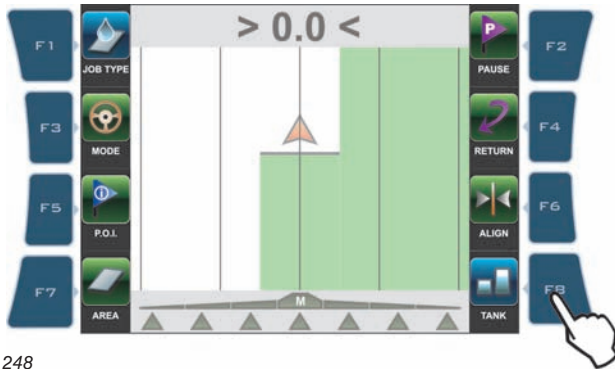


Fig. 248

Press **F8** to display the **Tank filling**.

Here many functions can be activated:

- Reset level (Fig. 249)
- Filling (Fig. 250)
- Manual setup of filled quantity (Fig. 251)

If the filling flowmeter is connected the display shows the filling data in real time.

RESET LEVEL

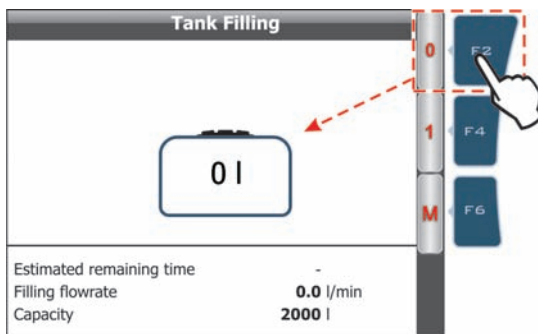


Fig. 249

Press **F2** to reset the tank level.
 The icon on display indicates the empty tank.

TANK FILLING

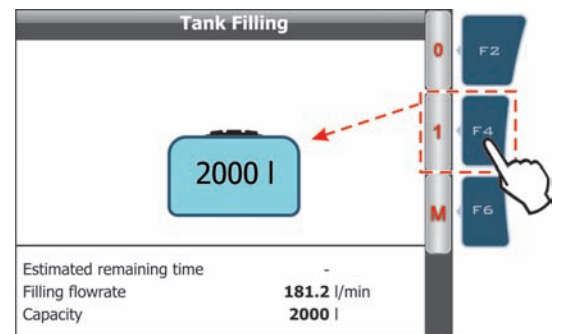


Fig. 250

Press **F4** to bring the tank level to the maximum value.
 The icon on display indicates the full tank.
 The capacity was set with the advanced programming (par. 10.6.1)

MANUAL SETUP OF FILLED QUANTITY

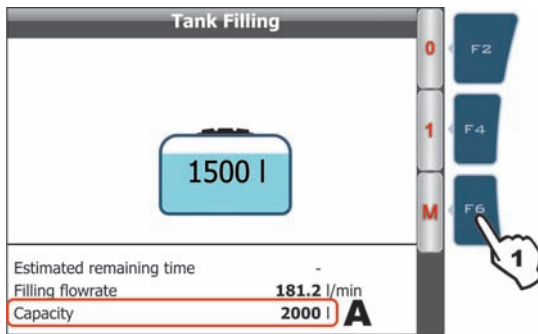


Fig. 251

- 1** Press **F6** to set the quantity of fluid poured into the tank.
 - 2** Set the value.
 - 3** Confirm datum.
- The icon on display indicates the tank level reached.

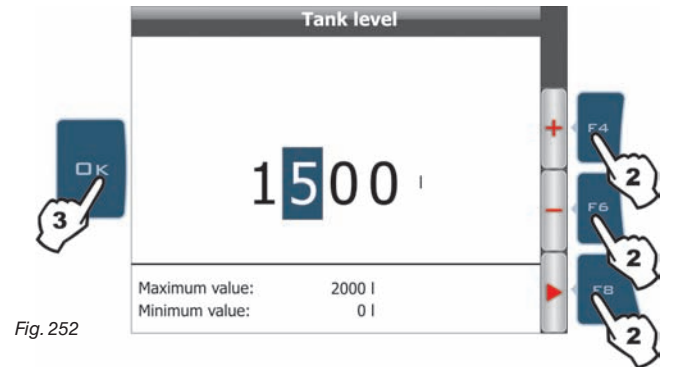


Fig. 252

It is not possible to set values exceeding the tank capacity (A in Fig. 251). In this case the screen in Fig. 252 shows the message Value out of range!

13.2 Functions list: PAGE 2


F1  **13.2.1 F1 Job resume** Activate the procedure to resume a spraying job previously interrupted (Fig. 253)



Fig. 253

1 Press **F 1** to resume a job previously interrupted, among the saved ones. Confirmation prompt is displayed to start procedure.
2 Press **OK**.



Fig. 254

3 Bravo 400 prompts you to save the job you were performing before starting the procedure. Press **OK (3A)** or **ESC (3B)**:
3A **OK** allows you to save job: enter a name (Fig. 255). Type in name as described under par. 9.4 - Using the programming keys.
3B **ESC** lets you go to job selection page (Fig. 256) without saving job: **work data displayed so far will be lost.**

4 Bravo 400 asks you to select job to be resumed. Press keys to select among listed jobs.
5 Press **OK** to confirm machine selection.



Fig. 255

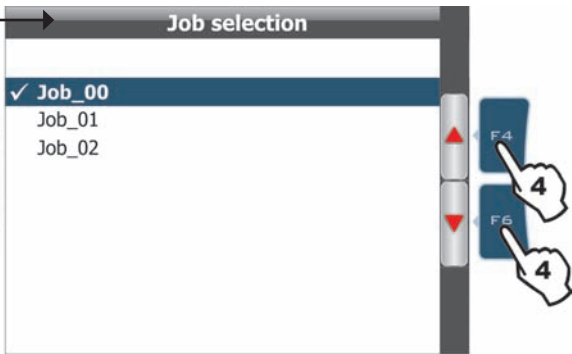


Fig. 256

CONT'D

13.2.1 F 1 Job resume (CONTINUED)



Fig. 257

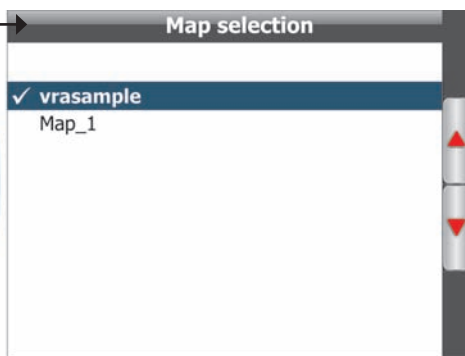


Fig. 258

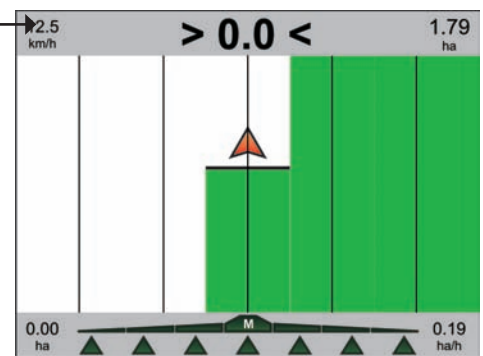


Fig. 259


With at least one map (on internal memory), Bravo 400 asks whether you wish to use a prescription map (par. 12.8) to do the treatment. Press **OK (6B)** or **ESC (6A)**.

6A ESC to go to guidance screen (Fig. 259).

6B OK lets you select a prescription map among the listed ones (Fig. 258).

7 Press keys to select map.

8 Press **OK** to confirm machine selection. Drive and perform the job.

 When resuming an "old" job, BRAVO 400 gives guidance indications by recalling active conditions upon saving:

- Driving mode
- Marking points A and B
- Marking points to calculate the area.



13.2.2
F2 Mark AB

Stores two points A and B on field; they are used by Bravo 400 to create a line to be used as reference track (**T0**, Fig. 263) for spraying job underway.

Mark points A and B as follows:

1 Press **F2**: **Mark new AB reference?**

2 Press **OK**.

3 Drive along the path you wish to use as a reference for the spraying job. Prompt **Mark A?** is displayed Press **OK**.

4 Message **Drive!** is displayed Continue to drive; once you covered the minimum distance (30 m / 95.5 ft), request **Mark B?** is displayed Press **OK**.

The display will show the reference track **T0** and all tracks to follow when spraying (Fig. 263).



Fig. 260

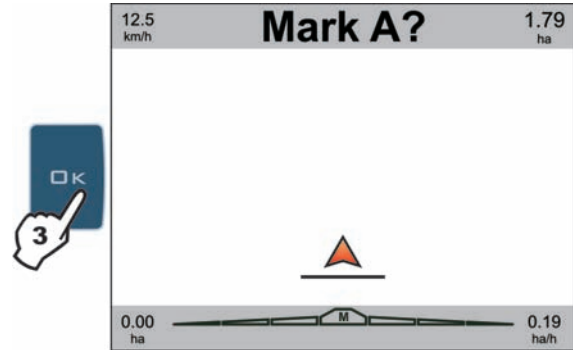


Fig. 261

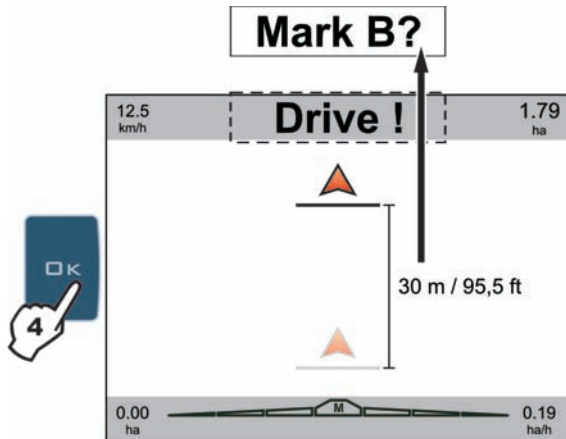


Fig. 262

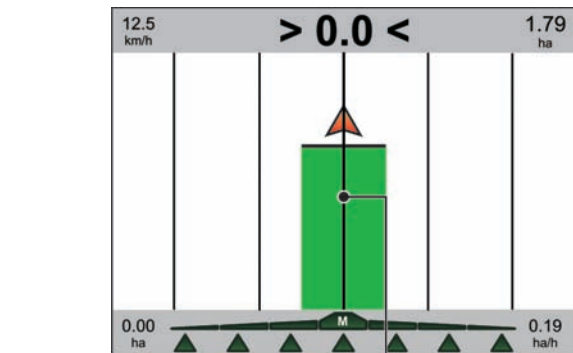


Fig. 263



Using the "Mark AB" function, Bravo 400 deletes the previous **T0** reference track (if any), and prompts you to store two **NEW** points A and B on field, which create a **NEW** reference track. Points A and B can only be marked with vehicle moving. It is **NOT** possible to recover the previous **T0** track.



13.2.3 Toggle from 2D display driving mode to 3D one and vice versa (figures 264 - 265)
F3 2D-3D Default display mode is 2D. Following are the two possible instances:

3D DISPLAY

1a 2D display mode is active. Press **F3** to swap to 3D.

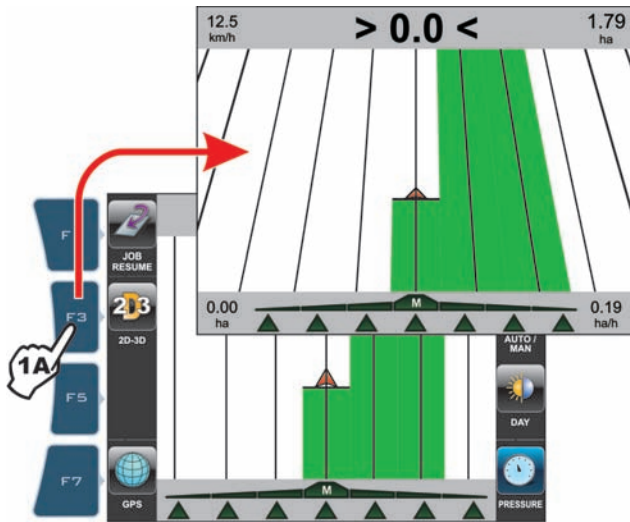


Fig. 264

2D DISPLAY

1b 3D display mode is active. Press **F3** to swap to 2D.

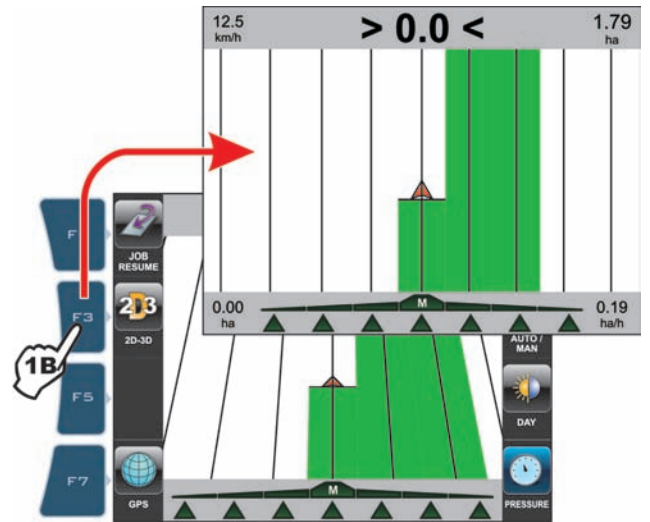


Fig. 265



13.2.4 Activate/deactivate automatic control of section valves (figures 266 - 267)
F4 Auto/Man Default control mode is automatic. Following are the two possible instances:

MANUAL CONTROL (OPENING / CLOSING)

1A Automatic control is active (A in Fig. 266). Press F4 to shift to manual control.

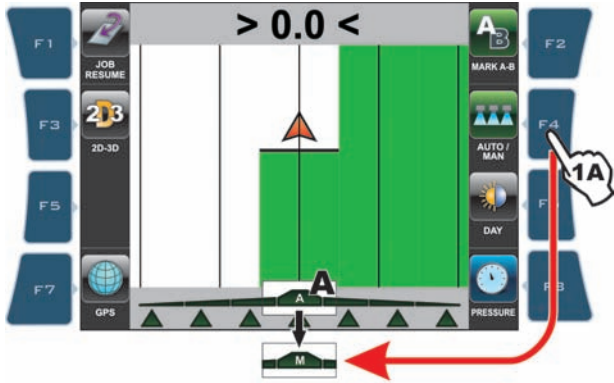


Fig. 266

AUTOMATIC CONTROL (OPENING / CLOSING)

1B Manual control is active (B in Fig. 267). Press F4 to shift to automatic control.

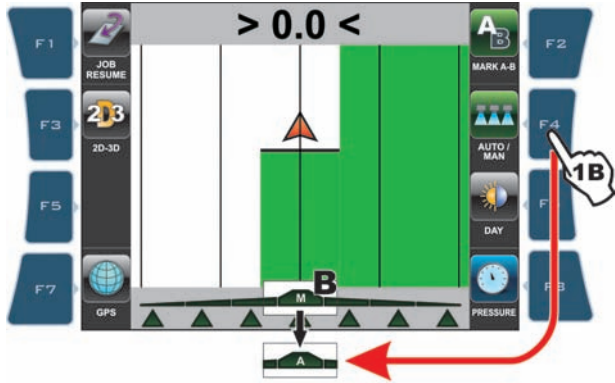


Fig. 267



13.2.5 Toggle from day display driving mode to night one and vice versa (figures 268 - 269)
F6 Day / Night Default display mode is Day. Following are the two possible instances:

DAY DISPLAY MODE

1A Night display mode is active. Press F6 to shift to Day mode (Fig. 268).

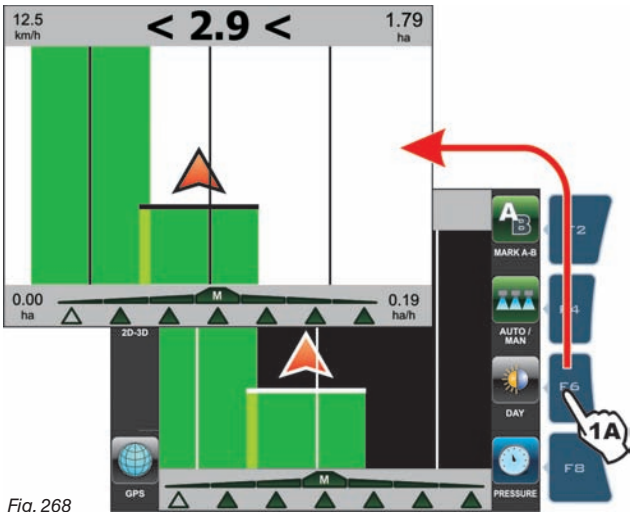


Fig. 268

NIGHT DISPLAY MODE

1B Day display mode is active. Press F6 to shift to Night mode (Fig. 269).



Fig. 269

F7 **GPS** **13.2.6 F7 GPS** Press **F7** to display the data transmitted by the GPS receiver (Fig. 271).

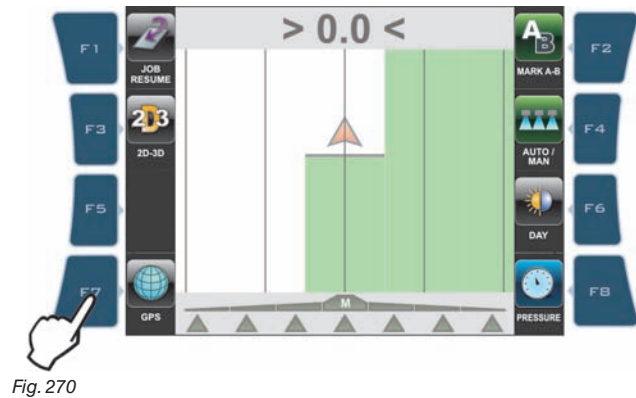


Fig. 271

GPS data	
Longitude	44.784617 deg.
Latitude	10.877977 deg.
Altitude	2.6 m
Tilt	1.8 deg.
Number of satellites	10
HDOP	0.8
DGPS	Enabled
DGPS Age	3.6 sec
Update frequency	5 Hz
Baud	19200 Bd

PRESSURE **F8** **13.2.7 F8 Pressure** Activate the "zero" setup procedure of pressure sensor.

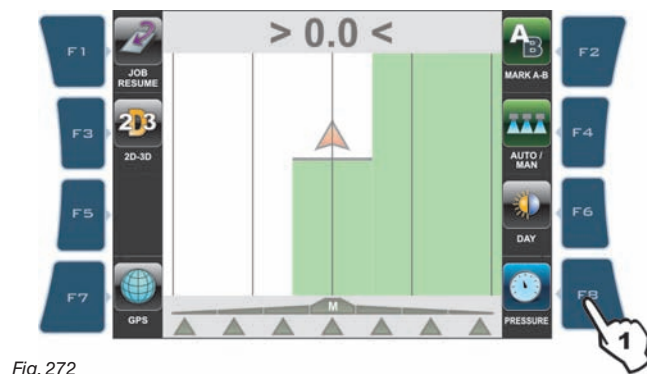




Fig. 272

Fig. 273

Pressure sensor zero calibration

	Sensor signal	4.6 mA
	Pressure reading	0.2 bar

Press OK to apply

In case a pressure value is display **despite the absence of pressure inside the circuit** , it is necessary to perform zero setup of the sensor:
1 Press **F8** to display the **Pressure sensor zero calibration** screen (Fig. 273).
2 Press **OK** to reset the pressure sensor residual signal.
 Bravo 400 automatically quits the procedure and displays the job screen with the pressure value of **0.0 bar**.

Value out of range!
 This alarm appears when abnormal pressure values have been detected: check sensor for correct operation.
 if problem persists, check for residual pressure in the system.

13.3 Functions list: PAGE 3

F1  **13.3.1 F1 New job** Start a new spraying job (Fig. 274)



Fig. 274

1 Press **F1** to start a new spraying job. Confirmation prompt is displayed to start procedure.
2 Press **OK**.

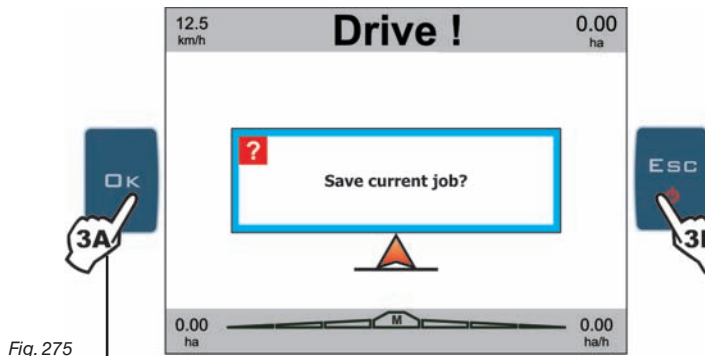


Fig. 275

Bravo 400 requests you to save job you were carrying out before starting the procedure. Press **OK (3A)** or **ESC (3B)**:
3A OK allows you to save job: enter a name (Fig. 276). Type in name as described under par. 6.3 - Using the programming keys.
3B ESC lets you go to prescription map selection screen (Fig. 277- 278) without saving job: **work data displayed so far will be lost.**



Fig. 276



Fig. 277

CONT'D

13.3.1 F 1 New job (CONTINUED)

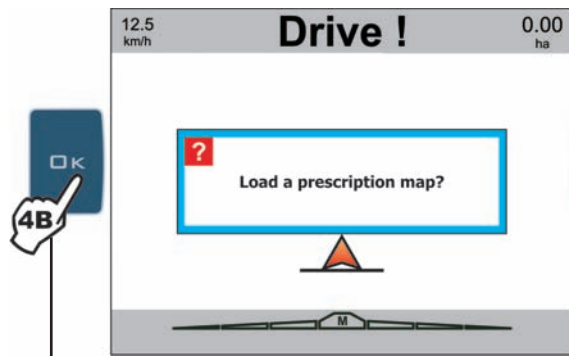


Fig. 278

Continues from Fig. 277: with at least one map (on internal memory), Bravo 400 asks whether you wish to use a prescription map (par. 12.8) to do the treatment. Press **ESC** (4A) or **OK** (4B).

4A **ESC** to go to guidance screen (Fig. 280).

4B **OK** lets you select a prescription map among the listed ones (Fig. 279).

5 Press keys to select map.

6 Press **OK** to confirm machine selection. Drive and perform the job.

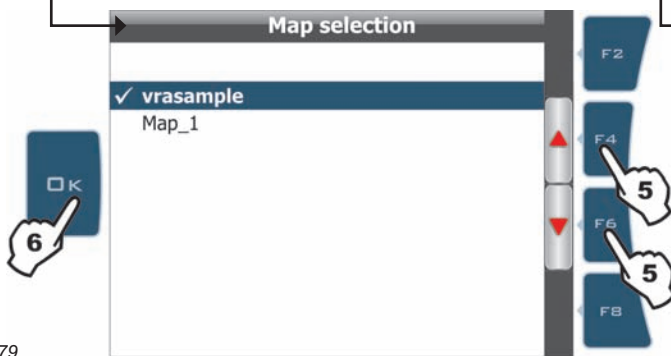


Fig. 279

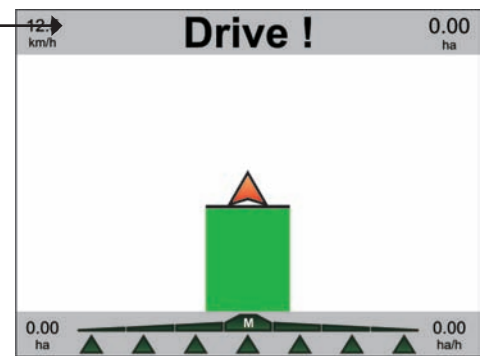


Fig. 280

 At the beginning of a new job Bravo 400 provides driving indications using the "Straight parallel" mode. See function "Mode" (par. 13.1.4) to change the driving mode.

WARNING: Bravo 400 SAVES the job starting point ONLY when performing one of the following operations:

- Spraying activation (main control valve ON)
- Marking point A (function "Mark AB", par. 13.2.2)
- Marking original point to calculate the area (function "Area", par. 13.1.8)

WAYPT

F2

13.3.2
F2 Waypt

Save one "Waypoint" onto display (Fig. 281 and 282).
Afterwards it is possible to activate the procedure to follow the saved points in sequence.
"Waypoints" can be saved with the procedure below:

FIELD FULL ZOOM

From this page, you can store a field point even if tractor is in another position.

- 1 Press keys **F3**, **F4**, **F5**, **F6** to shift position of cursor **A** (Fig. 282) on field.
- 2 Once you reach the desired position, **PRESS F1**.

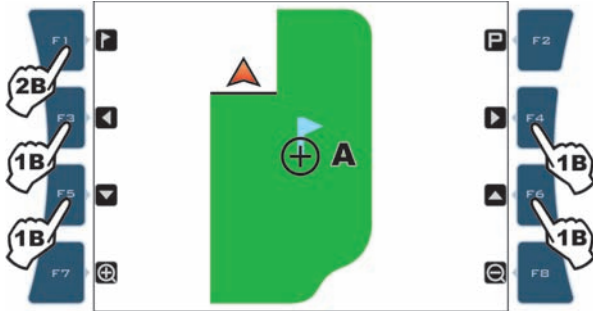


Fig. 282

Here you can also delete one point previously stored:
press keys **F3**, **F4**, **F5**, **F6** to shift the cursor position **A** near or above the marked point, and press **F1**.

• Procedure of sequential return to the "Waypoints".

Lets suppose to mark "Waypoints" **B**, **C**, **D** (Fig. 283).

Press **F2** to receive driving information and return to the first marked "Waypoint" (**B** in Fig. 283):

- A light blue line connecting the middle position to the flag shows the trajectory to be followed to get closer to first marked point (**B** in Fig. 284).
- The display shows in light blue the number of tracks to be crossed before reaching point (**E** in Fig. 284):
in the example, + next to the number indicates you shall move to the right, - indicates you shall move to the left.

Carry on driving.

- When you reach the track with the "Waypoint", the display shows the distance between your position and the point (**F** Fig. 285).

Move along the track and check that distance in metres decreases: you are getting closer to the point.

When you are nearby, you can see the flag displayed.

- When reaching the flag the distance value becomes "zero" (Fig. 286): press **OK** to receive information to reach the following point (**C** in Fig. 286), or **ESC** to quit the procedure.

OK pressed several times displays return information of each "Waypoint", following the point marking order.

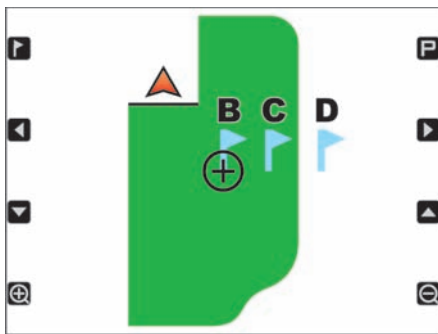


Fig. 283

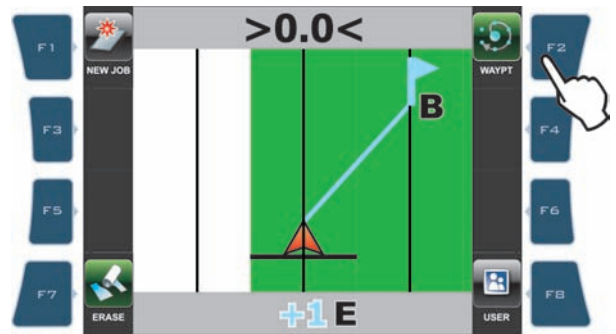


Fig. 284

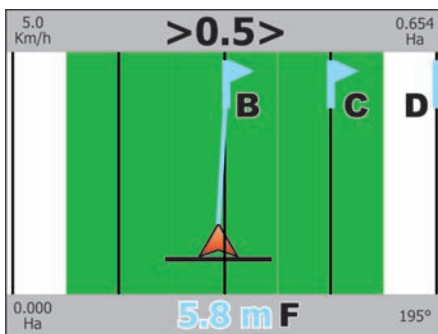


Fig. 285

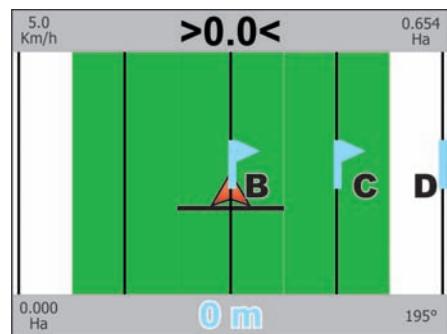


Fig. 286

F7  **13.3.3 F7 Erase** Delete completed job data.

- 1 Press **F7** to delete data. Erase job's information? (Fig. 287).
- 2 Press **OK**.

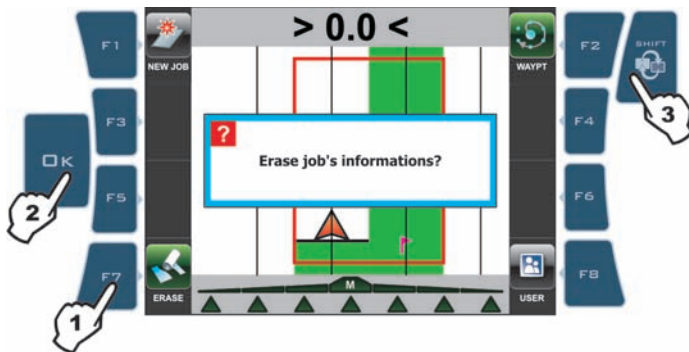


Fig. 287

REFERENCES ABOUT GUIDANCE PAGE

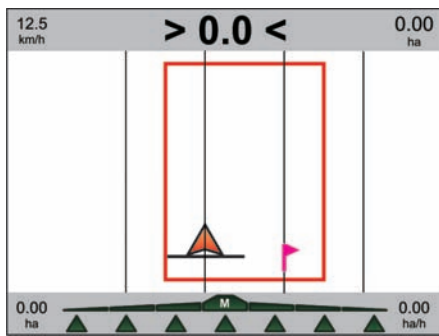


Fig. 288

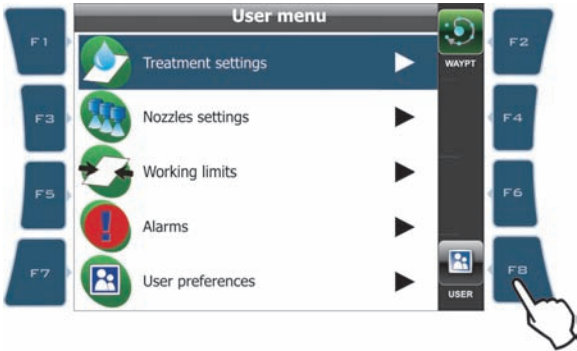
The sprayed areas are erased and the job data reset.
Inside the memory there remain (if any):

- the reference tracks (par. 13.2.2 - **F2** Mark AB);
- the job breaking point (par. 13.1.3 - **F2** Pause);
- the points of interest "P.O.I." (par. 13.1.6 - **F5** P.O.I.);
- the "Waypoints" (par. 13.3.2 - **F2** Waypt);
- the perimeter drawn during the procedure for calculating the area (par. 13.1.8 - **F7** Area).



13.3.4
FB User

Access to user menu (Fig. 289).




Press **FB** to display the **User menu**.
Refer to chapt. 11 to correctly program all menu items.

Fig. 289

14 MAINTENANCE / DIAGNOSTICS / REPAIRS

14.1 Alarm display

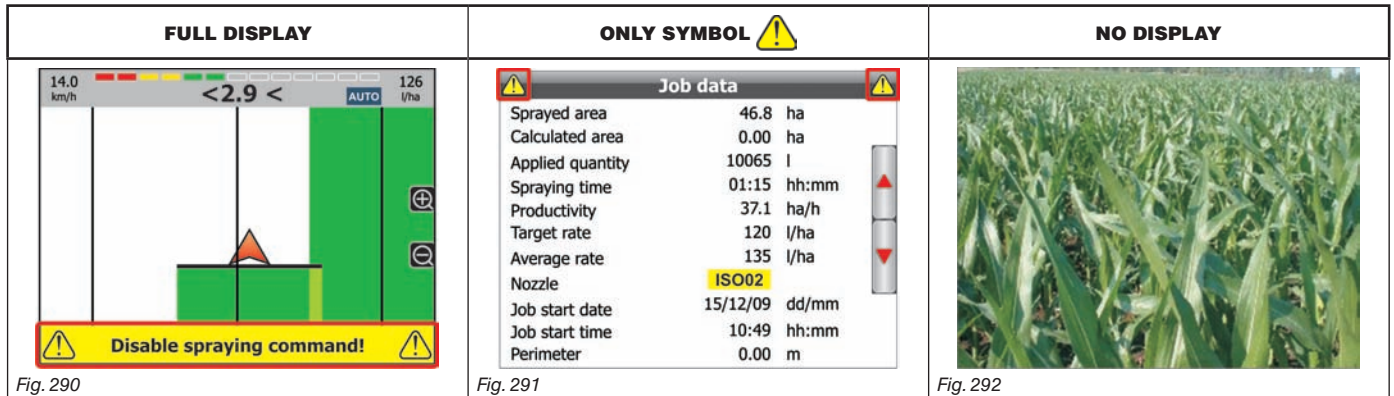When one alarm is triggered, Bravo 400 displays the error in the active screen (par. 12.5 - Display). The display changes according to the active screen:



• Error messages full display (Fig. 290)

Bravo 400 displays a yellow bar with the description, as in the example of Fig. 290.

This display appears in all screens (par. 12.5), except those regarding: Full screen camera (Fig. 292), Job data (Fig. 291) and any programming menu.

• Only symbol (Fig. 291)

Bravo 400 EXCLUSIVELY displays the yellow triangle WITHOUT description as shown in Fig. 291.

This display appear ONLY in **Job data** (Fig. 291) and programming menu screens (sect. 10 and 11).

To consult the error message press **SHIFT** several times until selecting a full display screen.

• No display (Fig. 292)

This case applies ONLY to the Camera / Full screen page (Fig. 292).

During the alarm an acoustic intermittent signal will be emitted. Press **ESC** to temporarily disable the acoustic signal (1 minute).

To consult the error message press **SHIFT** several times until selecting a full display screen.

14.2 Pump failure alarm

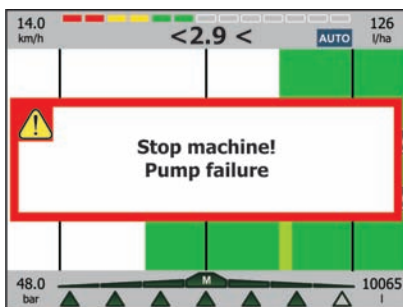


Fig. 293

The message **Stop machine! Pump failure** concerns a particularly serious fault in the system. For this reason it is always shown in the centre of the display (Fig. 293). Should you need to continue the job press **ESC** to close the error windows. The alarm will remain active with the display modes explained under par. 14.1. Stop the machine and check the pump as soon as possible.

14.3 Error messages

DISPLAYED MESSAGE	DURATION	CAUSE	REMEDY	JOB MODE
Disable spraying command!	continue	Main switch ON upon computer switching on	• Move main switch downwards (position OFF)	--
Drive! Machine stopped	continue	Main switch ON with machine stopped	• Start the machine • Move main switch downwards (position OFF)	MAIN ON + AUTO
Unable to load last job!	continue	File regarding last job is damaged	DATA FROM LAST JOB CAN NOT BE RECOVERED	--
Map loading failed! Select another map?	continue	Format of map to be loaded is not valid (Par. 12.8) or the file is damaged	Press OK to continue the procedure and select another map.	--
			• Press ESC to cancel procedure.	--
Low memory available! delete jobs to free memory	continue	Available memory is not sufficient to save or start a new job.	• Access the procedure to delete the jobs from the internal memory (par. 11.7.1).	--
Connection to RCU not detected!	continue	Communication problems detected between monitor and control unit (RCU)	• Check the connection cable (and connectors) status between monitor and control unit (par.6.2)	--
		Damaged cables	• Replace cables	--
GPS receiver not connected!	continue	Wrong connection of cable for receiver to Bravo 400	• Check connection with receiver (par. 6.2 - 6.7).	--
		Connection cable to receiver is damaged.	• Replace cable.	--
		Receiver is damaged.	• Replace receiver.	--
Insufficient GPS signal quality! Continue job?	continue	Position and number of satellites do not allow for suitably accurate guidance	• Press OK to continue job. Bravo 400 will output inaccurate data.	--
			• Press ESC and wait for signal quality to improve.	--
GPS receiver invalid data!	continue	Connecting to satellites.	• Wait for connection to be established.	--
DGPS correction not available! Continue job?	continue	DGPS signal not present within work area.	• Press OK to continue job. Bravo 400 could generate a displaying error in the guidance screen (par. 10.3.4): carry out tracks alignment using "Align" function (par. 13.1.7).	--
		DGPS connection in progress.	• Press ESC and wait for connection to be established: the display shows DGPS correction not available! Please wait... until connection is established.	--
Stop machine! Pump failure	continue	Pump oil level too low or mixed with water	• Stop the machine and check the pump status	--
Activate pump! Missing flowrate	continue	Main switch ON with machine stopped but zero rate	• Start the pump and move the machine	MAIN ON + AUTO
Minimum tank level reached!	5 sec.	The tank level is lower than the set reserve value	• Fill-in the tank (par. 13.1.9)	MAIN ON
		The minimum value is not set correctly	• Check the set reserve value (par.10.6.2)	
Automatic regulation blocked!	5 sec.	The pressure does not reach the set limit	• Increase the machine speed	MAIN ON + AUTO
		The limit has not been set correctly	• Check the set limit (par. 11.4.2)	
Decelerate! Pressure too high	continue	The pressure exceeds the maximum level allowed for the nozzle in use	• Decrease the machine speed • Regulate the operating pressure so as to respect the previously set limits for nozzles in use • Check setting of minimum pressure for the nozzle in use (par. 11.5.4)	MAIN ON
Accelerate! Insufficient pressure	continue	The pressure does not reach the minimum value for the nozzle in use	• Increase the machine speed • Regulate the operating pressure so as to respect the previously set limits for nozzles in use • Check setting of minimum pressure for the nozzle in use (par. 11.5.4)	MAIN ON
Flowmeter out of range!	5 sec.	Rate out of the limits allowed by flowmeter	• Adapt job conditions to flowmeter limits (speed, pressure, etc...) • Check that the flowmeter constant value has been set correctly (par. 10.4.3)	MAIN ON

DISPLAYED MESSAGE	DURATION	CAUSE	REMEDY	JOB MODE
Decelerate! Insufficient flowrate	continue	The rate does not reach the value required for output	<ul style="list-style-type: none"> Decrease the machine speed Check that the flowmeter constant value has been set correctly (par. 10.4.3) 	MAIN ON + AUTO
Accelerate! Too High flowrate	continue	The rate exceeds the value required for output	<ul style="list-style-type: none"> Increase the machine speed Check for correct setup of menu Machine settings (boom width, flowmeter, etc... - sect. 10) 	MAIN ON + AUTO
Reduce rotation speed!	continue	RPM exceeds the maximum allowed value	<ul style="list-style-type: none"> Decrease the rotation speed of the moving part Check the constant set for the rev counter (par. 10.8.2) 	--
Increase rotation speed!	continue	RPM does not reach the minimum value	<ul style="list-style-type: none"> Increase the rotation speed of the moving part Check the constant set for the rev counter (par. 10.8.2) 	MAIN ON
Check nozzles wear status!	continue	Difference between detected and calculated rate (according to selected nozzle data) higher than set limit	<ul style="list-style-type: none"> Check that set nozzle coincides with that installed on the boom (par. 11.2.3) Replace nozzles 	MAIN ON + AUTO
Switch box connection not detected!	continue	Communication problems detected between monitor and switches	<ul style="list-style-type: none"> Check state of connection cable (and connectors) between monitor and switches panel 	--
		Damaged cables	<ul style="list-style-type: none"> Replace cables 	
Stop machine before enter menu	continue	Moving machine.	<ul style="list-style-type: none"> Stop the machine. Machine MUST be stopped to access the Machine settings menu. 	--
Disable RPM meter!	continue	Attempt to enable the Pump Protector sensor with rev counter sensor already activated	<ul style="list-style-type: none"> Disable RPM sensor (par. 10.8) Rev counter and Pump Protector sensors use the same input: it is NOT possible to enable them at the same time 	--
Disable pump protector!	continue	Attempt to enable the rev counter sensor with Pump Protector sensor already activated	<ul style="list-style-type: none"> Disable Pump Protector sensor (par. 10.9) Rev counter and Pump Protector sensors use the same input: it is NOT possible to enable them at the same time 	--
Enable main valve!	continue	Attempt to set the "P" operating mode with main valve set to None	<ul style="list-style-type: none"> Set the type of main valve in the control unit (options 2 Ways / 3 Ways, par. 10.2.4) It is NOT possible to program "P" operating mode with main valve set to None. 	--
Enable M mode!	continue	Attempt to set main valve to None with "P" operating mode active	<ul style="list-style-type: none"> Set "M" operating mode (par. 10.2.2) It is NOT possible to set the main valve to None when "P" operating mode is active. 	--

14.3 Troubleshooting

FAULT	CAUSE	REMEDY
The display does not switch on	No power supply	• Check power supply connection.
	Computer is OFF	• Press the ON button
Valve controls take no effect	Valves not connected	• Connect the connectors
One valve does not open	No power supply to valve	• Check valve electric connection and operation
Speed reading is erratic	Job start procedure was initiated at a point distant from field to be sprayed.	• Repeat the job start procedure (par. 12.9) nearby the field.
Output volume readout inaccurate	Wrong setup	• Check boom width setting (par. 10.1.2) • Check flowmeter constant setting (par. 10.4.3) • Check section valve type setting (par. 10.2.1)
Distance travelled count displayed does not match actual distance covered	Wrong setup	• Check boom width setting(par. 10.1.2) • Check connections to speed sensor
Dispensed fluid count displayed does not match litres/gpm actually dispensed	Wrong setup	• Check flowmeter constant setting (par. 10.4.3) • Check section valve type setting (par. 10.2.1)
	Use of three-way section valves without setting calibrated backflows	• Perform setting
Unable to reach output volume value set for the automatic operation	Wrong setup	• Check spray rate setup (par. 11.2.2) • Check boom width setting (par. 10.1.2)
	System not adequately sized to provide required rate	• Check maximum pressure valve setting • Make sure control valve is adequate for specific system
	Control valve malfunction	• Check valve operation
Instantaneous pressure readout inaccurate	Wrong setup	• Check full scale setting for pressure sensor
	Pressure sensor not calibrated	• Perform calibration (par. 13.2.7)
	Pressure sensor wrong installation	• Check connections to pressure sensor
Instantaneous pressure is not displayed	Wrong setup	• Check pressure sensor setting (par. 10.5)
	Computer does not receive signals from pressure sensor	• Check connections to pressure sensor
	Pressure sensor wrong installation	• Check connections to pressure sensor
Rpm readout inaccurate	Wrong setup	• Check rpm sensor constant setting (par. 10.8)
Rpm value not displayed	Monitor does not receive signals from rpm sensor	• Check connections to rpm sensor
	Rpm sensor wrong installation	• Check connections to rpm sensor
Pump failure alarm permanently active	Monitor does not receive signals from Pump Protector sensor	• Check connections to Pump Protector sensor

14.4 Cleaning rules

- Clean only with a soft wet cloth.
- DO NOT use aggressive detergents or products.
- DO NOT aim water jets directly at monitor and control unit.

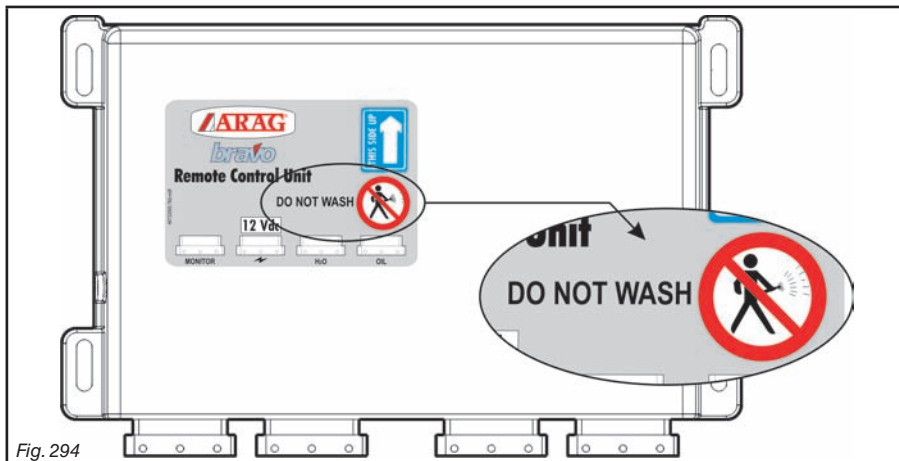


Fig. 294

15 TECHNICAL DATA


DESCRIPTION	Bravo 400
Display	LCD 5.7", 65000 colors, 500 cd/m ²
Rated power supply	12 Vdc (9 ÷ 15 Vdc)
Consumption (valves excluded)	1.1 A
Working temperature	0 °C ÷ 50 °C +32 °F ÷ +122 °F
Storage temperature	-20 °C ÷ 70 °C -4 °F ÷ +158 °F
Digital inputs	for open collector sensors: max 2000 imp*/s
Analog input	4 ÷ 20 mA
Wight (without harness)	monitor: 1400 g (Bravo code 46747511) RCU: 1200 g
SD card reader	Yes
Protection against polarity inversion	•
Protection against short-circuit	•

15.1 Displayed data and relevant units of measurement

• Machine settings						
Data	Description	Min.	Max.	UoM	DEFAULT	Other possible settings
Boom settings	Nozzle number	1	999	nr	40	--
	Output 1 ÷ 5	0.1	99.99	m	4.0 m	--
	Output 6 ÷ 13	0.1	99.99	m	Disabled	--
Valves	Boom sections	--	--	--	3 Ways	2 Ways
	Auto switch-off	--	--	--	No (P mode)	Yes (M mode)
	Pressure regulator	--	--	--	3 Ways	2 Ways
	Main valve	--	--	--	3 Ways	None, 2 Ways
	Selejet	--	--	--	Disabled	Enabled
	Section activation time	0.0	1.0	s	0.0 s	--
GPS receiver	Position	--	--	--	Front	Rear
	Distance	0.0	10.0	m	0.0 m	--
	Antenna height	0.0	9.9	m	0.0 m	--
	DGPS	--	--	--	Disabled	Enabled
Flowmeter	Type	--	--	--	Orion 462xxA4xxxx	Disabled, Orion 4621xA0xxxx, Orion 4621xA1xxxx, Orion 4621xA2xxxx, Orion 4621xA3xxxx, Orion 4622xA5xxxx, Orion 4622xA6xxxx, Wolf 462x2xxx, Wolf 462x3xxx, Wolf 462x4xxx, Wolf 462x5xxx, Wolf 462x7xxx, Other
	Allarme Flowrate minima	0.1	999.9	l/min	10.0 l/min	--
	Maximum flowrate alarm	0.1	999.9	l/min	200.0 l/min	--
	Constant	1	32000	pls*/l	300 pls*/l	--
Pressure sensor	Pressure sensor	--	--	--	Disabled	466113_200, 466113_500, Other
	Maximum pressure	0.1	150.0	bar	20.0 (466113_200) 50.0 (466113_500)	--
Tank	Capacity	1	20000	l	2000 l	--
	Minimum level alarm	0	20000	l	150 l	--
Filling flowmeter	Type	--	--	--	Disabled	Orion 462xxA4xxxx, Orion 4622xA5xxxx, Orion 4622xA6xxxx, Wolf 462x4xxx, Wolf 462x5xxx, Wolf 462x7xxx, Other
	Minimum flowrate	0.1	999.9	l/min	10.0 l/min	--
	Maximum flowrate	0.1	999.9	l/min	200.0 l/min	--
	Constant	1	32000	pls*/l	300 pls*/l	--
Rev counter	Rev counter	--	--	--	Disabled	Enabled
	Constant	1	999	pls*/turn	1 pls*/turn	--
	Minimum speed alarm	1	9999	rpm	Disabled	--
	Maximum speed alarm	1	9999	rpm	Disabled	--
Pump Protector	--	--	--	--	Disabled	Enabled
Maximum speed alarm	--	--	--	--	Disabled	Enabled
Options	Language	--	--	--	English	Italian, English, Spanish, Portuguese, French, German, Czech, Polish, Russian, Hungarian
	Timezone	+12	-12	h	0 h	--

* pls= impulse

• User menu

Data	Description	Min.	Max.	UoM	DEFAULT	Other possible settings	
Treatment settings	Treatment 1 Status	--	--	--	Enabled	Disabled	
	Treatment 1 Target rate	1	9999	l/ha	60 l/ha	--	
		Nozzle	--	--	--	ISO01	Nozzle:
	Treatment 2 Status	--	--	--	Enabled	Disabled	ISO01, ISO015, ISO02, ISO025, ISO03, ISO04
	Treatment 2 Target rate	1	9999	l/ha	90 l/ha	--	ISO05, ISO06, ISO08, ISO10, ISO15, ISO20
		Nozzle	--	--	--	ISO015	A, B, C, D, E, F
	Treatment 3 Status	--	--	--	Enabled	Disabled	
	Treatment 3 Target rate	1	9999	l/ha	120 l/ha	--	
		Nozzle	--	--	--	ISO02	
	Treatment 4	--	--	--	Disabled	Enabled	
	Treatment 5	--	--	--	Disabled	Enabled	
	Treatment 6	--	--	--	Disabled	Enabled	
	Treatment 7	--	--	--	Disabled	Enabled	
	Treatment 8	--	--	--	Disabled	Enabled	
	Treatment 9	--	--	--	Disabled	Enabled	
	Treatment 10	--	--	--	Disabled	Enabled	
	Treatment 11	--	--	--	Disabled	Enabled	
	Treatment 12	--	--	--	Disabled	Enabled	To perform any setting it is necessary to enable the spraying
	Treatment 13	--	--	--	Disabled	Enabled	
	Treatment 14	--	--	--	Disabled	Enabled	
Treatment 15	--	--	--	Disabled	Enabled		
Treatment 16	--	--	--	Disabled	Enabled		
Treatment 17	--	--	--	Disabled	Enabled		
Treatment 18	--	--	--	Disabled	Enabled		
Treatment 19	--	--	--	Disabled	Enabled		
Treatment 20	--	--	--	Disabled	Enabled		
ONLY VERSION seleJET Treatment settings	Treatment 1 Status	--	--	--	Enabled	Disabled	
	Treatment 1 Target rate	1	9999	l/ha	60 l/ha	--	
		Nozzle A	--	--	--	ISO01	Nozzle (A or B):
		Nozzle B	--	--	--	ISO015	
	Treatment 2 Status	--	--	--	Enabled	Disabled	ISO01, ISO015, ISO02, ISO025, ISO03, ISO04
	Treatment 2 Target rate	1	9999	l/ha	90 l/ha	--	ISO05, ISO06, ISO08, ISO10, ISO15, ISO20
		Nozzle A	--	--	--	ISO02	A, B, C, D, E, F
		Nozzle B	--	--	--	ISO025	
	Treatment 3 Status	--	--	--	Enabled	Disabled	
	Treatment 3 Target rate	1	9999	l/ha	120 l/ha	--	
		Nozzle A	--	--	--	ISO03	
		Nozzle B	--	--	--	ISO04	
	Treatment 4	--	--	--	Disabled	Enabled	
	Treatment 5	--	--	--	Disabled	Enabled	
	Treatment 6	--	--	--	Disabled	Enabled	
	Treatment 7	--	--	--	Disabled	Enabled	
	Treatment 8	--	--	--	Disabled	Enabled	
	Treatment 9	--	--	--	Disabled	Enabled	
	Treatment 10	--	--	--	Disabled	Enabled	
	Treatment 11	--	--	--	Disabled	Enabled	
Treatment 12	--	--	--	Disabled	Enabled	To perform any setting it is necessary to enable the spraying	
Treatment 13	--	--	--	Disabled	Enabled		
Treatment 14	--	--	--	Disabled	Enabled		
Treatment 15	--	--	--	Disabled	Enabled		
Treatment 16	--	--	--	Disabled	Enabled		
Treatment 17	--	--	--	Disabled	Enabled		
Treatment 18	--	--	--	Disabled	Enabled		
Treatment 19	--	--	--	Disabled	Enabled		
Treatment 20	--	--	--	Disabled	Enabled		

• User menu (CONTINUED)

Data	Description	Min.	Max.	UoM	DEFAULT	Other possible settings
ISO01	Flowrate	--	--	l/min	0.4 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO015	Flowrate	--	--	l/min	0.6 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO02	Flowrate	--	--	l/min	0.8 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO025	Flowrate	--	--	l/min	1.0 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO03	Flowrate	--	--	l/min	1.2 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO04	Flowrate	--	--	l/min	1.6 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO05	Flowrate	--	--	l/min	2.0 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO06	Flowrate	--	--	l/min	2.4 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO08	Flowrate	--	--	l/min	3.2 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO10	Flowrate	--	--	l/min	4.0 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO15	Flowrate	--	--	l/min	6.0 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
ISO20	Flowrate	--	--	l/min	8.0 l/min	--
	Pressure	--	--	bar	3.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
A	Flowrate	0.1	99.9	l/min	1.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
B	Flowrate	0.1	99.9	l/min	2.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
C	Flowrate	0.1	99.9	l/min	3.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
D	Flowrate	0.1	99.9	l/min	4.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
E	Flowrate	0.1	99.9	l/min	5.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--
F	Flowrate	0.1	99.9	l/min	6.0 l/min	--
	Pressure	0.1	99.9	bar	5.0 bar	--
	Minimum pressure	0.1	99.9	bar	Disabled	--
	Maximum pressure	0.1	99.9	bar	Disabled	--

Nozzles settings

• User menu (CONTINUED)

Data	Description	Min.	Max.	UoM	DEFAULT	Other possible settings	
Working limits	Minimum spraying speed	1.0	99.0	km/h	Disabled	--	
	Minimum regulation pressure	0.1	99.9	bar	Disabled	--	
	Sections overlapping limit	1	99	%	99%	--	
	Boundary sct. management	--	--	--	Disabled	Max. coverage, Min. overstep	
Alarms	Intentional overlap	-3.00	+3.00	m	0.00	--	
	Steer radius	0.1	19.9	m	Disabled	--	
	Nozzle wear check	1	50	%	Disabled	--	
	HDOP level	1.0	10.0	--	4.0	--	
User preferences	Nozzle pressure alarm	--	--	--	Disabled	Enabled	
	'Guidance' screen	L1 data	--	--	--	Speed	Application rate, Speed, Pressure, Flowrate, Applied area, Calculated area, Applied quantity, Tank level, Tank range, Spraying time, Productivity, Perimeter, Date, Time, Rotation speed, Direction, GPS signal quality, Track number, Target rate, Available memory.
		L2 data	--	--	--	Pressure	
		R1 data	--	--	--	Application rate	
		R2 data	--	--	--	Tank level	
	'Spraying' screen	L1 data	--	--	--	Flowrate	Flowrate, Applied area, Calculated area, Applied quantity, Spraying time, Productivity, Perimeter, Date, Time, Rotation speed, Direction, Track number.
		L2 data	--	--	--	Applied quantity	
		R1 data	--	--	--	Applied area	
		R2 data	--	--	--	Productivity	
	User preferences	Tank data	--	--	--	Tank level	Range, Both
		Led bar	--	--	--	Disabled	Enabled
		Acoustic alarm	--	--	--	Enabled	Disabled
		Keypad tone	--	--	--	Enabled	Enabled
Camera 1		--	--	--	Enabled	Full screen, Spraying data	
Camera 2		--	--	--	Enabled	Full screen, Spraying data	
User key		--	--	--	Store job pause point	Alignment, Store job pause point, Pause point return, A-B reference marking, View GPS data, Toggle 2D-3D view, Tank filling, Pressure sensor zero calibration, Treatment selection, User menu access, Toggle sections managem. mode.	
Speed	Source	--	--	--	GPS	Maximum speed alarm	
	Wheel constant	0.01	150.00	cm/pls*	50.00 cm/pls*	--	
	Distance	20	100	m	100 m	--	

* pls= impulse

• Job data

Data	Min.	Max.	UoM
Applied area	0.00	99999	ha
Calculated area	0.00	99999	ha
Applied quantity	0	99999	l
Spraying time	00:00	99:59	hh:mm
Productivity	0.00	99999	ha/h
Target rate	0	99999	l/ha
Average rate	0	99999	l/ha
Nozzle	ISO01	<input type="text" value="F"/>	--
Nozzle A	ISO01	<input type="text" value="F"/>	--
Nozzle B	ISO01	<input type="text" value="F"/>	--
Job start date	01/01/00	31/12/99	dd/mm
Job start time	00:00	23:59	hh:mm
Perimeter	0.00	99999	m

END OF PAR. 15.1 DISPLAYED DATA AND RELEVANT UNITS OF MEASUREMENT

16 END-OF-LIFE DISPOSAL

Dispose of the system in compliance with the established legislation in the country of use.

17 GUARANTEE TERMS

1. ARAG s.r.l. guarantees this apparatus for a period of 360 day (1 year) from the date of sale to the client user (date of the goods delivery note). The components of the apparatus, that in the unappealable opinion of ARAG are faulty due to an original defect in the material or production process, will be repaired or replaced free of charge at the nearest Assistance Centre operating at the moment the request for intervention is made. The following costs are excluded:
 - disassembly and reassembly of the apparatus from the original system;
 - transport of the apparatus to the Assistance Centre.
2. The following are not covered by the guarantee:
 - damage caused by transport (scratches, dents and similar);
 - damage due to incorrect installation or to faults originating from insufficient or inadequate characteristics of the electrical system, or to alterations resulting from environmental, climatic or other conditions;
 - damage due to the use of unsuitable chemical products, for spraying, watering, weedkilling or any other crop treatment, that may damage the apparatus;
 - malfunctioning caused by negligence, mishandling, lack of know how, repairs or modifications carried out by unauthorised personnel;
 - incorrect installation and regulation;
 - damage or malfunction caused by the lack of ordinary maintenance, such as cleaning of filters, nozzles, etc.;
 - anything that can be considered to be normal wear and tear;
3. Repairing the apparatus will be carried out within time limits compatible with the organisational needs of the Assistance Centre.

No guarantee conditions will be recognised for those units or components that have not been previously washed and cleaned to remove residue of the products used;
4. Repairs carried out under guarantee are guaranteed for one year (360 days) from the replacement or repair date.
5. ARAG will not recognise any further expressed or intended guarantees, apart from those listed here.

No representative or retailer is authorised to take on any other responsibility relative to ARAG products.

The period of the guarantees recognised by law, including the commercial guarantees and allowances for special purposes are limited, in length of time, to the validities given here.

In no case will ARAG recognise loss of profits, either direct, indirect, special or subsequent to any damage.
6. The parts replaced under guarantee remain the property of ARAG.
7. All safety information present in the sales documents regarding limits in use, performance and product characteristics must be transferred to the end user as a responsibility of the purchaser.
8. Any controversy must be presented to the Reggio Emilia Law Court.

Conformity Declaration **CE**



ARAG s.r.l.
Via Palladio, 5/A
42048 Rubiera (RE) - Italy
P.IVA 01801480359

Dichiara

che il prodotto
descrizione: **Computer**
modello: **Bravo 400**
serie: **46742xxx e 46747xxx**

risponde ai requisiti di conformità contemplati nelle seguenti Direttive Europee:
2004/108/CE
(Compatibilità Elettromagnetica)

Riferimenti alle Norme Applicate:
EN ISO 14982
(Macchine agricole e forestali - Compatibilità elettromagnetica
Metodi di prova e criteri di accettazione)

Rubiera, 13 ottobre 2010

Giovanni Montorsi

A handwritten signature in black ink, appearing to read "G. Montorsi", written over a horizontal line.

(Presidente)

Only use genuine ARAG accessories or spare parts to make sure manufacturer guaranteed safety conditions are maintained in time. Always refer to ARAG spare parts catalogue.

D20195_GB-m00 02/2011



42048 RUBIERA (Reggio Emilia) - ITALY
Via Palladio, 5/A

Tel. +39 0522 622011
Fax +39 0522 628944

<http://www.aragnet.com>
info@aragnet.com